


B614

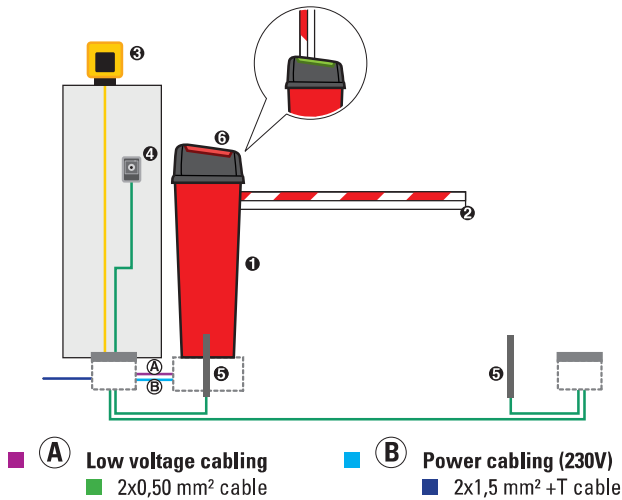


ATTENTION: The configuration can be modified according to the specific "risk analysis" of each installation (Ref. European Standards UNI-EN 12445 and 12453). The indicated cost does not include the costs for installation and the preparation of masonry, electrical and fabrication work.

EXAMPLE OF A TYPICAL INSTALLATION

Ref	Q.ty	Description	Code
1	1	B614 Barrier	104614
1	1	B614 Foundation plate	490183
1	1	Balancing spring	721209
1	1	XF 433 MHz receiver	787831
2	1	Beam bracket for rectangular beam	428342
2	1	Rectangular standard beam - Length 3,815 mm	428090
3	1	XLED flashing light	410029
4	1	Key operated button XK10B	401304
4	1	Lock with key	71275101
5	1	Pair of photocells XP 30B	785106
5	2	Adaptors for wall columns	401065
5	2	Low column in aluminium (2 pcs. pack)	401028
5	2	Foundation plate for aluminium column	737630
6	1	Integrated flashing light	410032
	1	2 channels transmitter XT2 433 SLH LR	787007
TOTAL (VAT EXCLUDED)			

615BPR

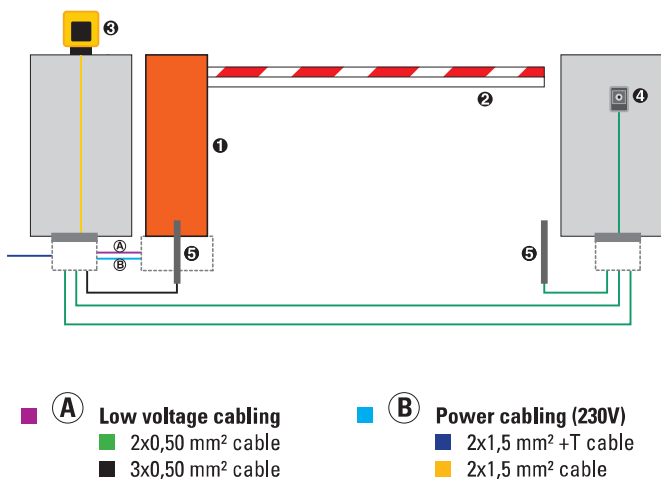

ATTENTION: The configuration does not include the safety devices (e.g.: active or passive safety edges) which must be determined according to the specific "risk analysis" of each installation (Ref.: European Standards UNI-EN 12445 and 12453). The cost indicated does not include the costs of installation and the preparation of masonry, electrical and building works.

EXAMPLE OF A TYPICAL INSTALLATION

Ref	Q.ty	Description	Code
1	1	615BPR Standard	104906
1	1	Foundation plate	490073
1	1	Balancing springs for rectangular beams	721018
1	1	Plug in receiver 1 channel RP 433 SLH	787852
2	1	Beam bracket for rectangular beam	428342
2	1	Rectangular standard beam - Length 4,815 mm	428091
3	1	XLED flashing light	410029
4	1	Key operated button XK10	401302
5	1	Pair of photocells XP 30	785105
4	1	Lock with key	71275101
5	2	Adaptors for wall columns	401065
5	2	Low column in aluminium (2 pcs. pack)	401028
5	2	Foundation plate for aluminium column	737630
	1	2 channels transmitter XT2 433 SLH LR	787007
TOTAL (VAT EXCLUDED)			