



Instruction of Door Closer Installation


B-B

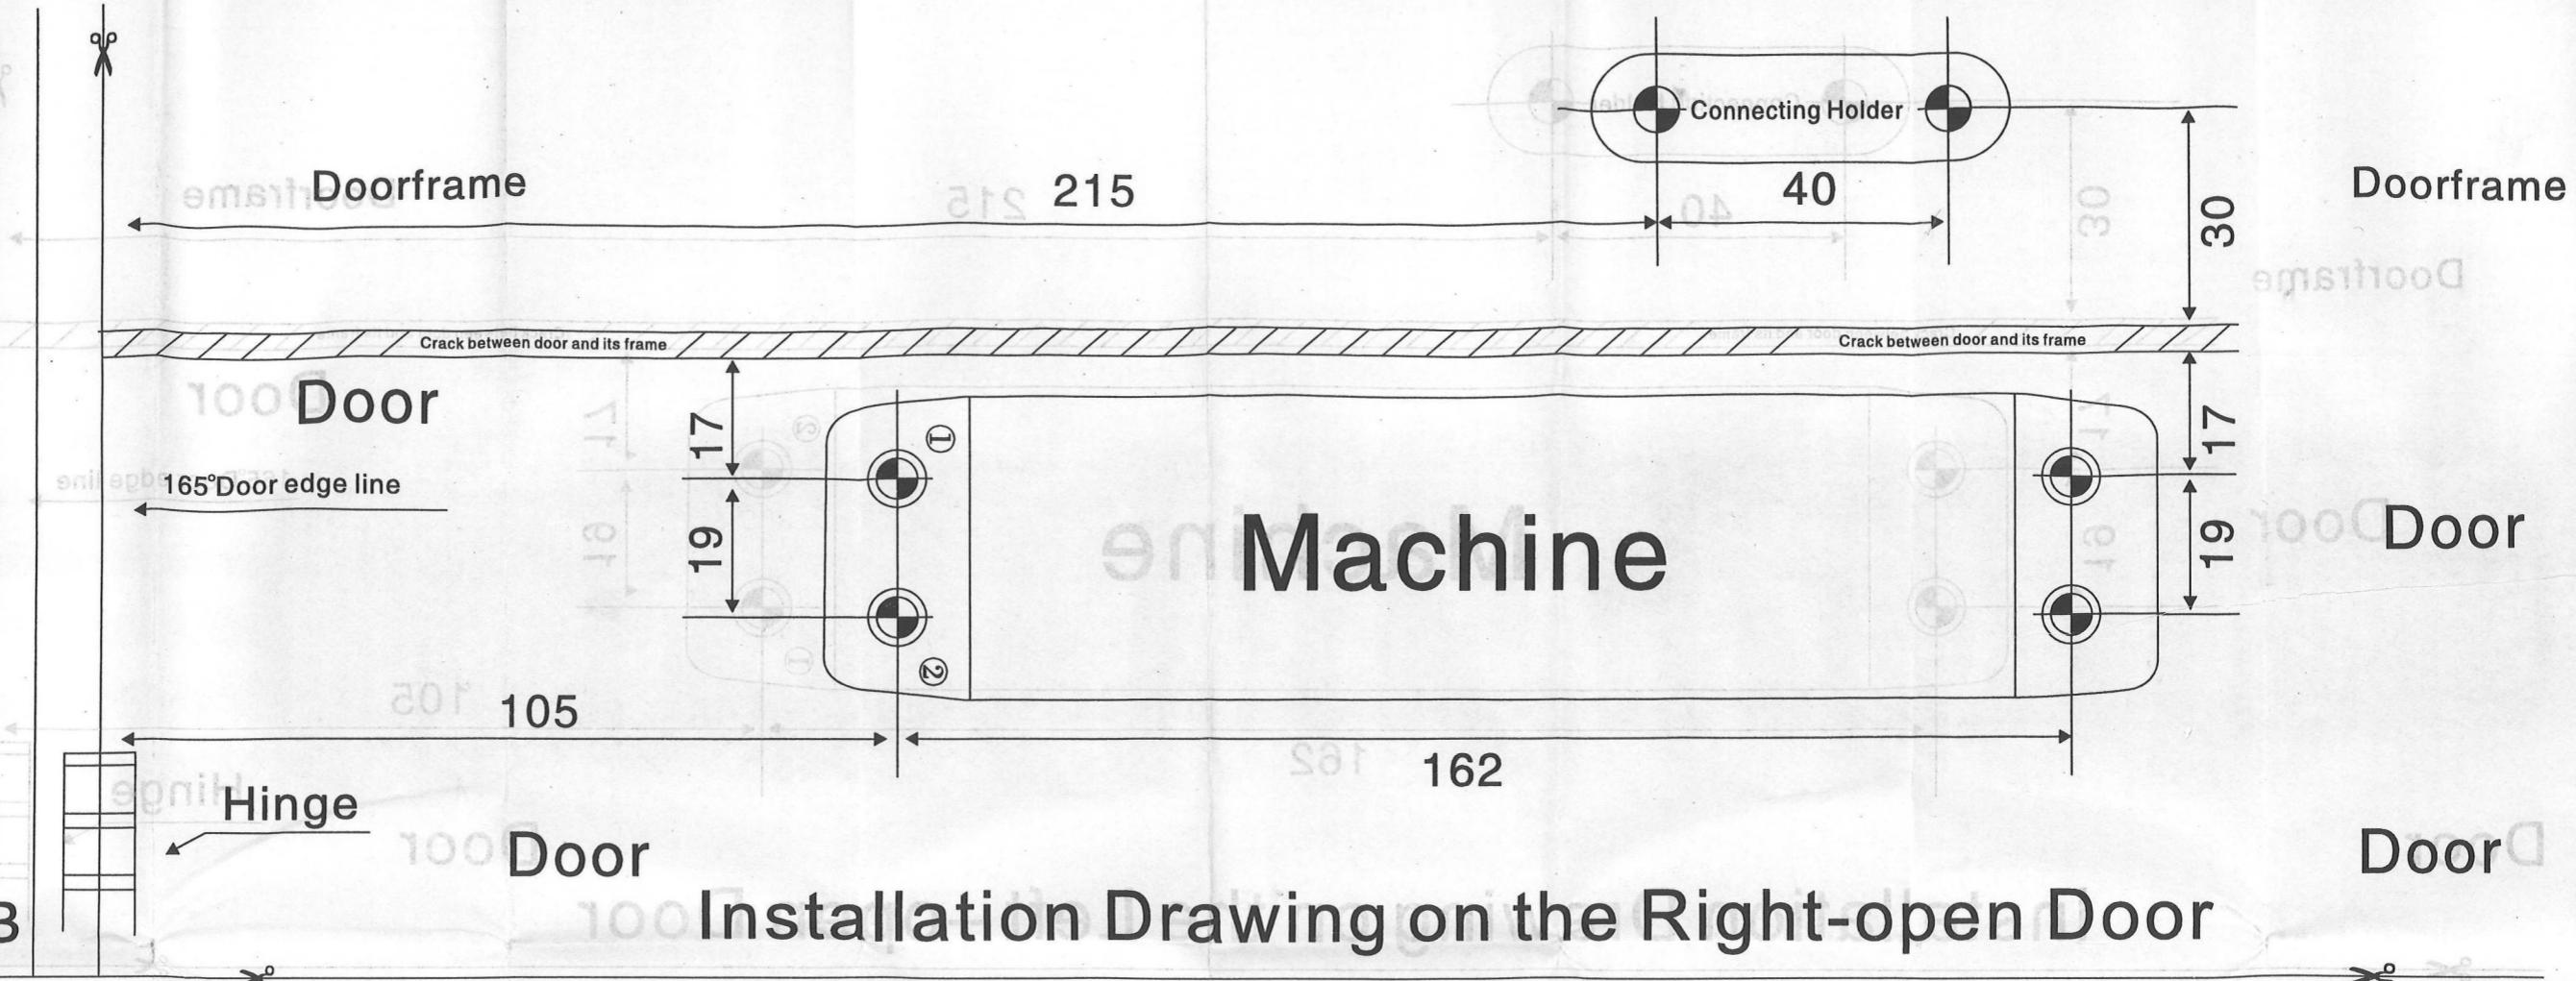

Installation Process

(The above drawing with figures is for installation, please cut down this drawing along the line.)

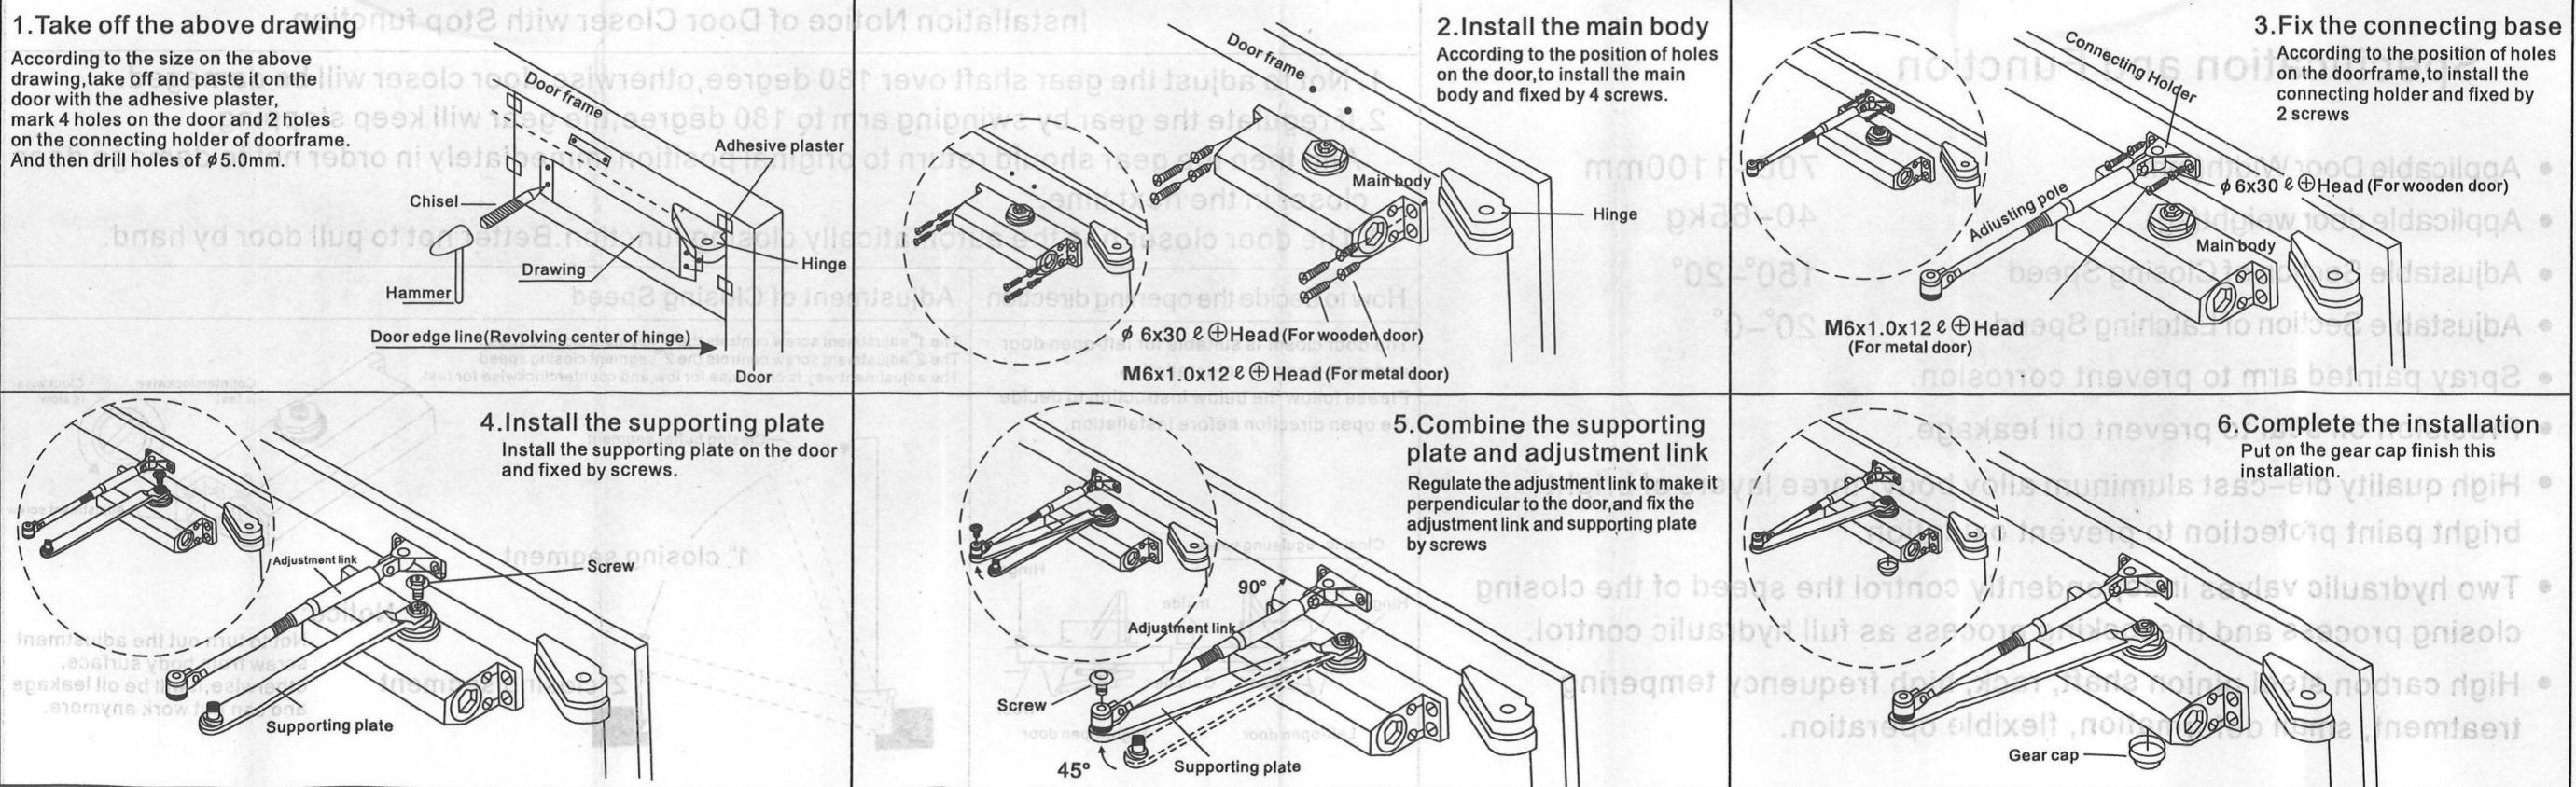

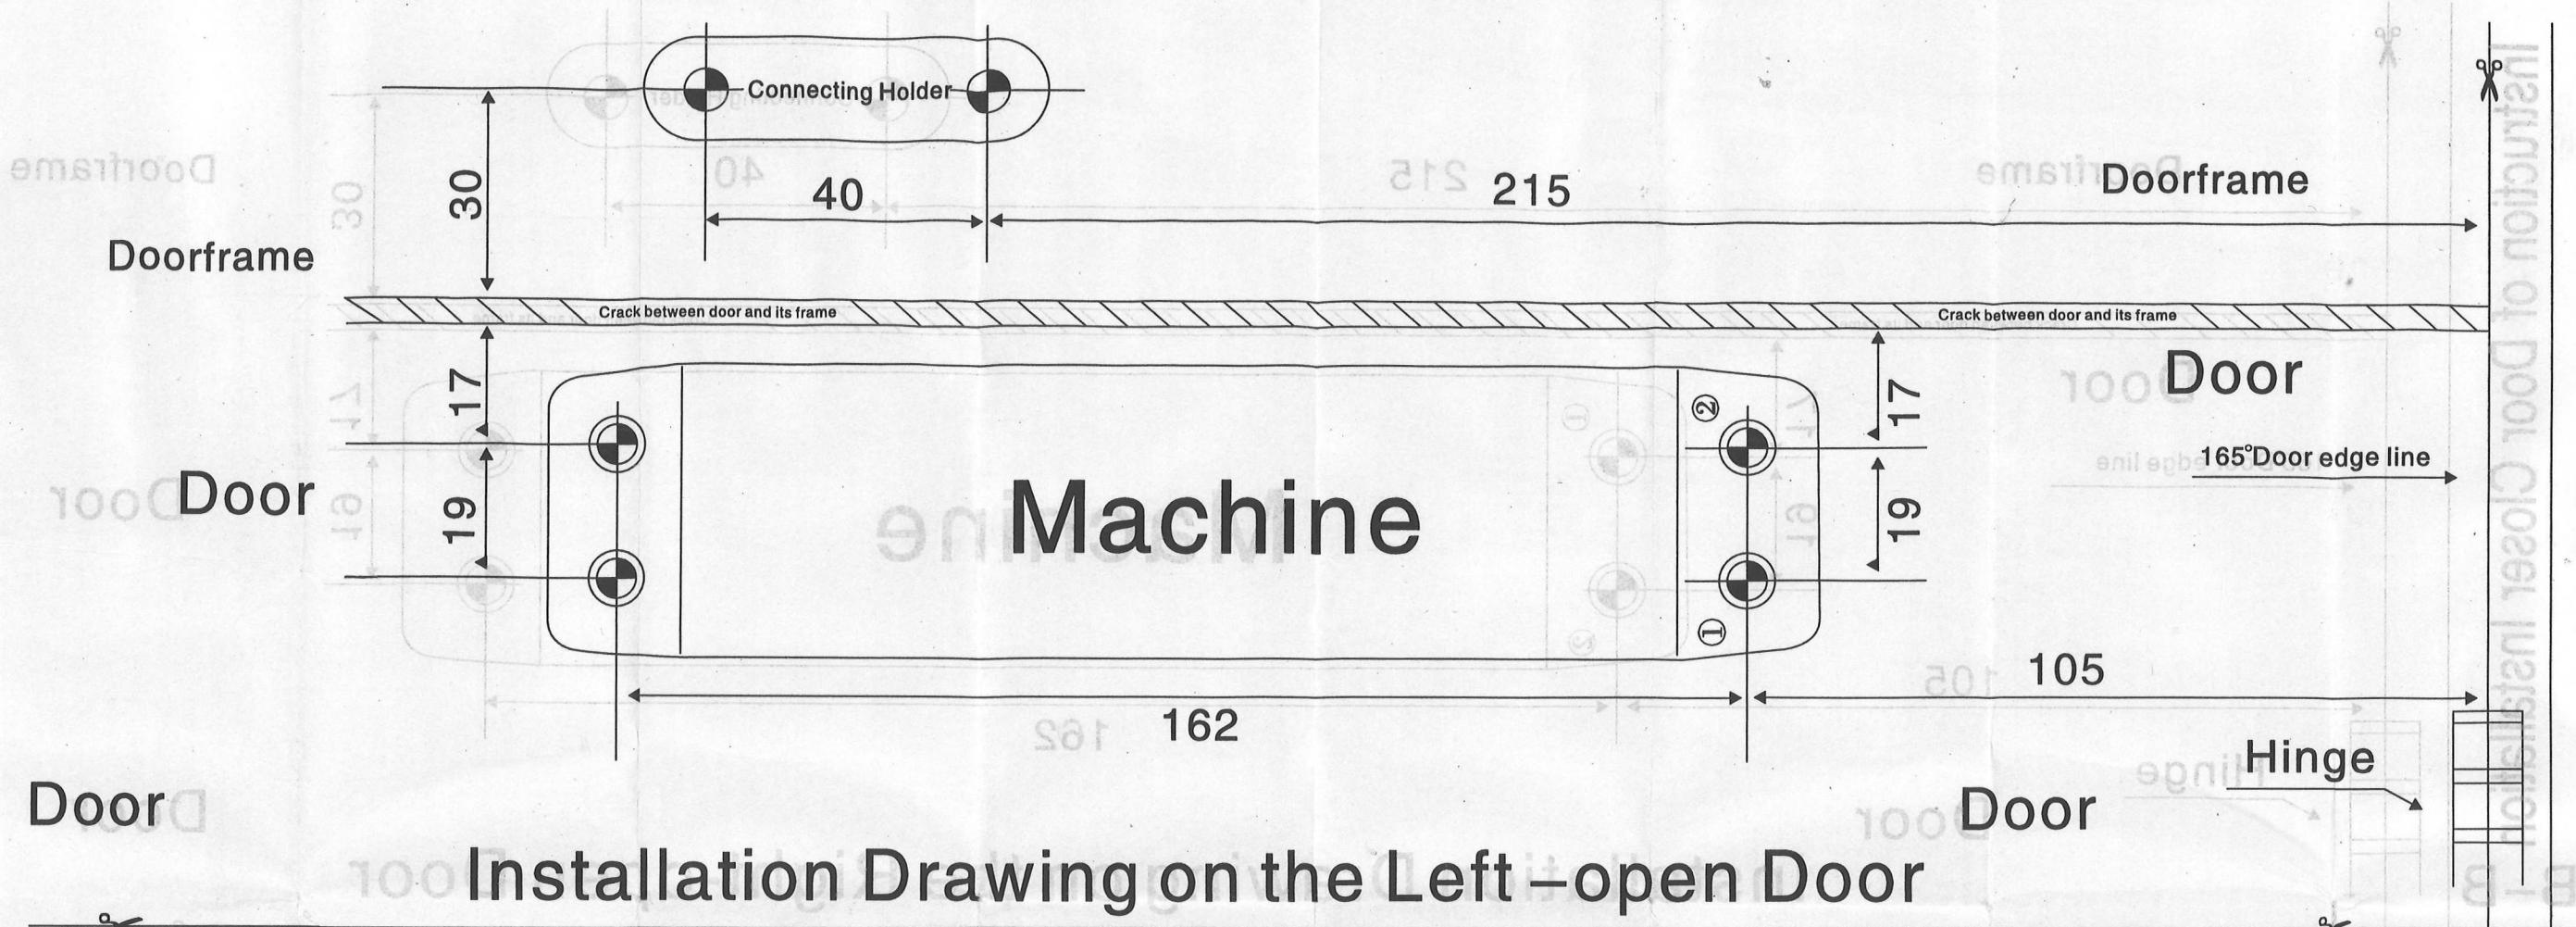

Installation Drawing on the Left-open Door

Specification and Function		Installation Notice of Door Closer with Stop function	
• Applicable Door Width(mm)	700-1100mm	1. Not to adjust the gear shaft over 180 degree, otherwise, door closer will be damaged.	
• Applicable door weight(kg)	40-65kg	2. If regulate the gear by swinging arm to 180 degree, the gear will keep stopping. And then the gear should return to original position immediately in order not to damage door closer in the next time.	
• Adjustable Section of Closing Speed	150°-20°	3. The door closer has the automatically closing function. Better not to pull door by hand.	
• Adjustable Section of Latching Speed	20°-0°		
• Spray painted arm to prevent corrosion.			
• Precision oil seal to prevent oil leakage.			
• High quality die-cast aluminum alloy body, three layers of bright paint protection to prevent oxidation.			
• Two hydraulic valves independently control the speed of the closing closing process and the locking process as full hydraulic control.			
• High carbon steel pinion shaft, rack, high frequency tempering treatment, small deformation, flexible operation.			