

Product Instructions

1. Universal password unlock: 111111

2. Enter programming mode # + 123456 (programming password)

Note: The following operations must enter the programming mode operation

1. Modify the programming password: 1 + new password + enter another

Second new password (6 digits) + * to exit

2. Modify the common password: 2 + new password + enter one more

Second new password (6 digits) + * to exit

Javítás a lap alján

3. Add door card: 3 + swipe the card to be added continuously + * to exit

4. Card number plus card: 3 + enter the 10-digit card serial number

(can be added continuously) + * exit

5. Delete door card: 4 + swipe the card to be deleted continuously + * to exit

6. Card number deletion: 4 + enter the 10-digit card serial number

(can be deleted continuously) + * exit

7. Make management card: 5 + swipe card + * to exit

8. Set unlock delay: 6 + (00-60 seconds) + * to exit

9. Set the maximum volume: 0 + 3 + 0 + * to exit

10. Set a lower volume: 0 + 3 + 1 + * to exit

11. Set card + password unlock method: 0 + 7 + 1 + * to exit

12. Set the common password or card unlock method: 0 + 7 + 0 + * to exit (factory default)

13. Personal password can be modified: 0 + 8 + 1 + * to exit

14. Personal password cannot be modified: 0 + 8 + 0 + * to exit (factory default)

15. Empty data: 0 + 9 + * exit (restore to factory status status, cleared by the user)

Factory reset: Short connect OPEN and GND wire in power-off state Power on, and disconnect after beeping (programming password and setting restoration, user data retention)

Quick card addition: swipe the management card once + swipe continuously to add card + * exit

Quick card deletion: swipe the management card 2 times + continuous swipe to delete card + * exit

Card + password unlocking: swipe a valid card in standby mode and enter personal password

Modify personal password: long press * 3 seconds in standby state + brush with Valid card + original personal password (default 000000) + new password

Javítás: (Régi rossz: 2 + új 6-jegyű kód + új kód ismét + *)


A felhasználói kód módosítása:

- új kód hozzáadás: # programozói kód + 2 + 1 + új kód + új kód (ismét) *

- kód törlése: # programozói kód + 2 + 2 + új kód + új kód (ismét) *

Wiring Diagram

1. When using electric locks, please adjust the unlock delay to the shortest

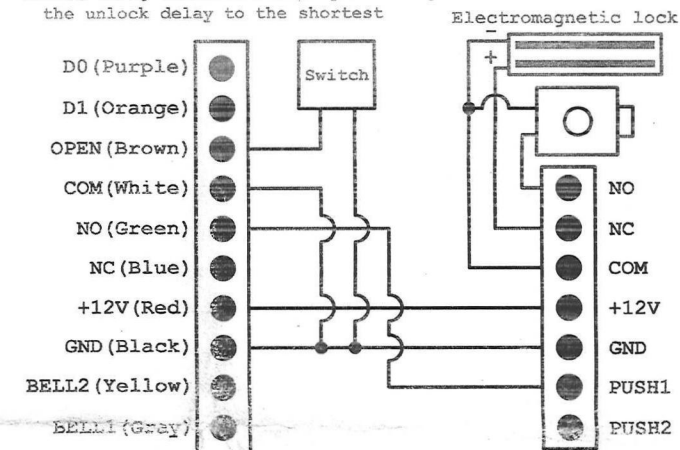

WeChat Mini Program

The "Scan QR Code" function of the WeChat.

