
## **PULNIX** PHOTOELECTRIC BEAM **AUTO DOOR SENSOR**

DA-100E (B) · DA-100E (S) · DA-100E (W) · DA-100E (BL)


#### Instruction Manual

We appreciate your purchase of a PULNiX auto door sensor. This sensor will provide long and dependable service when properly installed. Please read this Instruction Manual carefully for correct and effective use.

#### PARTS DESCRIPTION

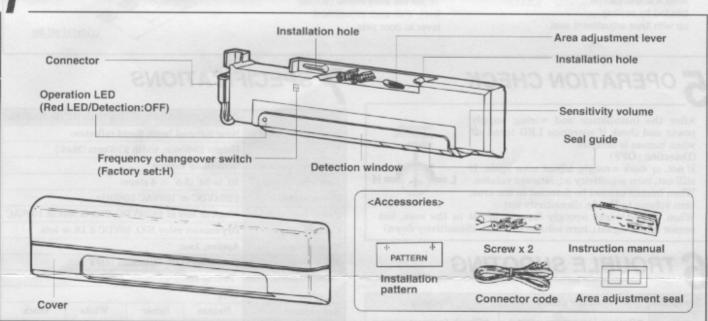

### DO'S AND DON'T'S

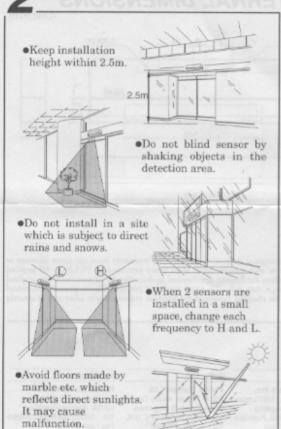


# INSTALLATION AND WIRING


Stick installation pattern on the place to be installed, and open 2 holes ( \$ 3.5mm).



 
3 Fix the body with screws



Put connector into connector housing.

 

2 Detach the cover.

 

Connect sensor and control side of auto-door with connector code.



In case of DC power supply, it is non-polarity.

Finish all the adjustment and operation check. Then attach the cover.

