

How To Use The Factory Tool

Follow These Steps:

- 1) Update the IPC to the latest version
- 2) Run the program "Factory Tool_Decrypt.exe"
- 3) Browse and select the .fac file, for example: "4MP_EyeSight.fac"


Select a profile C:\Users\Tal Hanoch\Desktop\Enabling Analytics\4MP_EyeSight.fac

Browse


- 4) Choose from the list all the cameras **from the same model.**
Please note: setting the wrong camera model with the wrong profile might cause the camera to malfunction.
- 5) Choose from the "Product Type" Drop-down list the correct camera model.

For example: If you chose I1-340IP536 for enabling the analytics, ☒ 00:18:AE:94:4A:26 I1-340IP536 I1-340IP536 4.1.0.0(1...

You should choose I1-340IP536 from the "Product Type" List.

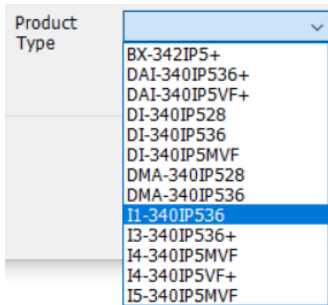

- 6) Click on “Set default configuration”. The camera will reboot automatically. **All settings and configuration will be restored to factory default.**
- 7) After the restart, Analytics will be enabled in the camera configuration menu.

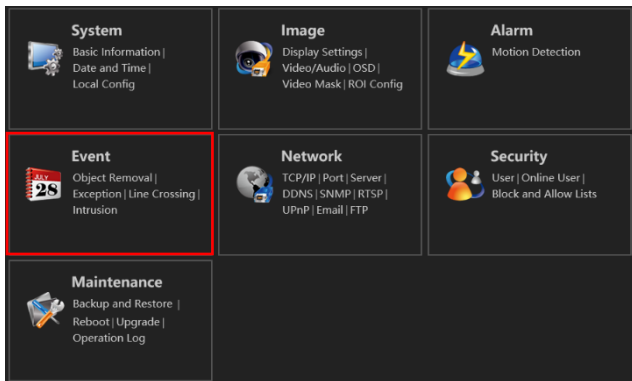

Please feel free to contact our technical team with any question, concern or technical feedback.

Best Regards,
Provision-ISR Technical Department.