


How to set face attendance on NVR


1. Create a DATABASE on your NVR: go to **AI/Event > Database > Add Group**

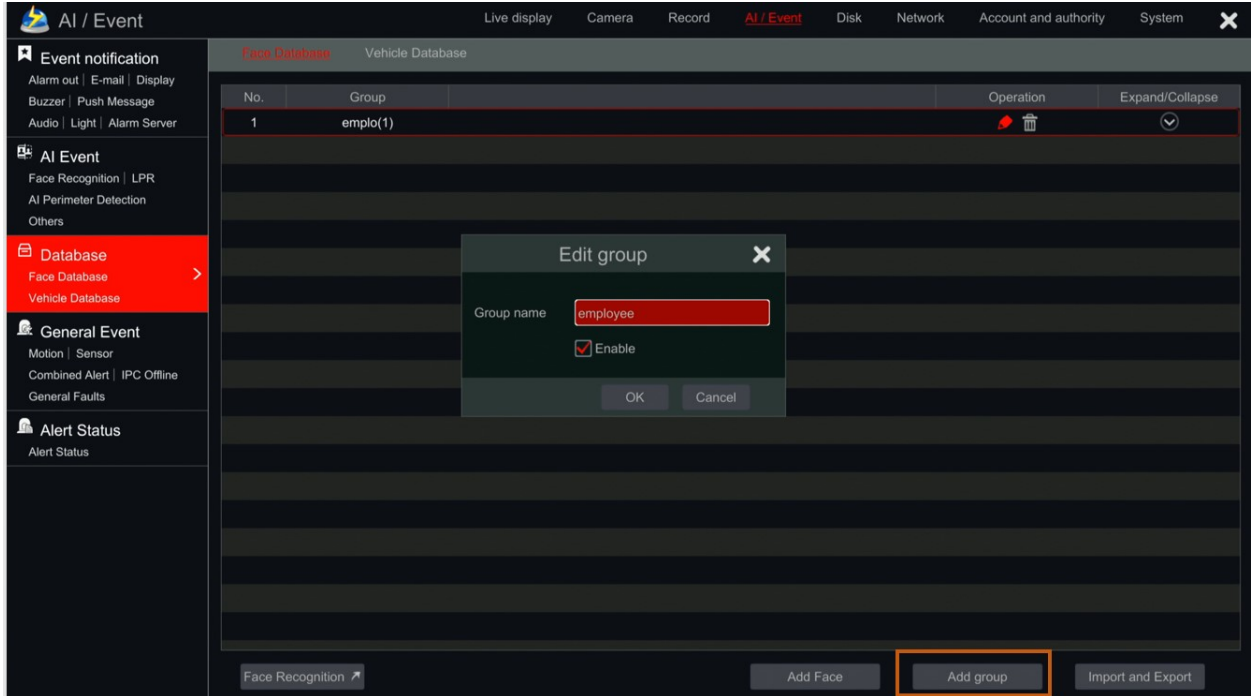


Add faces to this group.

2. Set up face recognition for desired cameras, and link the database you've created to these cameras:

Go to: **AI / Event > Face recognition > Enable face detection:**

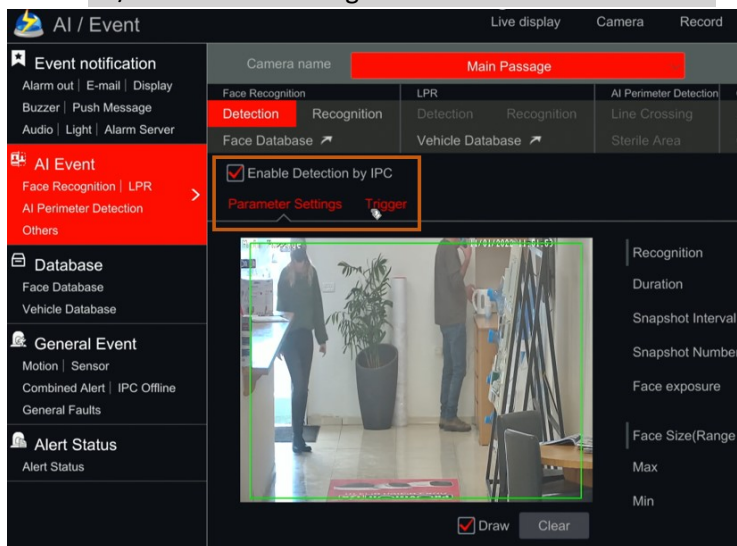

Go to: Recognition:

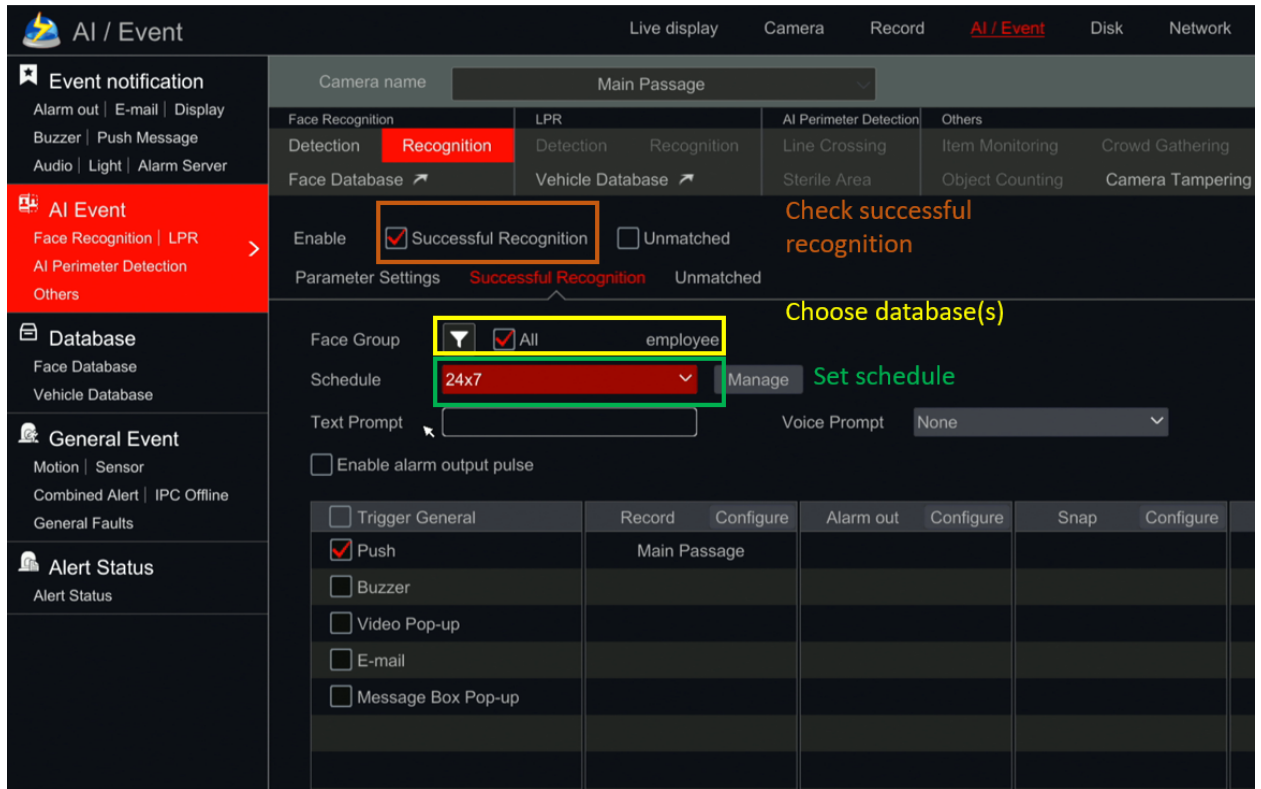

After setting your NVR as described above, your system can now be used as face attendance, since it is comparing faces to it's database, and collects first / last time of face appearance.

3. How to use face attendance:

Please watch the video here:

<https://www.youtube.com/watch?v=C1uZ0BBuFVY&t=473s>