

**PROVISION** **ISR**

*Now you can see!*

EN

ES



PTZ Dome Controller  
(PTC-01)

**MANUAL**

English / Spanish

[www.provision-isr.com](http://www.provision-isr.com)

[www.provision-isr.com](http://www.provision-isr.com)



## Content

EN English Manual \_\_\_\_\_ 1

ES Manual en Español \_\_\_\_\_ 15



<b>WARNING</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
---	---

**Note:** Only professional technicians is allowed to open the front or back cover of this camera.

**Note:**  
In order to avoid electrical shock or fire, please use proper power according to the manual.



<b>ADVERTENCIA</b> PELIGRO DE CHOQUES NO ABRIR	
--	---

**Nota:** Solo técnicos profesionales pueden abrir las cubiertas frontal o posterior de esta cámara.

**Nota:**  
Para prevención de choques electricos o fuego, por favor use la corriente apropiada, acorde con el manual.

## Content

Precautions .....	2
Connecting the RS-485 to the camera .....	3
Remote Control Function List .....	4
Protocol and Baud rate .....	6
To set up protocol and baud rate .....	6
Camera ID – Selecting camera .....	7
Pan/tilt speed .....	7
Presets .....	7
Home Point .....	8
Line Scan .....	8
To delete a preset or a home point or left/right limit .....	9
PATTERN .....	9
Setting up a PATTERN .....	10
Dwell Time .....	11
For setting up the same time to all presets .....	12
For setting up different time to each preset .....	13
Resetting all to factory default .....	14




**Note:** Only professional technicians is allowed to open the front or back cover of this camera.

## Precautions


1. In case of smoke or strange smell originating from the camera, immediately disconnect the power and consult your vendor.
2. If the camera seems to be malfunctioning, disconnect it and consult your vendor.
3. Keep unit away from sharp or flammable objects.
4. Keep unit away from high moisture or water
5. Do not drop the unit or subject it to strong shock or vibration.
6. Do not install this unit close to magnetic fields; the magnetic fields may damage the products performance.
7. Do not install the unit where there is greasy smoke or steam, where the humidity may get too high, or where there is a lot of dust.
8. Do not install close to heat sources (eg. spotlights, stoves, direct sunlight, etc.), as this could damage the product. For the same reason refrain from installing close to the ceiling or in a kitchen or a boiler room, because the high temperature may damage the product.
9. To clean the product from dust or stains use a dry soft cloth then a damp soft cloth then immediately dry with a dry cloth.
10. Do not use benzene, thinner or other chemical products, as the cabinet may be damaged. Before using a chemical cloth, make sure to read all accompanying instructions. Make sure that no plastic or rubber material makes contact with the cabinet for a long period of time, as this may cause peeling of the paint.

## Connecting the RS-485 to the camera

- 1) Connect the 2 cables (+/-) of the camera to the B- and A+ of the RS485 on the PTZ Dome Controller.
- 2) Connect the 12VDC power supplier to the PTZ Dome Controller.

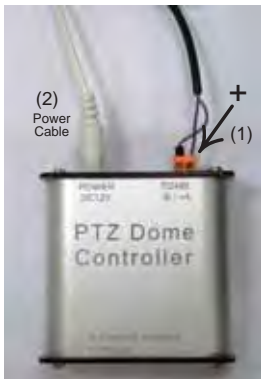

- 3) Connect camera to the electricity with the attached power supplier.
- 4) Connect a BNC (Rj-59) to the camera from the device your using (DVR or any other recording system).

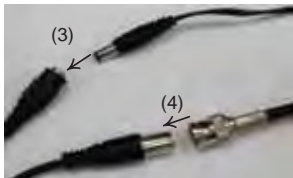

## Remote Control Function List



- Up/Down/Left/Right - Control the pan and tilt of camera.
- Enter – Stop current movement and a confirmation key after a command.
- Keys number 0 – 9 – For inputting desired number when needed.
- C – Clear (backspace) when needed to correct last number input.
- +/- - stats +10 mode or go back to normal mode, in normal mode you can only input number between 0 – 9. In 10+ mode you can input numbers between 0-255.
- ESC – at any time press this to go back to address input mode.
- CAM – Change camera address.
- SHOT – Go to preset button.
- HOME A / B – Shortcut for presets.
- P1 – P8 – Shortcuts for presets.
- PRESET – Set preset mode.



- DELETE – To clear a preset point – press and hold 3 seconds.
- AUTO – start auto cruise mode.
- SPEED – Set speed of camera's movement.
- S1 – S4 – Shortcut for movement speed (S1=8[slow] , S2=40 , S3=51 , S4=63[fast]).
- FOCUS + - focus far.
- FOCUS - - focus near.
- OPEN – open iris.
- CLOSE – close iris.
- ZOOM+ - Zoom In.
- ZOOM - - Zoom Out.
- PATTERN – Start/Stop pattern learn.
- RUN – run pattern.
- DISP – Display software version.
- SETUP – Set protocol and baud rate.
- F1 – F4 – User define keys.

## Protocol and Baud rate

You can check current baud rate and protocol or change them. You can choose between **Pelco/D** or **Pelco/P** protocol and select between

baud rate **1200/2400/4800/9600**.

This 2 parameters needs to be set like the camera's baud rate and protocol – check manufacture's user manual.

Our Mini-PTZ camera default baud rate and protocol are the same as our IR remote control unit:

Protocol: **Pelco/D**.

Baud Rate: **2400**.

If you press **DISP** button on the remote control display shows "**U008** or **U010**"

Its means that software version is 8 or 18.

If you press **DISP** button again- display shows "**d=24**"

**D** - Refers to the protocol – **Pelco/D**.

**24** – Refers to baud rate – **2400**.

## To set up protocol and baud rate

- Press the **SETUP** button on the remote control (Red button), Display shows "**d=24**".
- To change baud rate use ◀ or ▶ (1200/2400/4800/9600).
- To change protocol use ▲ or ▼ (P=PELCO/P , D=PELCO/D).
- Press the **ENTER** button to save configurations.

You can set different baud rate and protocol for each camera address. For example:

You can set address 1 with Pelco/D and baud rate 2400,

Then choose address 2 and set it as Pelco/P and baud rate 9600.

## Camera ID – Selecting camera

When powered on, the display will mark the camera's ID **A001**,

Example - "A001"

"A" = Represents the cameras ID address, means it shows you that current camera being controlled is #001.

To change camera press **CAM** on the remote,

If the camera number is higher than 9, press the **-/-** button,

And write the camera number.

**Example:** CAM - **-/-** - 9 - 0 - ENTER - To select camera number 90.

## Pan/tilt speed

You can control the speed of pan/tilt movement.

When pressing **SPEED** on the remote, the display shows "**S-63**".

**S=Speed**, 63 speed value, you can change the value between 1 to 63, when 63 is the fastest.

To change the speed:

- Press **SPEED** button and then a number between 1 to 63.
- When using a value higher then 9, press the **-/-** button, and write the camera number.
- Press **ENTER** to confirm.

## Presets

**To set a preset:**

- Press and hold **PRESET** button for 3 second or until display shows "**SET**"
- Enter a number between 1-9, if you want to use higher number then 9, Press the **-/-** button after pressing **PRESET**
- After typing a number press "ENTER" to confirm.

**Example:** PRESET - **-/-** - 1 - 5 - ENTER - To set preset 15.

To switch between presets press **SHOT**, Then press the desired preset number.

**To move to the preset you programmed**

- Press **SHOT** on the remote and then the desired preset number.
- If you want to use higher number then 9, Press the **-/-** button after pressing **SHOT**.

**Example To call preset 15** SHOT - **-/-** - 1 - 5.

## Home Point

When pressing **HOME** on the remote control the display shows **HOME**

You can set a home point preset, so that when you press **HOME** on the remote control, the camera will move to your pre-selected home point from any position she is in.

**To set a home point:**

- Move the camera to desired location.
- Press and hold **PRESET** button on the remote control.  
When the display shows "**SET**", press **HOME**.

## Line Scan

You can set 2 points for the camera to perform a scan between them.

These two points are **A** and **B** on the remote control.

When pressing **A** on the remote- display shows "**LF-A**"

When pressing **B** on the remote- display shows "**LF-B**"

To set the left/right limits:

- Set the camera to the desired location.
- Press and hold **PRESET** button for 3 seconds until display shows "**SET**".

- Then press **A** for settings first limit.
- Move the camera to the other location you want to set as second limit and repeat the last 2 lines using **B** button instead of **A**

#### To start line scan

- Press **AUTO** button on the remote control, the camera will move between the 2 points **A** and **B** back and forward.
- To stop the line scan press ◀/▶/▲/▼.

### To delete a preset or a home point or left/right limit

You can delete presets or home point using the “DELETE” button on the remote control.

When pressing and holding **DELETE** on the remote control, display shows “Clr”

“Clr-“= Clear.

- Press and hold **DELETE** button on the remote control.
- When display shows “Clr” inserts number of preset that you want to delete or press **HOME** for deleting the home point, you can also delete A/B points.


If the preset number is more than 9, press the **-/--** button, And write the preset number.

**Example: DELETE – -/-- – 2 - 5 - To delete preset 25.**

### PATTERN

You can set up a pattern from the selected presets and in the order you wish. You can set up to 16 presets in the pattern. You can also press **RUN** without selecting a certain pattern- that will start a pattern between all presets from 1 to 16.

- The default time between preset to preset (Including the camera's movement until the preset) is **8 seconds**.
- The speed of camera movement and the stop time (dwell time) between preset to preset are adjustable.

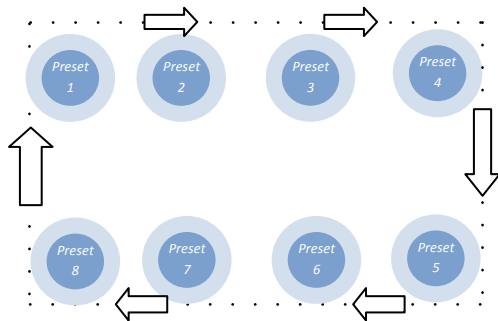

### Setting up a PATTERN

When pressing **PATTERN** for 3 seconds on the remote control

- Display shows “**PSTA**”
- That means that Pattern track setup mode is on. At this mode
- input the presets you want to include in the pattern (the order of inputting the presets is the order which the camera will move between them).
- Input the presets by pressing **PRESET** button and then the preset number. After inputting all presets
- Press **PATTERN** button again for 3 seconds
- Display shows “**PST0**”- means that pattern track setup mode is off.

### Example:

To set up a pattern that will move between presets 1-5-3 in a loop.

**PATTERN** (3sec') – **PRESET** – 1 – **PRESET** – 5 – **PRESET**  
– 3 – **PATTERN** (3sec')

To start the pattern press **RUN** on the remote control,

To stop the pattern press “**RUN**” again.


**Note:** After pressing **RUN** camera will only move between the selected presets for the pattern.

### Dwell Time

In a pattern, after setting all desired presets- you can change the holding time between preset to preset.

Dwell time - the time spaces between preset to preset – The time the camera will stay on the preset before moving to the next one.

You can set a different time between each preset or the same time for all presets.

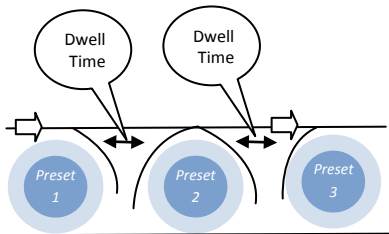

### For setting up the same time to all presets

- Press **Presets** button for 3 seconds to set preset number 242.
- Press **Presets** button for 3 seconds to set preset number 245.
- Press **Presets** button for 3 seconds to set preset number between 224 to 239, each preset represents holding time as described beneath:

preset 224 refers to _____	2 seconds
preset 225 refers to _____	4 seconds
preset 226 refers to _____	6 seconds
preset 227 refers to _____	8 seconds
preset 228 refers to _____	16 seconds
preset 229 refers to _____	24 seconds
preset 230 refers to _____	32 seconds
preset 231 refers to _____	48 seconds
preset 232 refers to _____	64 seconds
preset 233 refers to _____	80 seconds
preset 234 refers to _____	96 seconds
preset 235 refers to _____	112 seconds
preset 236 refers to _____	128 seconds
preset 237 refers to _____	176 seconds
preset 238 refers to _____	208 seconds
preset 239 refers to _____	255 seconds

- After selecting dwell time, you will need to call the presets you want to set up with the dwell time. To call a preset press on **SHOT** button and then the desired presets you want to configure with this dwell time.
- Press preset button for 3 seconds to set preset number 243.

### Example to set dwell time for presets 1,2,3,4 for 6 seconds.

Presets (3 sec') 242 – Presets (3 sec') 245 - Presets (3 sec') 226 -  
SHOT 1 – SHOT 2 – SHOT 3 – SHOT 4.



## For setting up different time to each preset

- Press **Preset** button for 3 seconds to set preset number 242.
- Press **Preset** button for 3 seconds to set preset number 245.
- Press **Preset** button for 3 seconds to set preset number between 224 to 239, each preset represents holding time as described beneath:

preset 224 refers to _____	2 seconds
preset 225 refers to _____	4 seconds
preset 226 refers to _____	6 seconds
preset 227 refers to _____	8 seconds
preset 228 refers to _____	16 seconds
preset 229 refers to _____	24 seconds
preset 230 refers to _____	32 seconds
preset 231 refers to _____	48 seconds
preset 232 refers to _____	64 seconds
preset 233 refers to _____	80 seconds
preset 234 refers to _____	96 seconds
preset 235 refers to _____	112 seconds
preset 236 refers to _____	128 seconds
preset 237 refers to _____	176 seconds
preset 238 refers to _____	208 seconds
preset 239 refers to _____	255 seconds

- Now call preset 1 – to set the dwell time for preset 1 as selected.
- Set preset number 245.
- Set any preset between 224 to 239.
- Call preset 2

The last 3 steps are repeating themselves until all desired preset are programmed.

- Press **Preset** button for 3 seconds to set preset number 243 to end Cruise settings.

**Example to set dwell time for preset 1 – 8 seconds, for preset 5 - 4 seconds, for Preset 2 – 2 seconds.**

Preset (3 sec') 242 – Preset (3 sec') 245 - Preset (3 sec') 227 - SHOT 1 – Preset (3 sec') 245 - Preset (3 sec') 225 – SHOT 5 – Preset (3 sec') 245 - Preset (3 sec') 224 – SHOT 2.

**• In cases of more presets then showed – continue to set up all presets and only in the end set preset 243 to end cruise setup.**

## Resetting all to factory default

Set preset 240.