

## Boss programming Manual

The programming manual is the same as original remote control. If our manual is not clear, you can search manual in google, youtube. also can contact us via Email. Anyway, we will try our best to make best service for you.

Boss, Centurion, Street-line & Guardian Coding Instructions  
Roller door operator

Programming Handset to Control Box

:

1. Remove the face plate by inserting a screwdriver into the slot located on the bottom side of the face plate.
2. With the power turned on to the unit, press and release the small button (learning button) located under the large aqua button. The yellow LED will come on indicating that your unit is ready to accept a code.
3. Press the number 1 button on the handset once. If the code is accepted the green LED will blink twice. If you are programming multiple handsets code them in at this stage.
4. Press and release the small button (learning button) and the yellow LED will go off. Handset is now programmed and is ready.

Overhead/panel lift/ tilt operator

Programming Handset to Receiver:

If the courtesy light is off it will come on and stay on for 30 seconds. If the courtesy light is on it will flash once and then stay on for 30 seconds.

1. With a pointed object push the Radio Set Button.
2. During this 30-second time period push the button on your hand transmitter until the courtesy light flashes twice this indicates that the receiver has accepted the code of the transmitter.

If the code is not accepted, the courtesy light will stay on for 30 seconds, flash 4 times and then stay on for 2.5 minutes.