

Configuring *BioStation T2*

- 1 Go to the TCP/IP submenu and check "Use BioStar Lite".
Menu > Network > TCP/IP > Use BioStar Lite

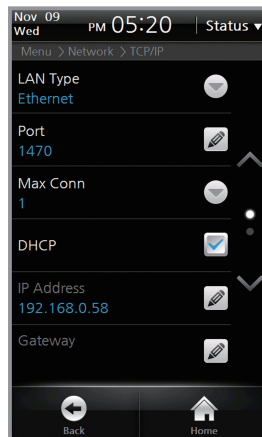


Fig1: TCP/IP submenu page 1

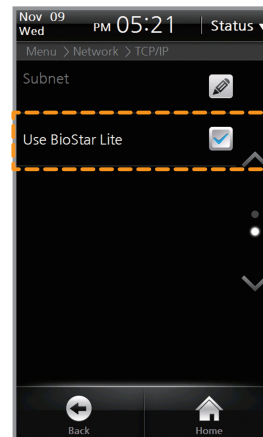


Fig2: TCP/IP submenu page 2

- 2 Write down the IP address currently set in the device.
Menu > Network > TCP/IP > IP Address

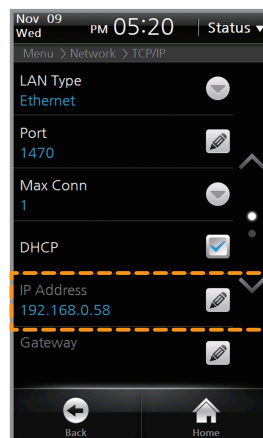


Fig. 3: TCP/IP submenu page 1

* If the IP address remains the default value of '127.0.0.1'; verify the IP configuration with your network administrator.

- 3 Open a web browser such as "Internet Explorer" or "Google Chrome" and enter the IP address of the device into the URL. The webpage for the BioStar Lite should open.

! NOTE

BioStar Lite only supports one concurrent connection.

Configuring X-Station

- 1 Go to the TCP/IP submenu and check "Use BioStar Lite".
Config > Network > TCP/IP > Use BioStar Lite



Fig. 1: TCP/IP submenu page 1

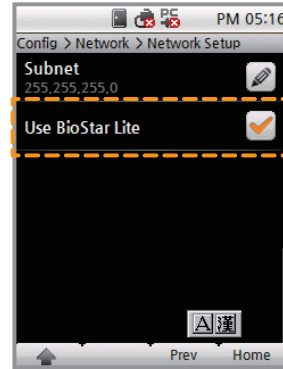


Fig. 2: TCP/IP submenu page 2

- 2 Write down the IP address currently set in the device.
Config > Network > TCP/IP > IP Address



Fig. 3: TCP/IP submenu page 1

* If the IP address remains the default value of '127.0.0.1'; verify the IP configuration with your network administrator.

- 3 Open a web browser such as "Internet Explorer" or "Google Chrome" and enter the IP address of the device into the URL. The webpage for the BioStar Lite should open.

NOTE

BioStar Lite only supports one concurrent connection.

Configuring D-Station

- 1 Go to the TCP/IP submenu and select **Use** for "Use BioStar Lite".
- 2 Write down the IP address currently set in the device.
Menu > Network > TCP/IP > IP Address

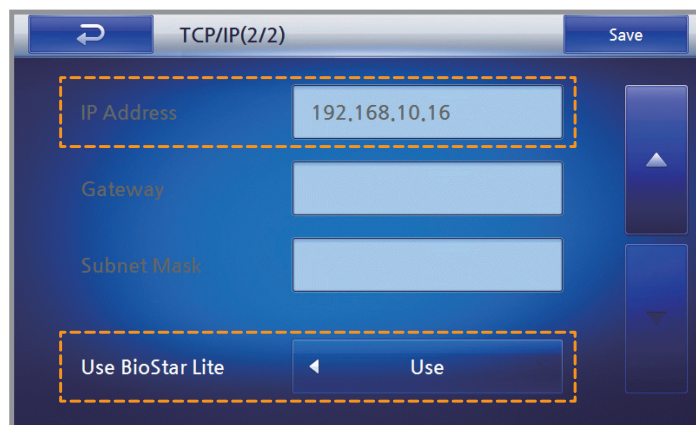


Fig.1 : TCP/IP submenu page 2

* If the IP address remains the default value of '127.0.0.1'; verify the IP configuration with your network administrator.

- 3 Open a web browser such as "Internet Explorer" or "Google Chrome" and enter the IP address of the device into the URL. The webpage for the BioStar Lite should open.

NOTE

BioStar Lite only supports one concurrent connection.