


# INSTALLATION METHOD

Side Mounted Automatic Door Operator

## Installation method and dimensions of the left door

1. When installing the door opener, please ensure that the two dimensions of 90mm and 220-280mm are correct, otherwise the door opener will not work normally;
2. The installation method and dimensions of the left door are shown in the figure below:

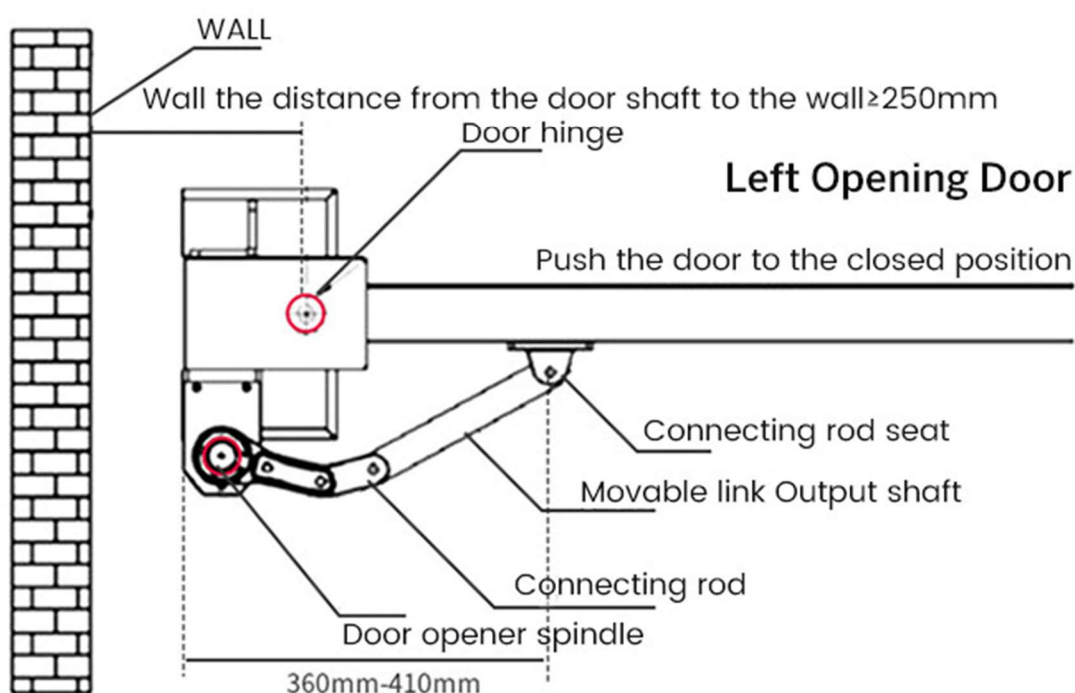

### Installation method and dimensions of the right door

1. When installing the door opener, ensure that the two dimensions of 90mm and 220-280mm are correct, otherwise the door opener will not work correctly;
2. The installation method and dimensions of the right door are shown in the following figure:

