

D7-type Remote Control Duplicator

Copy 2 remote controls just by one

Applicable types: fixed code/learning code remote control, some domestic and foreign brands rolling code type remote control.

(1).Compatible Brands (Foreign)

BFT MITTO2 MITTO4 (old version)	FAAC XT4 433RC	MotorLine MX4SP DSM	DEA MIO TR2
BENINCA TO GO WV	BENINCA TO.GO-VA	KEY TXB-42R	DOORHAN TX4
ATA PTX4	Peccinin TX3C	NICE FLORS	Nice-Smilo
AN MOTOR AT-4	AN MOTOR AT-4N	Centurion NOVA	NOVOFERM
GBD AU1600	ROSSI	FADINI JUBI	Dooya(DC250)
HILAND(T6520/T6522)	ZHONGTIAN (A,B)	SUPERLIFT s60, s66, SF-650	DOORMAN
AAVAQ	Codiplug NOV2	Codiplug UNIK	BISEN (T18, T19)
ACZ49-(B)	RKA2-(C)	CUPPON-(D)	AUTOTECH SM-50P



BENINCA ALLMATIC



DOORHAN TX4



KEY TXB-42R



GBD AU1600



NICE-SMILO



DEA



AUTOTECH SM-50P



AT-4N



FADINI JUBI



Novoferm



FAAC XT4 433



Motorline Mx4sp DSM



codiplug NOVA



Codiplug UNIK



ACZ49-(B)



Alutech AT-4



BFT MITTO2/MITTO4



NICE FLORS



ATA PTX-4



Rossi



Peccinin TX3C



Centurion NOVA



CUPPON-(D)



BENINCA TO.GO-VA



RKA2-(C)

Remark: To copy these brands, only need to be copied one button of our remote controls, then the rest buttons will be copied simultaneously, no need to copy the buttons one by one.

Specially for Codiplug NOV2, Codiplug UNIK, ACZ49-(B), RKA2-(C), : when copy these brands remote controls which only has 2 buttons, only need to copy one button, then the other button will be copied automatically, duplication is finished. ; AUTOTECH SM-50P, CUPPON-(D) are copy one by one .

Copying the brands Zhongtian, Superlift, AAVAQ, Door Man, and Hangzhou Hiland will automatically generate data for all four buttons.

(2).How to switch the remote control:

Press the second and third keys of the copy remote control simultaneously for more than 1.5S to switch the number of remote control groups.

(3).How to copy one by one:

①Press and hold the key of copy remote control, the digital tube will blink twice and then go out, then the key enters the learning state.

②Put the original remote control close to the copy remote control, press and hold the key of the original remote control, the digital tube of the copy remote control will blink 3 times and then light up, which means the code has been copied successfully.

③Other keys are the same as the above key copying method.

(4).How to Copy four keys in a row:

This function can be used to copy any key value when the key value automatically generated by copying a compatible brand does not meet the requirements. Under this function, only one brand of remote control can be copied for each group of remotes. Ordinary chip non-encrypted remotes can also use this function.

①Press and hold the first button of the copy remote control, the digital tube blinks twice and then goes out, then the button enters the learning state. Keep the button pressed, press the second button three times, the digital tube flashes three times. Enter the mode of copying four keys in a row.

②Put the original remote control close to the copy remote control, press and hold the key of the original remote control, the digital tube of the copy remote control will blink 3 times and then go out, which means that the current code has been successfully copied, and the digital tube will light up after four consecutive successful copies of the key.

(5).How to clear memory:

Press the first key and the second key of the copy remote control at the same time, the digital tube blinks 3 times. Press one of the buttons 3 times in a row and keep the other button pressed, the digital tube blinks continuously and clears all the information .

(6).How to progressively clean the memory :

Press the first and second keys of the copy remote control at the same time, the digital tube blinks 3 times. Release one key and keep the other key pressed. Press the key that needs to clear the code twice in a row, wait for 2S, the digital tube will flash continuously to clear the information of the key. This function is not available when Copy Data is a branded remote control.

(7).How to recover the last memory :

Simultaneously press the third and fourth keys of the copy remote control until the digital tube blinks rapidly to restore the information last cleared.

(8).Special BFT copy (MITT02/MITT04) method: only for BFTs

①Press and hold the first button of the copy remote control, the digital tube blinks twice and then goes out, then the button enters the learning state. Hold the button and press the second button once to enter the mode of copying BFT brand remote control. (Press the second button twice after the seed copy is successful, the digital tube will blink 3 times, and it will enter the mode of copying BFT brand remote control.)

②Put the BFT brand remote control close to the copy remote control, press the front two keys of BFT at the same time, the digital tube of the copy remote control will blink twice, and the seed will be copied successfully.

③Release the BFT brand remote control button, press any key of the BFT remote control, the digital tube of the copy remote control will blink 3 times and then light up, which means the code has been copied successfully.

(9).How to send BFT seeds:

Press the first and fourth keys of the Copy Remote at the same time, and the Copy Remote sends the BFT seed.

(10).Special Codiplug NOV2, Codiplug UNIK copy methods:

①Press and hold the first button of the copy remote control, the digital tube blinks twice and then goes out, then the button enters the learning state. Hold the button and press the second button twice to enter the copy mode of Codiplug NOV2 or Codiplug UNIK.

②Put Codiplug NOV2 or Codiplug UNIK brand remote control close to the copy remote control, press any key of Codiplug NOV2 or Codiplug UNIK remote control, the digital tube of the copy remote control flashes 3 times and then lights up, which means that the code has been copied successfully, and then the copy remote control will generate the data of the two buttons (the first and the second button) automatically. This means that the code has been copied successfully.)

③Press and hold the third button of the copy remote control, the digital tube will blink twice and then go out, then the button will enter the learning state. Hold the button and press the fourth button twice to enter the mode of copying Codiplug NOV2, Codiplug UNIK brand remote control.

④Put Codiplug NOV2 or Codiplug UNIK brand remote control close to the copy remote control, press any key of Codiplug NOV2 or Codiplug UNIK remote control, the digital tube of the copy remote control flashes 3 times and then lights up, which means that the code has been copied successfully, and then the copy remote control will generate the data of the two buttons (the third and the fourth buttons) automatically. This means that the code has been copied successfully.)