

Configuring the GT64 to establish an Internet connection

Step 1

Control panel:

- Select 'Telephone and Modem settings'
- Type the area code if needed.
- Select Button 'Add'
- Check Select from list checkbox.
- Select Button 'Next'
- Select 'Have disk'
Select the Gx64_Modem.inf (attached to E-Mail)
(The driver on the TELL data disk in the WaveCom Driver folder)
- Select the COM port which is used to connect the GT64
- Select button 'Next'
- Select button 'Finish'

Step 2

Control panel:

- Select 'Telephone and Modem settings'
- Select tab 'Modems'
- Select the Wavecom Gx64 Serial Modem from list
- Select button 'Properties'
- Select tab 'Special'
- Additional initialization commands: AT+CGDCONT=1,"IP","internet"
(In this context the „internet” is the APN, so this parameter depend on the provider)
- Select button 'OK'

Step 3

Control panel:

- Select 'Network connections'
- Select 'Add new connection'
- Select 'Connect to Internet'
- Select manual setup
- Select Connect with modem
- Select the Wavecom Gx64 Serial Modem
- Name of the Internet provider can be anything (for example: GT64)
- Telephone number: *99***1#
- You don't need username and code
Let this connection default.
- Finish

Step 4

- Start menu
 - Connect menu
 - Select the created connection (for example: GT64)
- In the Connection window
 - Select Properties
 - Settings tab
 - Delay before disconnecting: never
 - Redial: switch off
 - General tab
 - Select 'Modem – Wavecom Gx64 Serial Modem'
 - Then select configuration
 - Set max. baud rate to 115200 bps
 - Set the protocol to GPRS
 - Switch on the Hardware transmission control
 - Select OK

You are now able to connect to the Internet via the GT64 modem.

Make sure that your default Internet connection is the GT64 modems connection.