


# Built-in tubular motor controller user manual(standard model)

Loading:5A/250V

## 1. Wiring chart

L: 220V Live wire  
N: 220V Neutral wire

UP: uplink of motor  
DWN: downlink of motor  
Connect the COM of motor with the Neutral wire.

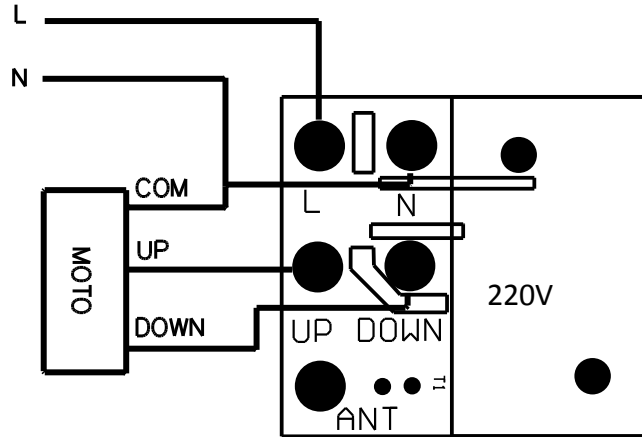

## 2. Remote control programming

Press the button P of the new remote control and then power up the receiver, 5s later receiver will buzz "BI BI" which indicates the receiver is into programming mode

If the remote control have been programmed before, receiver is powered up and into normal work status and then press the button P on the remote control exceed 5s, receiver will buzz "BI BI" and into learn mode.

In the programming mode, press the UP button of the remote which you want to program and the receiver buzz 3 time shortly indicates programming is successful. The receiver will exit programming mode if there is no more remote control programmed within 10s.

If the receiver works conversely as expected, press button P exceed 5s, receiver will buzz "BI BI" and then press Down button, receiver will buzz "BI BI" 3 times , then the uplink and downlink have been switched.

## 3. Memory clearance

Receiver powered up and into normal working status, press the Stop button of the programmed remote control exceed 8s, the LED light of the remote control will stop for 2s and then flash quickly, wait for another 5s and receiver will buzz 3 times shortly, all memory on the receiver have been erased.

