



YET866 Rolling shutter receiver Manual

EN Version



I. Tech Data:

1	Voltage	AC220V
2	Frequency	433Mhz
3	Sensitivity	≥-105dBm
4	Static current	≤12mA
5	Tep.	-40℃ ~ +80℃
6	Contact Current	≤10A
7	Remote Type	Rolling code
8	Memory	10pcs
9	Size	123mm*77mm*38.7mm



II. Receiver Introduction

1	Antenna			
2	DIP switch	number	1	2
		ON	4 Key mode	Auto-close mode
		OFF	1 key mode	Non auto-close
3	LED	RED	Power	
		GREEN	Working indicating	
4	Button On receiver	LRN	Learning/Delete button	
		AUTO	Auto-close delay time setting button	
		TIME	Running time setting	
5	SW2	change the door direction up and down		
6	J3	Flash Light output (AC220V)		
7	Motor connector			
8	Meet resist switch connector / alarm connector			

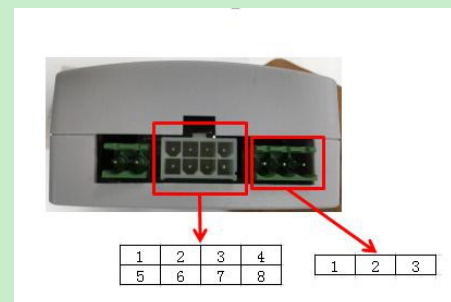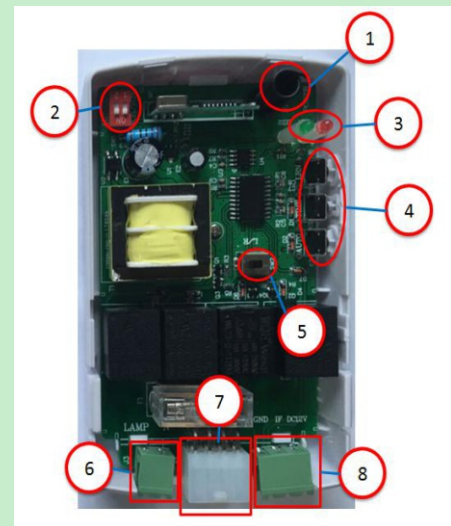


III. How to Operate?

Noted: This receiver can work at most 10 pcs remote control, if you want add 11st, it will replace the 1st remote.

(1) remote button

- ① UP: Open the door
- ② DOWN: Close the door
- ③ STOP: Stop (when unlocked) or unlock (when locked)
- ④ LOCK: Lock the remote

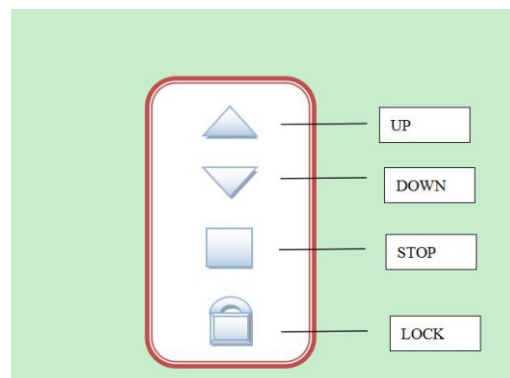

(2) Add or Delete the remote control

① *Add remote control:* Press the LEARN button(S1) on remote control 1s and release when the green LED ON, then press any button on the remote control, the green led flash 4 times, it means successfully.

② *Delete remote control:* Press the LEARN button (LRN) more than 5s, release when the green led OFF. It means all remote control memory clear.

(3) running time setting

Press the running time setting button (TIME) 1s, release after Green LED ON, then the motor will work, when running time is ok, press any button on the memory remote control, the green LED flash 4 times, it means successfully. If the green led flash only 1 times, it means failed.

(4) Auto-close delay time setting

Press the Auto-close delay time setting button (AUTO) 1s, release after Green LED ON, then the motor will work, when running time is ok, press any button on the memory remote control, the green LED flash 4 times, it means successfully.

(5) auto-close mode :The DIP switch Number 2 is ON, it is auto-close mode

(6) 4KEY / 1 KEY : The DIP switch Number 1:

ON: 4 KEY mode

OFF: 1 KEY mode, in this mode, only work the button which you learned before. The work ways will be circled with open-stop-close-stop-open... And please noted that in this 1 key mode, there is no lock and combination button function

(7) Changing motor working direction: the switch SW2

(8) Combination button

a. **Add new remote**, press the STOP+LOCK button of the LEARNED(which can work with receiver) remote control, release after 1s. when green LED ON, then press any button on the remote control, the green led flash 4 times, it means successfully.

b. **Running time setting**, press the button DOWN+LOCK of the LEARNED remote control 1s then release. When the delay time is ok, press any button on remote control, the green LED flash 4 times, it means successfully.

c. **Auto-close delay time setting:** press the button UP+LOCK of the LEARNED remote control 1s then release. When the delay time is ok, press any button on remote control, the green LED flash 4 times, it means successfully.

Noted: if the two button did not press at the same time, the receiver will receive the signal of the fist button, then the receiver do the first button function. For example, if you want to add new remote with button STOP+LOCK, if press STOP first, the receiver will be make the door STOP or make the light OFF.

IV: Wire connection (right picture)

