


# 6601M /6602M Mifare Reader User Manual

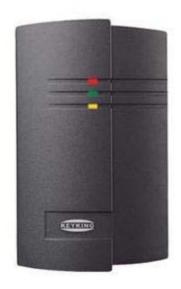



6601M

6602M

### **System Features**

- 1. Read any Mifare card or ISO14443 Type A (serial number).
- 2. Weigand 26 interface
- 3. Water proof design
- 4. 6601M is for doorcase mounting and 6602M is for surface mounting

## **Technical Specifications**

- 1. Card Format: Mifare1 S50 1KB or compatible
- 2. Output: Wiegand 26 bits
- 3. DC Power: 6 15VDC
- 4. Static Current: 50mA, Operating Current: 60mA.
- 5. Operating temperature:  $-14^{\circ}$ C ~  $+70^{\circ}$ C.
- 6. Hole diameter: 75mm
- 7. Humidity: 10%~90%

# KEYKING


## **Connection Pin Assignment**

Controller Wire No.	Reader wire color	Wiegand 26/34 bits wire definition
1	Black	Ground (GND)
2	Yellow	Green LED
3	Green	Data0 (Data0)
4	White	Data1 (Data1)
5	Red	Power supply (Vcc): +6V~+15V

Note: Do not use the same source of power supply for the electrical door lock and readers to avoid electrical sparkle interference.

### Installation for Surface mounting

- 1. Drill into the wall for 2 holes (diameter=6mm, depth=32mm), and drill for another hole of 1/2 inch.
- 2. Drill the reader's wire through the hole, and use screw (6\*22mm) to peg the reader module.
- 3. Cover the reader module with reader case. When you hear "Ka", it's OK.

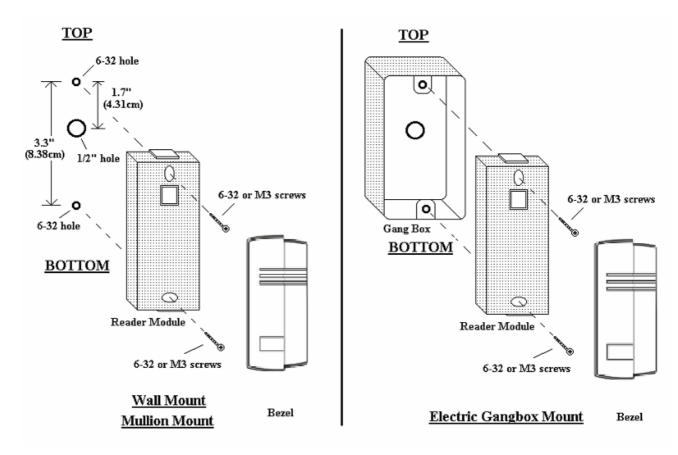

Note: For 6601M, you may also inset it into the doorframe.