


MINI REPEATER CONNECTIONS

Repeater RS485



Note - Make all connections with the power turned off to avoid risk of permanent damage to the circuit boards.

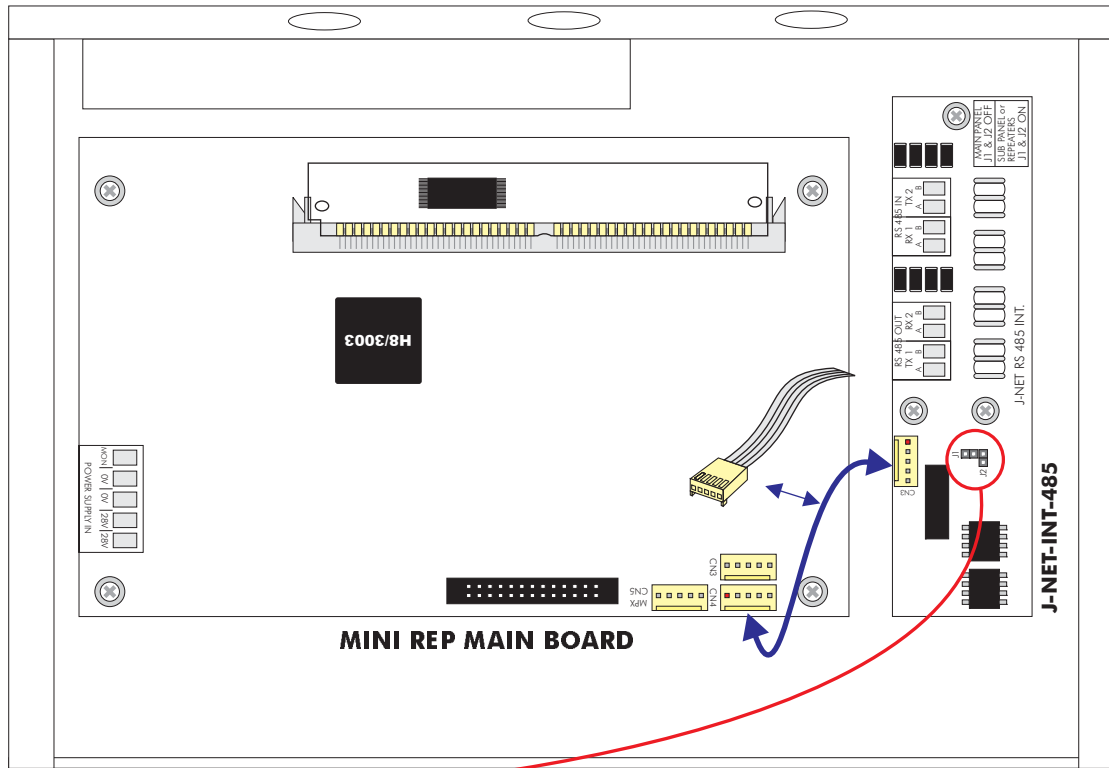

LINKS J1 & J2
 PANEL = **OFF** The interface inside the Juno-Net / Junior panel must have the link jumpers OFF.
 REPEATER = **ON** The interface inside the Mini-Repeater must have the link jumpers ON.

RS485 External Connection

The 4 wire external RS485 connections should be made as follows:

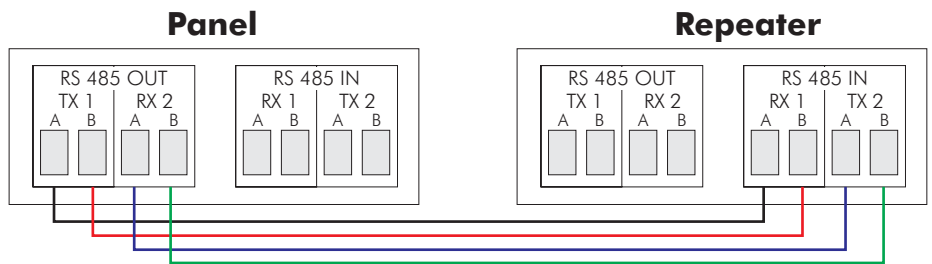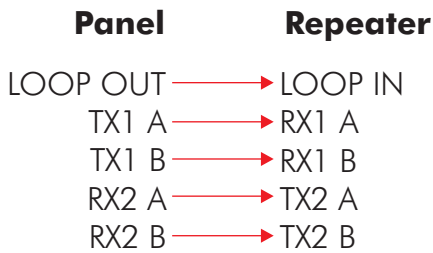

If there is more than 1 repeater, continue to connect OUT of one Repeater to IN of the next Repeater following the same connection rules as above. When you reach the last Repeater in the loop make the connections as follows:

