

## Enabling Analytics in IP Cameras:

### Steps for enabling analytics:


- 1) Update the IPC to the latest version
- 2) Run the program “Factory Tool\_Decrypt.exe”
- 3) Browse and select the .fac file, for example:“  
4MP\_EyeSight.fac”

Select a profile


- 4) Choose from the list all the cameras **from the same model.**  
**Please note:** setting the wrong camera model with the wrong profile might cause the camera to malfunction.
- 5) Choose from the “Product Type” Drop-down list the correct camera model.

For example: If you chose I1-340IP536 for enabling the analytics,  00:18:AE:94:4A:26  I1-340IP536  I1-340IP536  4.1.0.0(1...

You should choose I1-340IP536 from the “Product Type” List.

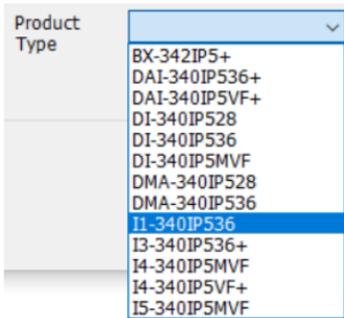

- 6) Click on “Set default configuration”. The camera will reboot automatically. **All settings and configuration will be restored to factory default.**
- 7) After the restart, Analytics will be enabled in the camera configuration menu.

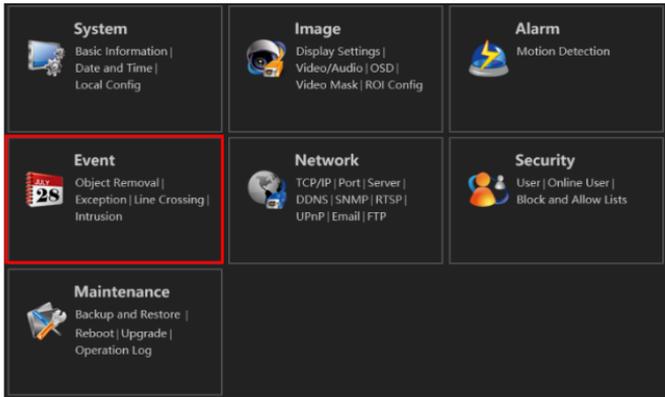

Please feel free to contact our technical team with any question, concern or technical feedback.

Best Regards,  
Provision-ISR Technical Department.