


578D

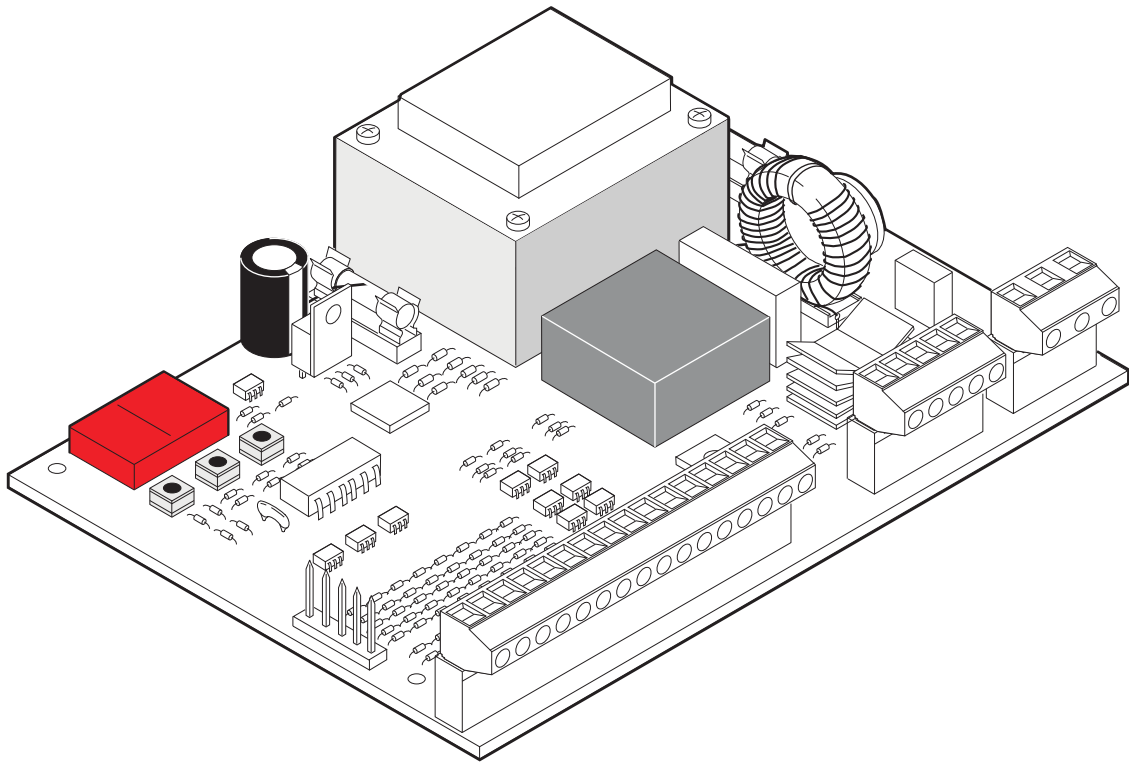

FAAC

Translation of the original instructions

© Copyright FAAC S.p.A. dal 2018. Tutti i diritti riservati.

Nessuna parte di questo manuale può essere riprodotta, archiviata, distribuita a terzi né altrimenti copiata, in qualsiasi formato e con qualsiasi mezzo, sia esso elettronico, meccanico o tramite fotocopia, senza il preventivo consenso scritto di FAAC S.p.A.

Tutti i nomi e i marchi citati sono di proprietà dei rispettivi fabbricanti.

I clienti possono effettuare copie per esclusivo utilizzo proprio.

Questo manuale è stato pubblicato nel 2018.

© Copyright FAAC S.p.A. from 2018. All rights reserved.

No part of this manual may be reproduced, archived, distributed to third parties nor copied in any other way, in any format and with any means, be it electronic, mechanical or by photocopying, without prior written authorisation by FAAC S.p.A.

All names and trademarks mentioned are the property of their respective manufacturers.

Customers may make copies exclusively for their own use.

This manual was published in 2018.

© Copyright FAAC S.p.A. depuis 2018. Tous droits réservés.

Aucune partie de ce manuel ne peut être reproduite, archivée ou distribuée à des tiers ni copiée, sous tout format et avec tout moyen, qu'il soit électronique, mécanique ou par photocopie, sans le consentement écrit préalable de FAAC S.p.A.

Tous les noms et les marques cités sont la propriété de leurs fabricants respectifs.

Les clients peuvent faire des copies pour leur usage exclusif.

Ce manuel a été publié en 2018.

© Copyright FAAC S.p.A. ab dem 2018. Alle Rechte vorbehalten.

Kein Teil dieses Handbuchs darf reproduziert, gespeichert, an Dritte weitergegeben oder sonst auf eine beliebige Art in einem beliebigen Format und mit beliebigen Mitteln kopiert werden, weder mit elektronischen, noch mechanischen oder durch Fotokopieren, ohne die Genehmigung von FAAC S.p.A.

Alle erwähnten Namen und Marken sind Eigentum der jeweiligen Hersteller.

Die Kunden dürfen nur für den Eigengebrauch Kopien anfertigen.

Dieses Handbuch wurde 2018 veröffentlicht.

© Copyright FAAC S.p.A. del 2018. Todos los derechos están reservados.

No puede reproducirse, archivar, distribuirse a terceros ni copiarse de ningún modo, ninguna parte de este manual, con medios mecánicos o mediante fotocopia, sin el permiso previo por escrito de FAAC S.p.A.

Todos los nombre y las marcas citadas son de propiedad de los respectivos fabricantes.

Los clientes pueden realizar copias para su uso exclusivo.

Este manual se ha publicado en 2018.

© Copyright FAAC S.p.A. van 2018. Alle rechten voorbehouden.

Niets uit deze handleiding mag gereproduceerd, gearhiveerd, aan derden openbaar gemaakt of op andere wijze gekopieerd worden, in om het even welke vorm en met geen enkel middel, noch elektronisch, mechanisch of via fotokopiëren, zonder schriftelijke toestemming vooraf van FAAC S.p.A.

Alle vermelde namen en merken zijn eigendom van de respectievelijke fabrikanten.

De klanten mogen kopieën maken die enkel voor eigen gebruik bestemd zijn.

Dez handleiding werd in 2018 gepubliceerd.



FAAC S.p.A. Soc. Unipersonale

Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY

Tel. +39 051 61724 - Fax +39 051 09 57 820

www.faac.it - www.faacgroup.com

INDEX

EU DECLARATION OF CONFORMITY..... 2

WARNINGS FOR THE INSTALLER 2

1 WARNINGS..... 3

2 TECHNICAL SPECIFICATIONS 3

3 LAYOUT AND COMPONENTS..... 3

4 ELECTRIC CONNECTIONS..... 3

4.1 CONNECTION OF PHOTOCELLS AND SAFETY DEVICES 4

4.2 TERMINAL BOARD - POWER SUPPLY (FIG. 2)..... 6

4.3 J6 TERMINAL BOARD - MOTORS AND FLASHING LAMP (FIG. 2) 6

4.4 J1 TERMINAL BOARD - ACCESSORIES (FIG. 2)..... 6

4.5 CONNECTOR J2 - RAPID CONNECTION TO MINIDEC, DECODER AND RP 7

4.6 CONNECTION OF OPERATOR 844 7

4.7 CONNECTION OF OPERATOR 541 7

4.8 CONNECTION OF OPERATORS WITHOUT ON-BOARD INTERFACE..... 7

5 PROGRAMMING..... 9

5.1 BASIC PROGRAMMING 9

5.2 ADVANCED PROGRAMMING 9

6 START-UP..... 11

6.1 INPUTS CHECK..... 11

6.2 INSTALLATION USING SLIDING GATE OPERATORS..... 11

6.3 INSTALLATION USING THE 541 OPERATOR 12

6.4 INSTALLATION WITH THREE-PHASE OPERATOR (ES: 541 3PH)..... 12

7 FINAL OPERATIONS..... 12

EU DECLARATION OF CONFORMITY

The Manufacturer

Company name: FAAC S.p.A. Soc. Unipersonale
Address: Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY

hereby declares on his sole responsibility that the following product:

Description: Control unit
Model: 578D

complies with the following applicable EU legislations:

- 2014/30/EU
- 2014/35/EU
- 2011/65/EU

Furthermore, the following harmonised standards have been applied:

- EN 60335-1:2012 + A1:2014
- EN 61000-6-2:2005
- EN 61000-6-3:2007 + A1:2011

Bologna, Italy, 01-07-2018

CEO
 A. Marcellan



WARNINGS FOR THE INSTALLER

GENERAL SAFETY OBLIGATIONS

- | | |
|--|--|
| <p>1) ATTENTION! To ensure the safety of people, it is important that you read all the following instructions. Incorrect installation or incorrect use of the product could cause serious harm to people.</p> <p>2) <u>Carefully read the instructions</u> before beginning to install the product.</p> <p>3) Do not leave packing materials (plastic, polystyrene, etc.) within reach of children as such materials are potential sources of danger.</p> <p>4) Store these instructions for future reference.</p> <p>5) This product was designed and built strictly for the use indicated in this documentation. Any other use, not expressly indicated here, could compromise the good condition/operation of the product and/or be a source of danger.</p> <p>6) FAAC declines all liability caused by improper use or use other than that for which the automated system was intended.</p> <p>7) Do not install the equipment in an explosive atmosphere: the presence of inflammable gas or fumes is a serious danger to safety.</p> <p>8) The mechanical parts must conform to the provisions of Standards EN 12604 and EN 12605.</p> <p>For non-EU countries, to obtain an adequate level of safety, the Standards mentioned above must be observed, in addition to national legal regulations.</p> <p>9) FAAC is not responsible for failure to observe Good Technique in the construction of the closing elements to be motorised, or for any deformation that may occur during use.</p> <p>10) The installation must conform to Standards EN 12453 and EN 12445.</p> <p>For non-EU countries, to obtain an adequate level of safety, the Standards mentioned above must be observed, in addition to national legal regulations.</p> <p>11) Before attempting any job on the system, cut out electrical power .</p> <p>12) The mains power supply of the automated system must be fitted with an all-pole switch with contact opening distance of 3mm or greater. Use of a 6A thermal breaker with all-pole circuit break is recommended.</p> | <p>13) Make sure that a differential switch with threshold of 0.03 A is fitted upstream of the system.</p> <p>14) Make sure that the earthing system is perfectly constructed, and connect metal parts of the means of the closure to it.</p> <p>15) The safety devices (EN 12978 standard) protect any danger areas against mechanical movement Risks, such as crushing, dragging, and shearing.</p> <p>16) Use of at least one indicator-light is recommended for every system, as well as a warning sign adequately secured to the frame structure, in addition to the devices mentioned at point "15".</p> <p>17) FAAC declines all liability as concerns safety and efficient operation of the automated system, if system components not produced by FAAC are used.</p> <p>18) For maintenance, strictly use original parts by FAAC.</p> <p>19) Do not in any way modify the components of the automated system.</p> <p>20) The installer shall supply all information concerning manual operation of the system in case of an emergency, and shall hand over to the user the warnings handbook supplied with the product.</p> <p>21) Do not allow children or adults to stay near the product while it is operating.</p> <p>22) Keep remote controls or other pulse generators away from children, to prevent the automated system from being activated involuntarily.</p> <p>23) Transit is permitted only when the automated system is idle.</p> <p>24) The user must not attempt any kind of repair or direct action whatever and contact qualified personnel only.</p> <p>25) Maintenance: check at least every 6 months the efficiency of the system, particularly the efficiency of the safety devices (including, where foreseen, the operator thrust force) and of the release devices.</p> <p>26) Anything not expressly specified in these instructions is not permitted.</p> |
|--|--|

CONTROL BOARD 578D

1 WARNINGS


Important: Before attempting any work on the control board (connections, maintenance), always turn off power.

- Install, upstream of the system, a differential thermal breaker with adequate tripping threshold.
- Connect the earth cable to the appropriate terminal on the J7 connector of the equipment (see fig.2).
- Always separate power cables from control and safety cables (push-button, receiver, photocells, etc.). To avoid any electric noise, use separate sheaths or a shielded cable (with earthed shield).

2 TECHNICAL SPECIFICATIONS

Power supply V~ (+6% -10%)	230
Absorbed power (W)	10
Motor max. load (W)	1000
Accessories max. load (A)	0,5
Operating ambient temperature	-20 °C +55 °C
Protection fuses	2 (see fig. 1)
Function logics: Automatic / "Stepped" automatic / Semi-automatic / Safety devices / Semi-automatic B / Dead-man C / "Stepped" semi-automatic / Mixed B/C logic	
Work time	Programmable (from 0 to 4 min.)
Pause time	Programmable (from 0 to 4 min.)
Thrust force	Adjustable over 50 levels
Terminal board inputs: Open - Partial Open - Opening safety devices - Closing safety devices - Stop - Edge - Power supply+Earth - Opening and closing limit-switches - Encoder	
Terminal board outputs: Flashing lamp - Motor - 24 Vdc accessories power supply- 24 Vdc indicator-light / Timed output / Electric lock command - 'traffic lights' - Failsafe	
Rapid connector	5-pin card connection for MiniDec, DECODER or RP receivers
Programming	3 keys (+, -, F) and display, "basic" or "advanced" mode
Basic mode programmable functions: Function logic - Pause time - Thrust Force - Opening-closing direction	
Advanced mode programmable functions: Torque at initial thrust - Braking - Fail safe- Pre-flashing - Indicator-light/Timed output/Electric lock or 'traffic lights' command - Opening and closing safety devices logic - Encoder/ Anti-crushing sensitivity - Decelerations - Partial opening time - Work time - Assistance request - Cycle counter	


3 LAYOUT AND COMPONENTS

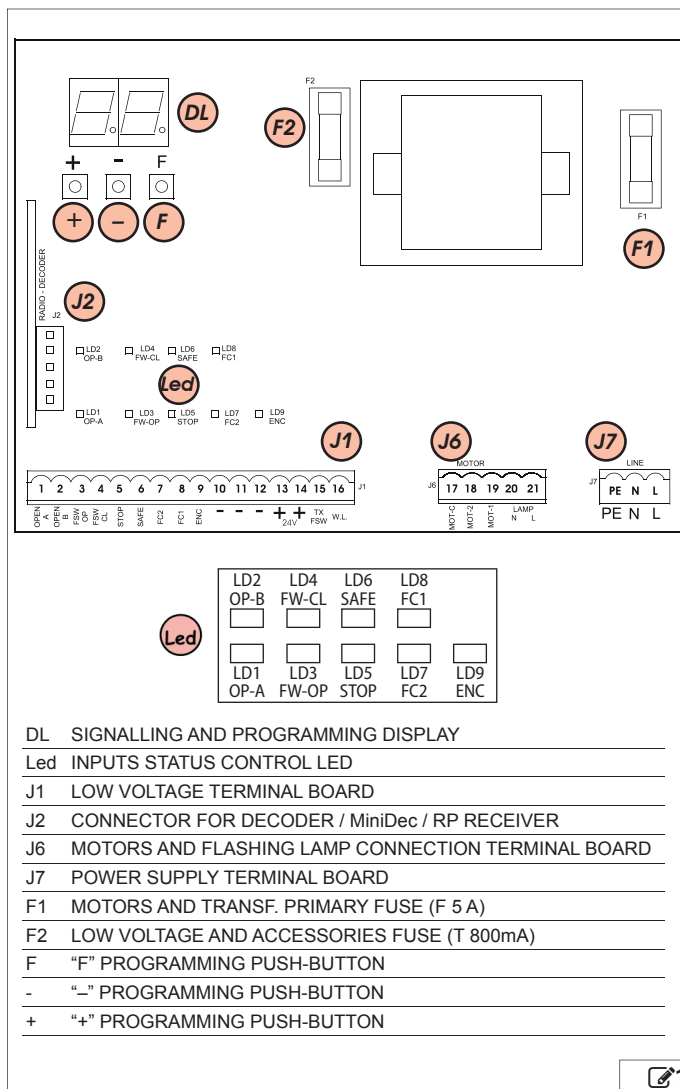

- DL SIGNALLING AND PROGRAMMING DISPLAY
- Led INPUTS STATUS CONTROL LED
- J1 LOW VOLTAGE TERMINAL BOARD
- J2 CONNECTOR FOR DECODER / MiniDec / RP RECEIVER
- J6 MOTORS AND FLASHING LAMP CONNECTION TERMINAL BOARD
- J7 POWER SUPPLY TERMINAL BOARD
- F1 MOTORS AND TRANSF. PRIMARY FUSE (F 5 A)
- F2 LOW VOLTAGE AND ACCESSORIES FUSE (T 800mA)
- F "F" PROGRAMMING PUSH-BUTTON
- "-" PROGRAMMING PUSH-BUTTON
- + "+" PROGRAMMING PUSH-BUTTON



4 ELECTRIC CONNECTIONS

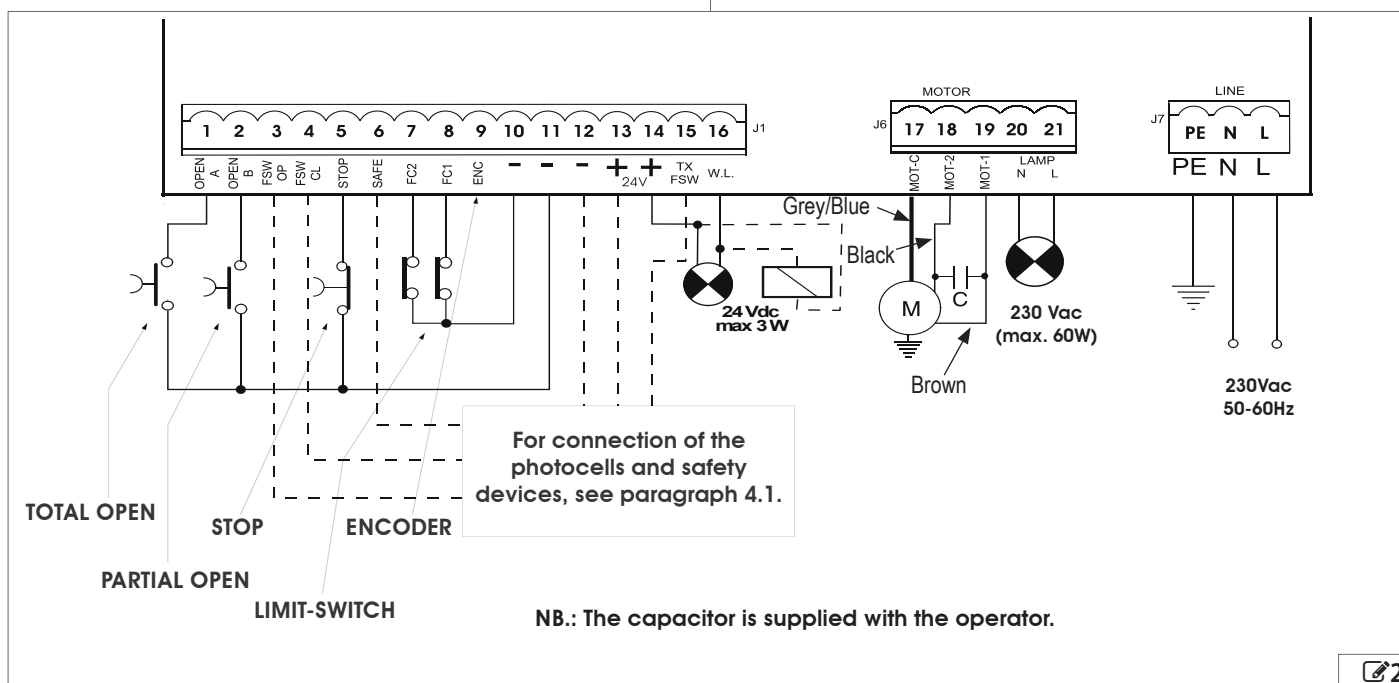

NOTE: The 578D equipment is able to command electro-mechanical operators for sliding gates and industrial sectional doors. Anything referring to gates in these instructions also applies to doors. Any differences are shown in the specific paragraphs.

4.1 Connection of photocells and safety devices

Before connecting the safety devices and photocells we advise you to select the type of operation according to the movement area they have to protect (see fig.3 for example):

Opening safety devices: they are tripped when an obstacle is detected only during gate opening movement. They cause immediate closure and resumption of opening motion on release (see programming in par.5.2).

Closing safety devices: they are tripped when an obstacle is detected only during gate closing movement. They cause re-opening, either immediate or on release (see programming in par.5.2).

Opening/closing safety devices: they are tripped during the gate opening and closing movements. They cause stopping and restart motion on release.

"Edge" safety devices: they are tripped during the gate opening and closing movements. They cause immediate reversal of motion and stopping after two seconds.

Encoder: it is tripped if there is an obstacle during gate opening and closing movements. It causes immediate reversal of motion and stopping after two seconds.


Note: in operators for industrial sectional doors, the anti-crushing function is not tripped during closing, because the operator acts on the rope shaft and not directly on the door.

N.B. If two or more safety devices have the same function (opening, closing, opening and closing, edge), the contacts must be connected to each other in series (fig. 4).


N.C. contacts must be used.

N.B. If safety devices are not used, jumper connect the terminals as shown in fig. 5.


The most common photocell and safety device lay-outs are shown below (from fig. 6 to fig. 13).

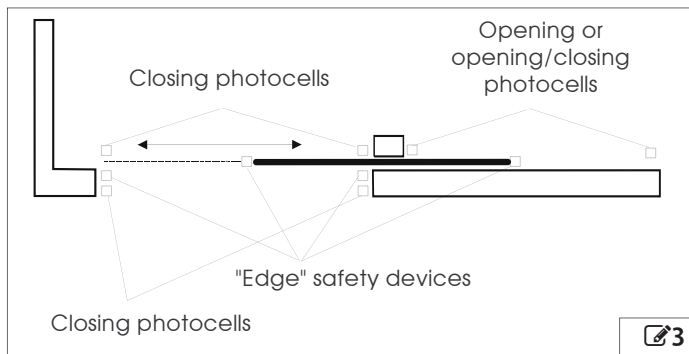


3

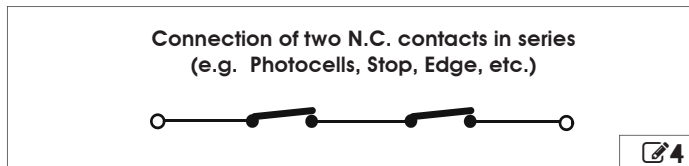


4

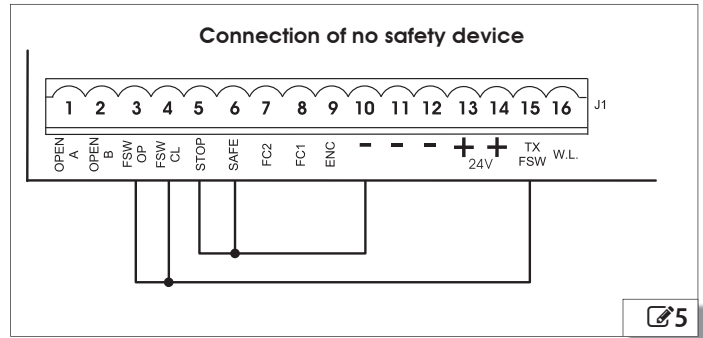


5

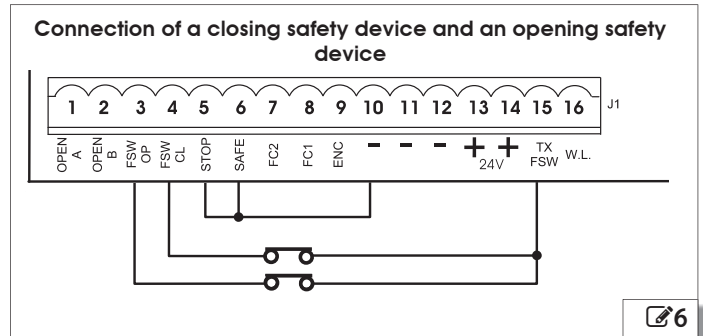


6

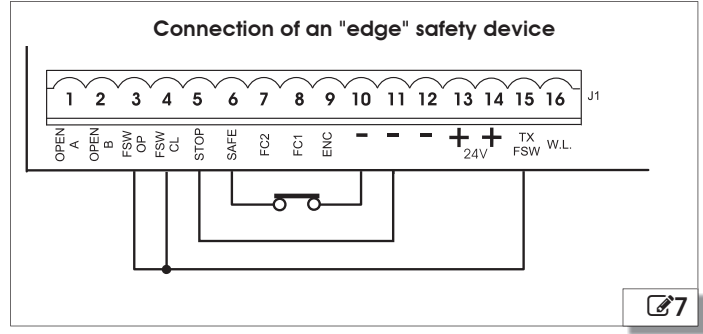

7

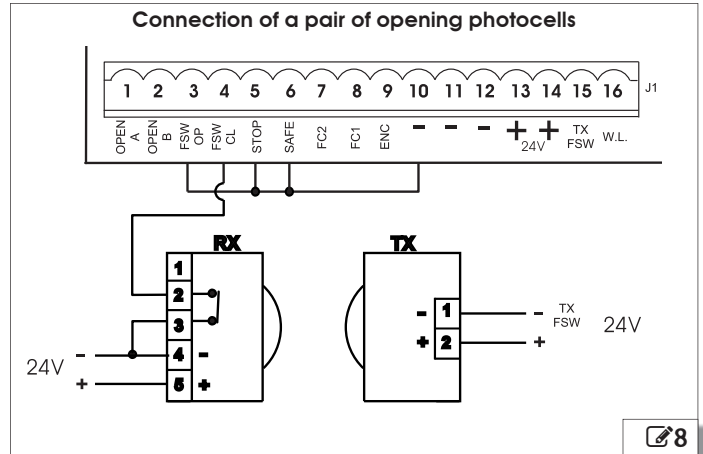


8

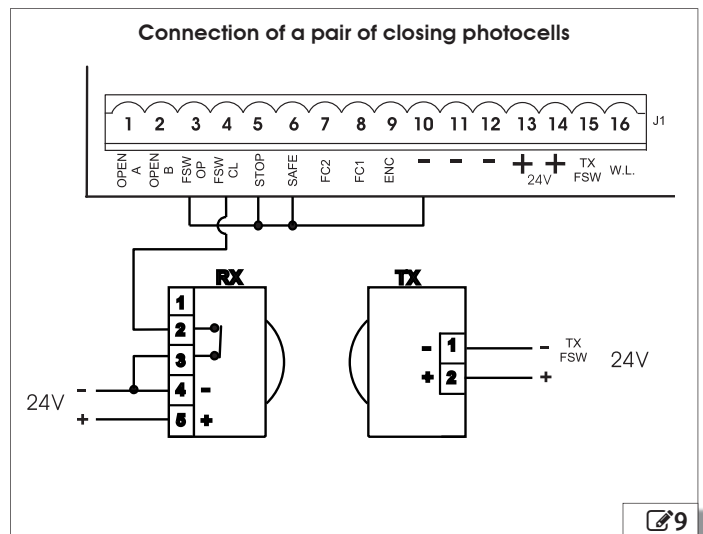


9

Connection of a pair of opening photocells, a pair of closing photocell and an edge safety device

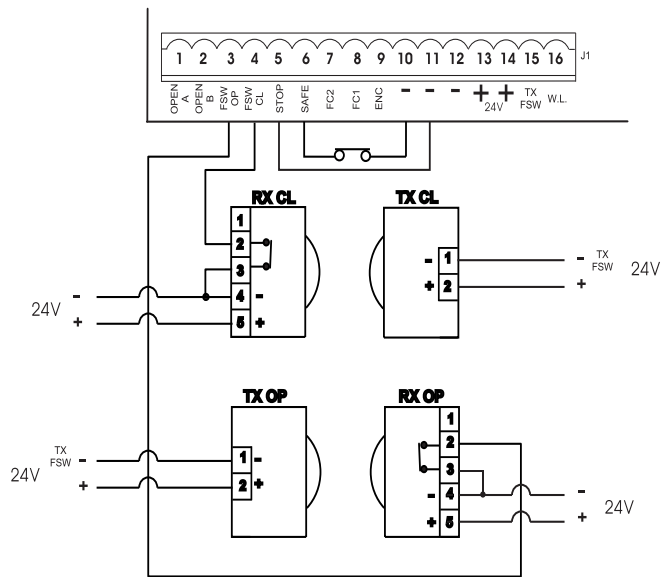


10

Connection of a pair of closing photocells, a pair of opening photocells and a pair of opening/closing photocells

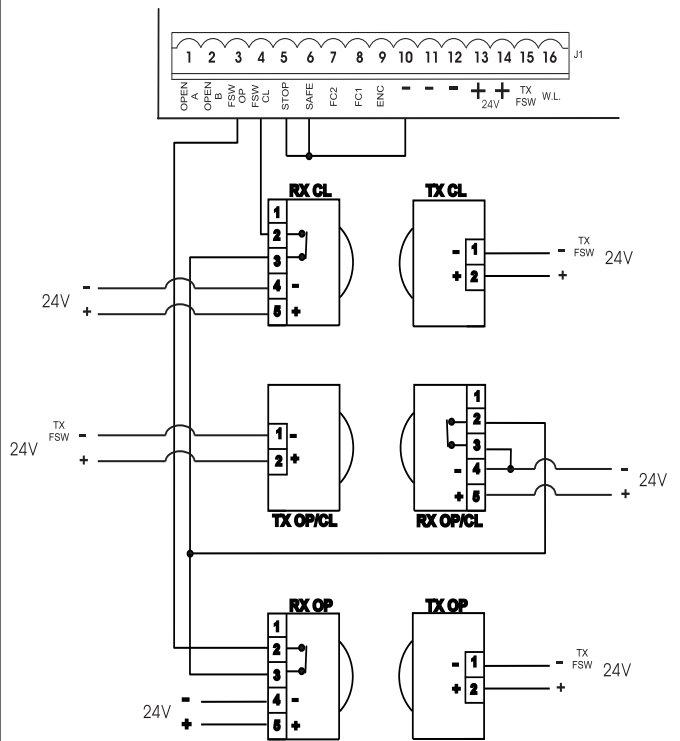


12

Connection of two pairs of closing photocells and two edge safety devices

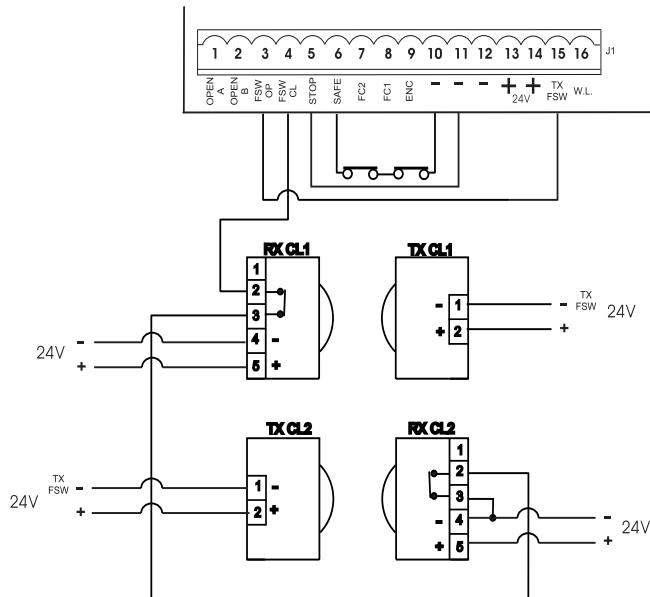


11

Connection of a pair of closing photocells and a pair of opening/closing photocells

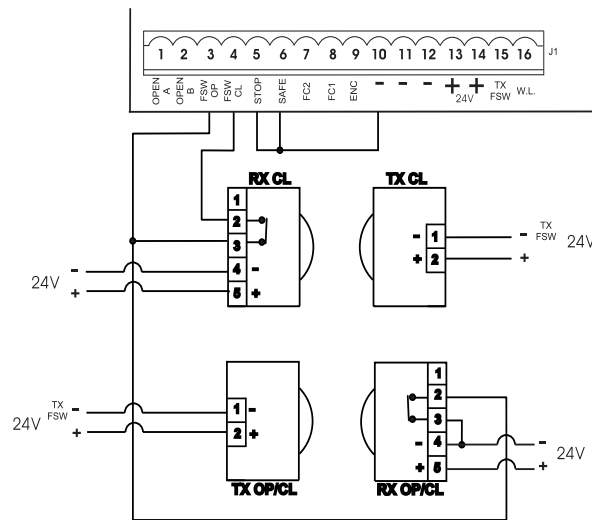

13

Connection of two N.O. contacts in parallel (e.g. Open A, Open B)

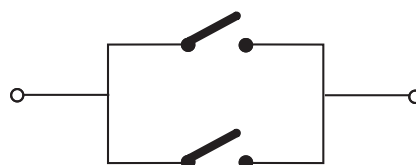

14

4.2 Terminal board - Power supply (fig. 2)

POWER SUPPLY (terminals PE-N-L):

- PE: Earth connection
- N : Power supply (Neutral)
- L : Power supply (Line)

NB.: For correct operation, the board must be connected to the earth conductor in the system. Install an adequate differential thermal breaker upstream of the system

4.3 J6 Terminal board - Motors and flashing lamp (fig. 2)

MOTOR - (terminals 17-18-19): Motor connection.

Operators for sliding gates: refer to paragraph 4.6 for instructions on correct connection of the equipment to the interface board on the operator.

Operator 541: refer to paragraph 4.7 for instructions on correct connection of the equipment to the interface board on the operator.

LAMP - (terminals 20-21): Flashing lamp output 230Vac max 60W.

4.4 J1 Terminal board - Accessories (fig. 2)

Consult the relevant tables for a detailed description of operation in the different logics

OPEN A - "Total Opening" command (terminal 1): any pulse generator (push-button, detector, etc.) which, by closing a contact, commands total opening and/or closing of the gate leaf.

To install several total opening pulse generators, connect the N.O. contacts in parallel (fig. 14).

OPEN B - "Partial opening" or "Closing" command (terminal 2): any pulse generator (push-button, detector, etc.) which, by closing a contact, commands partial opening and/or closing of the gate leaf. In the B, C and B/C logics, it always commands gate closure.

To install several partial opening pulse generators, connect the N.O. contacts in parallel (fig.14).

FSWOP - Openingsafetydevicescontact(terminal3):Thepurposeof theopeningsafetydevicesistoprotecttheleafmovement area during opening. During opening, in the **A-AP-S-E-EP** logics the safety devices reverse the movement of the gate, or stop and restart the movement when it is released (see advanced programming in Chpt. 5.2). During the opening cycle in logicsthe **B, C** and **B/C**, they interrupt movement. They never operate during the closing cycle.

If the **Opening safety devices** are engaged when the gate is closed, they prevent the opening movement. To install several safety devices, connect the N.C. contacts in series (fig.4).

NB.: If no opening safety devices are connected, jumper connect inputs **FSW OP** and **-TX FSW** (fig. 5).

FSWCL - Closing safety devices contact (terminal 4): The purpose of the closing safety devices is to protect the gate movement area during closing. During closing, in the **A-AP-S-E-EP** logics, the safety devices reverse the movement of the gate, or stop and reverse the movement when it is released (see advanced programming in Chpt. 5.2). During the closing cycle in logics **B, C** and **B/C**, they interrupt movement. They never operate during the opening cycle. If the **Closing safety devices** are engaged when the gate is open, they prevent the closing movement.

To install several safety devices, connect the N.C. contacts in series (fig.4).

NB.: If no closing safety devices are connected, jumper connect terminals **FSW CL** and **-TX FSW** (fig. 5).

STOP - STOP contact (terminal 5): any device (e.g. a push-button) which, by opening a contact, stops gate movement.

To install several STOP devices, connect the N.C. contacts in series (fig. 4).

NB.: If STOP devices are not connected, jumper connect the **STOP** and - terminals.

SAFE - EDGE safety device contact (terminal 6): The purpose of the "edge" safety device is to protect the leaf movement area during opening/closing. In all logics, during opening and closing, the safety device reverses gate movement for 2 seconds. If the safety devices operate again during the 2-seconds reversing time, it stops movement (STOP) without any reversing.

If the **Edge safety device** is engaged while the gate is closed or open, it prevents movement.

To install several safety devices, connect the N.C. contacts in series (fig.4).

NB.: If edge safety devices are not connected, jumper connect the **SAFE** and - inputs (fig. 5).

FC1 / FC2- Opening and closing limit-switch contacts (terminals 7 and 8): The purpose of the opening and closing limit-switches is to establish the reference point for the stop, or for start of deceleration (pre- and post-limitswitch), or for operator braking (see advanced programming in Chpt 5.2).

The limit-switch device must have an NC contact for connection between the input (FC1 or FC2) and the equipment's terminal (see Fig.2).

OPERATORS FOR SLIDING GATES: consult paragraph 4.6 for correct connection of limit-switches and motor.

OPERATOR 541: consult paragraph 4.7 for correct connection of limit-switches and motor.

ENCODER - Contacts of motor rotation control sensor (terminal 9): This input is designed for connection of the Encoder sensor. The presence of the encoder is signalled - when the gearmotor is running - by the flashing of the "ENC" LED on the board.

If the encoder is used, the equipment knows the exact gate position during the entire movement, and also controls other functions with greater precision, such as partial opening and decelerations (see advanced programming in Chpt 5.2.). The encoder also operates as an anti-crushing device: if the gate strikes an obstacle during opening or closing, the encoder reverses gate leaf movement for 2 seconds. If the encoder operates again during the 2-second reversing time, it STOPS movement without performing any reversing.

Note: in operators for industrial sectional doors, the anti-crushing function is not active during closing, because the operator acts on the rope shaft and not directly on the door.

- **Negative for power supply to accessories (terminals 10, 11 and 12)**

+ **24 Vdc - Positive for power supply to accessories (terminals 13 and 14)**

Important: Accessories max. load is 500 mA. To calculate absorption values, refer to the instructions for individual accessories.

TX -FSW - Negative for power supply to photocell transmitters (terminal 15)

If you use this terminal for connecting the negative for supplying power to the photocell transmitters, you may, if necessary, also use the FAIL SAFE function (see advanced programming in Chpt. 5.2).

If this function is enabled, the equipment checks operation of the photocells before every opening or closing cycle.

W.L. - Power supply to indicator light / timed exit / electric lock/ 'traffic lights' (terminal 16)

Connect any 24 Vdc - 3 W max indicator light, timed exit, command device for electric lock or 'traffic lights' between this terminal and the +24V (see advanced programming in Chap. 5.2). To avoid jeopardising correct operation of the system, **do not exceed** the indicated power.

4.5 Connector J2 - Rapid connection to MiniDec, DECODER and RP

This is used for rapid connection of MiniDec, DECODER and RP receivers (see fig. 15, 16 and 17). Connect the accessory, with the components side facing the inside of the board. Insert and remove after cutting power.

4.6 Connection of operator 844

Make the connections between the 578D equipment and the inter-connection board mounted on the operator, observing the diagram in fig.18. Refer to paragraph 6.2 for instructions on putting into operation.


4.7 Connection of operator 541

Make the connections between the 578D equipment and the inter-connection board mounted on the operator, observing the diagram in fig.19.

A stop push-button, if any, must be located in series with respect to the connection between the STOP input of 578D and the SAFETY of the 541 INTERFACE. Refer to paragraph 6.3 for instructions on putting into operation.

4.8 Connection of operators without on-board interface

To make connections between the 578D equipment and operators without a on-board interface board, use the diagram figure 20. Refer to paragraph 6.2 for putting into operation, taking care over the limit-switch connections.

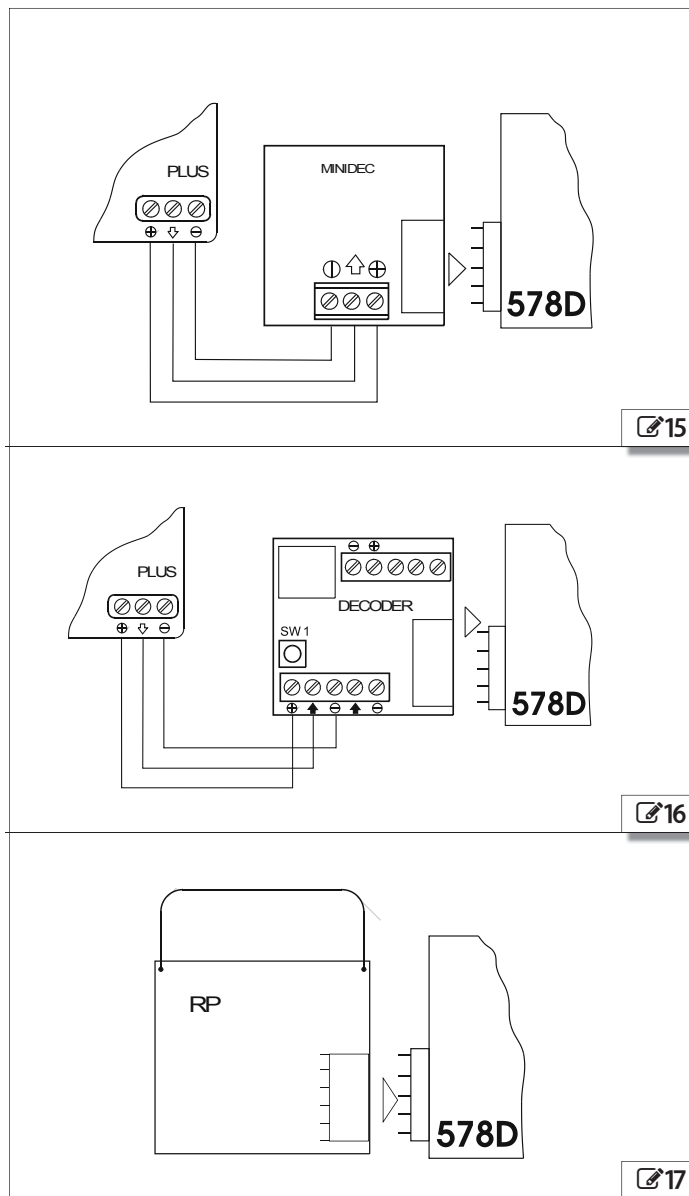


15

16


17

ENGLISH


Translation of the original instructions

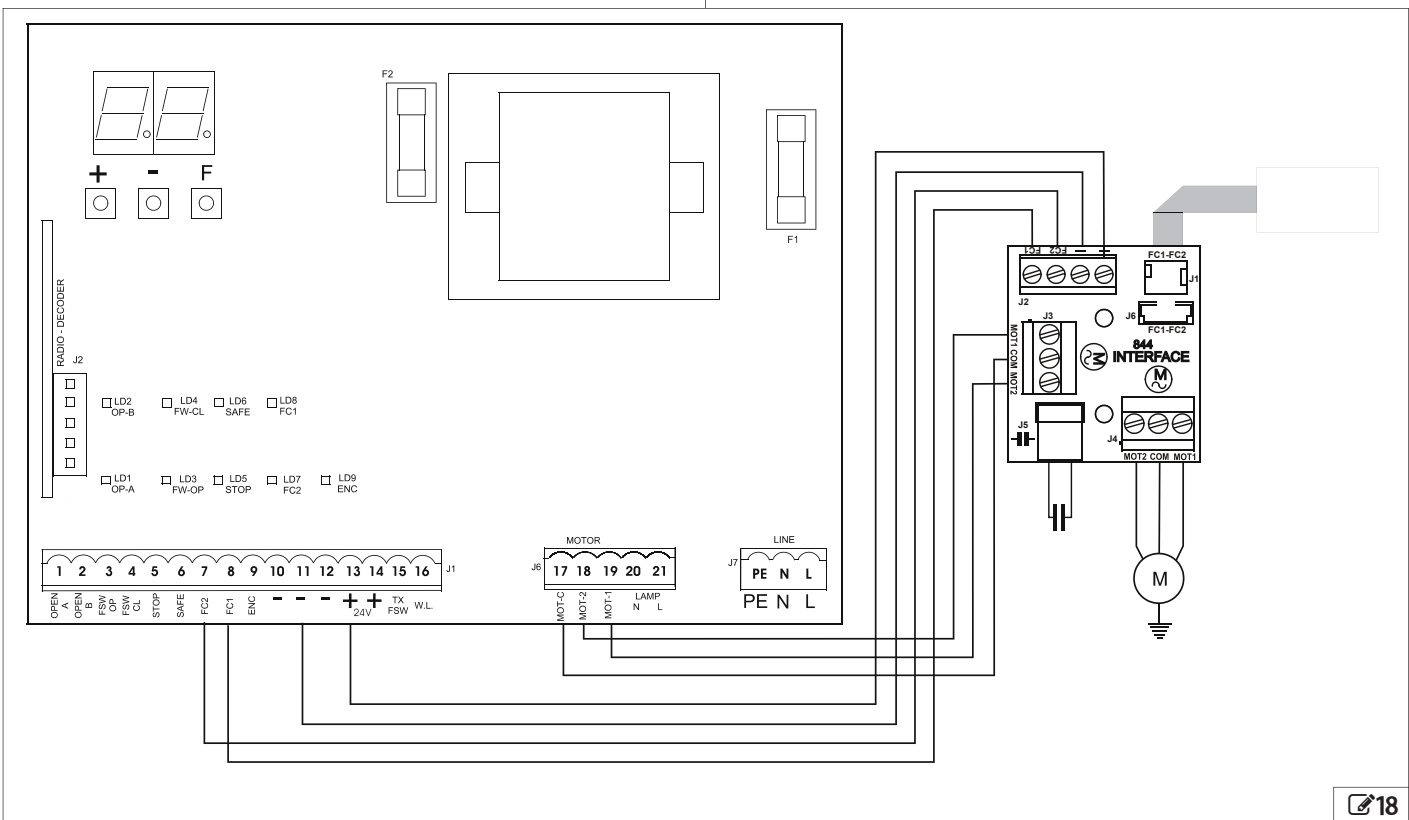


18

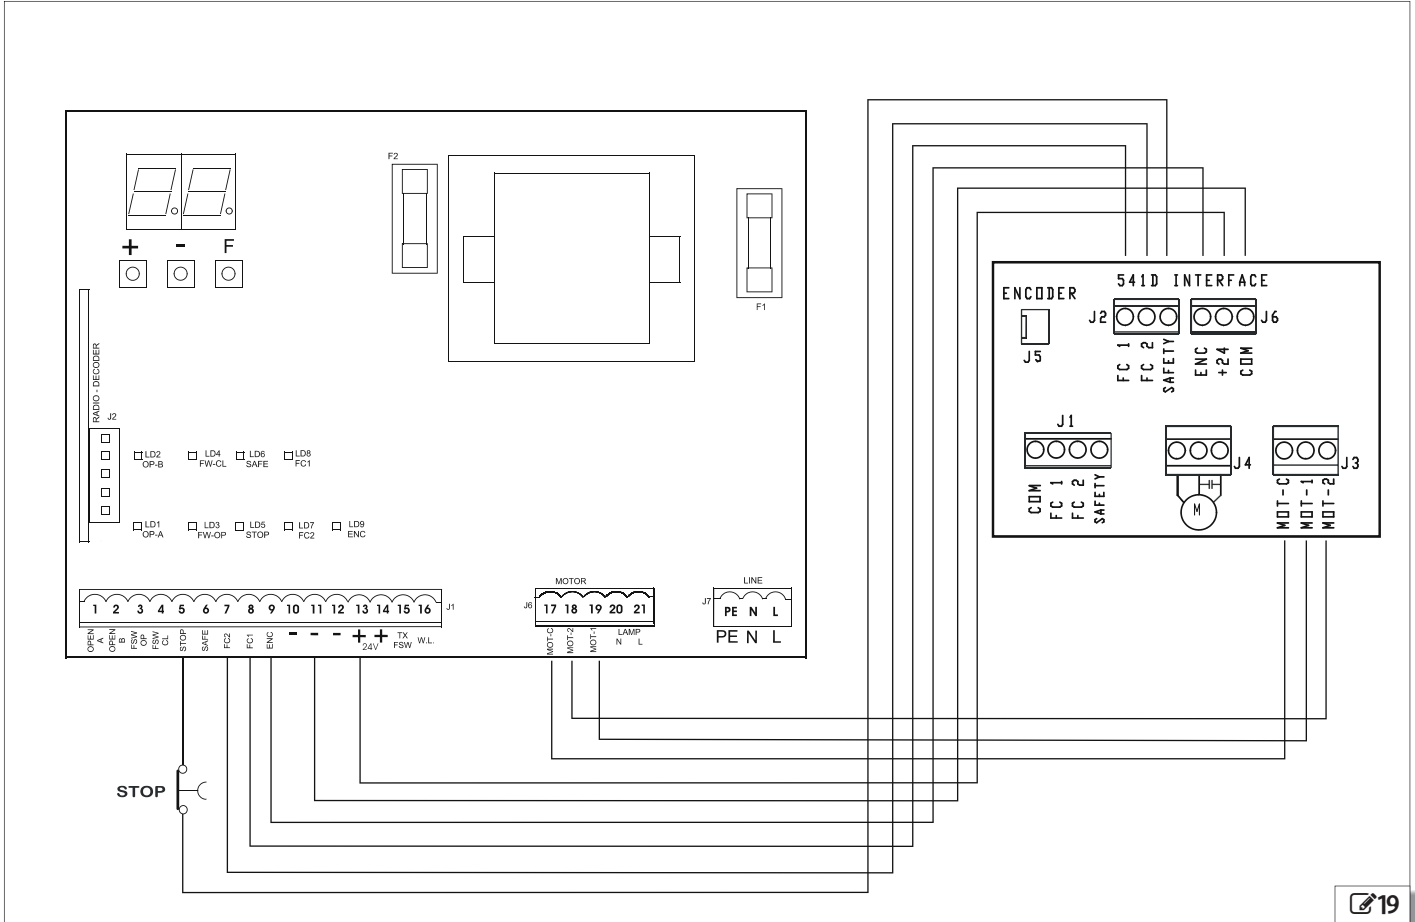

19

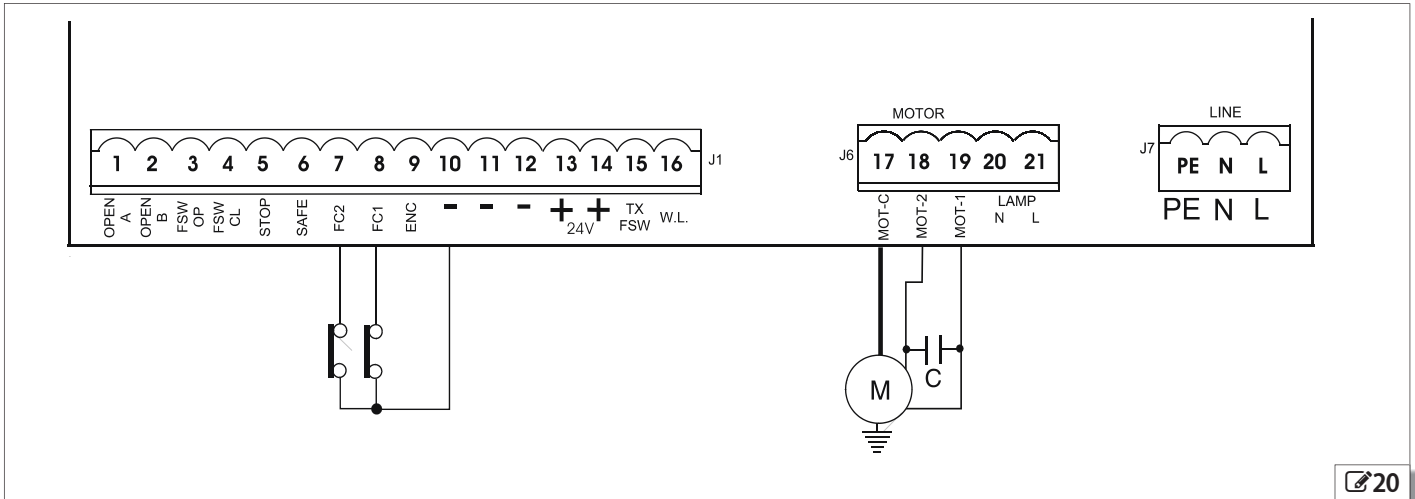

20

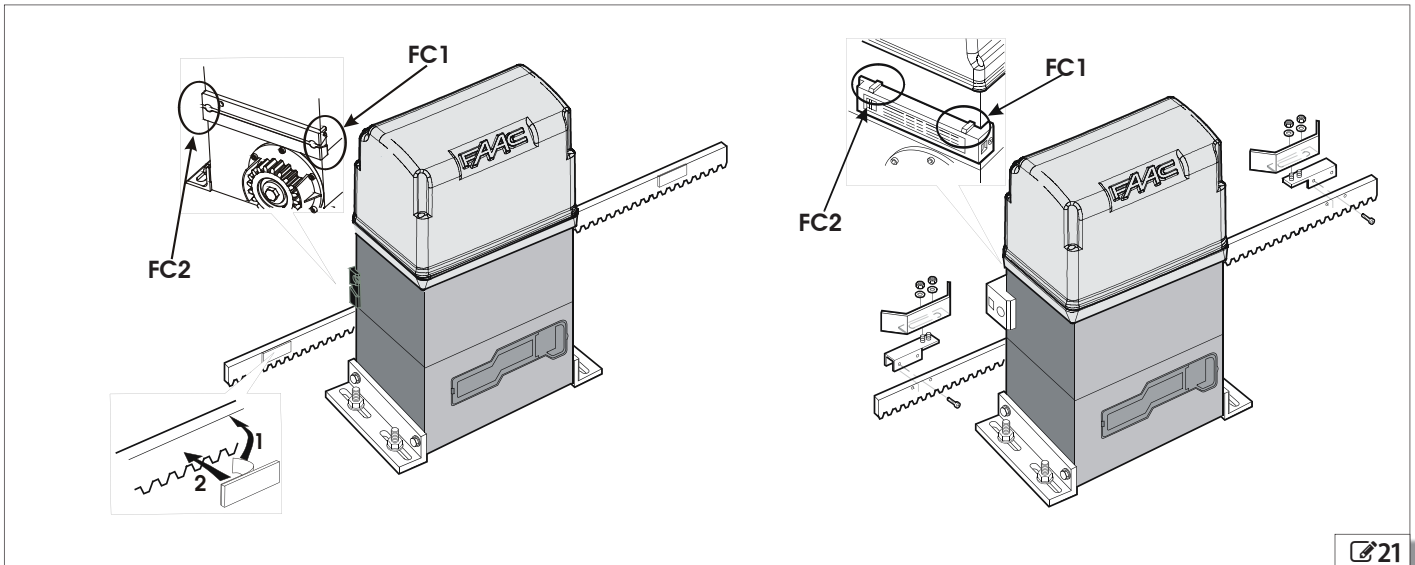

21

5 PROGRAMMING

To program operation of the automated system, you have to access the "PROGRAMMING" mode. Programming is split into two parts: BASIC and ADVANCED.

5.1 BASIC PROGRAMMING

To access BASIC PROGRAMMING, press key **F**:

- if you press it (and hold it down), the display shows the name of the first function.
- if you release the key, the display shows the value of the function that can be modified with keys + and -.
- if you press **F** again (and hold it down), the display shows the name of the next function, etc.
- when you reach the last function, press **F** to exit the program, and the display resumes showing the gate status.

The following table shows the sequence of functions accessible in BASIC PROGRAMMING:

BASIC PROGRAMMING (F)		Default
Display	Function	
LO	FUNCTION LOGICS (see table of logics): A = Automatic AP = "Stepped" automatic S = "Safety" Automatic E = Semi-automatic EP = "Stepped" Semi-automatic C = Dead-man b = "B" Semi-automatic bC = Mixed Log. (B opening / C closing)	EP
PA	PAUSE TIME: This has effect only if the automatic logic was selected. Adjustable from 0 to 59 sec. in one-second steps. Subsequently, display changes to minutes and tens of seconds (separated by a point) and time is adjusted in 10-second steps, up to the maximum value of 4.1 minutes. E.g. if the display shows 2.5, pause time is 2 min. and 50 sec.	2.0
FO	FORCE: Adjusts Motor thrust. 01 = minimum force 50 = maximum force	20
d1	OPENING DIRECTION: Indicates the gate opening movement and makes it possible not to change the motor and limit-switches connections on the terminal board. -3 = Standard opening movement E- = Reverse opening movement	-3
St	STATUS OF AUTOMATED SYSTEM: Exit from programming, save data, and return to gate status viewing 00 = Closed 01 = Now opening 02 = At "STOP" 03 = Open 04 = Pause 05 = "FAIL SAFE" tripped 06 = Now closing 07 = Now reversing 08 = Photocells tripped	

5.2 ADVANCED PROGRAMMING

To access ADVANCED PROGRAMMING, press key **F** and, as you hold it down, press key +:

- if you release key +, the display indicates the name of the first function.
- if you release key **F** too, the display shows the value of the function that can be modified with keys + and -.
- if you press key **F** (and hold it down), the display shows the name of the next function, and if you release it, the value that can be modified with keys + and - is shown.
- when you reach the last function, press **F** to exit the program, and the display resumes showing the gate status.

The following table shows the sequence of functions accessible in ADVANCED PROGRAMMING:

ADVANCED PROGRAMMING (F) + (+)		
Display	Function	Default
bo	MAXIMUM TORQUE AT INITIAL THRUST: The motor operate at maximum torque (ignoring the torque setting) at start of movement. Useful for heavy leaves. y = Active no = Disabled	y
Sr	SLOW MOVEMENT every time power is turned on / restored: y = Enabled no = Not enabled	no
br	FINAL BRAKING: When the gate engages the opening or closing limit-switch, a braking stroke can be selected to ensure the leaf is stopped immediately. If decelerations are selected, braking starts when they finish. At 00 value, braking is disabled. Time can be adjusted from 01 to 20 in 0.01-second steps. 00 = Braking disabled from 01 to 20 = Timed braking	05
FS	FAIL SAFE TEST ON FSW CL AND FSW OP INPUTS: If this function is activated, it enables a function test of the photocells before any gate movement. If the test fails (photocells not serviceable signalled by value 05 on the display), the gate does not start moving. y = Active no = Disabled	no
SA	FAILSAFE TEST ON SAFE INPUT: If active and FS = y, it enables a functional test of the safety devices connected to the SAFE terminal before every gate movement. y = Active no = Disabled	no
PF	PRE-FLASHING (5 s.): Activates the flashing lamp for 5 seconds before start of movement. no = Disabled op = only before opening cl = only before closing ol = before every movement	no

Display	Function	Default	Display	Function	Default
SP	<p>INDICATOR-LIGHT: If 00 is selected, the output functions as a standard indicator-light (lighted at opening and pause, flashing at closing, and off when gate closed).</p> <p>Courtesy light: Different figures correspond to timed activation of the output, which can be used (by a relay) to power a courtesy lamp. Time can be adjusted from 1 to 59 sec. in 1-second steps, and from 1.0 to 4.1 min. in 10-second steps.</p> <p>Electric lock command and 'traffic lights' functions: If you press key - from the 00 setting, the command for the E1 closing electric lock is activated; If you press - again, the command for the E2 closing and opening electric lock is set; if you press the - key again, you can set the 'traffic lights' functions E3 and E4. 00 = Standard indicator-light from 01 to 4.1 = Timed output. E1 = electric lock command before opening movement E2 = electric lock command before opening and closing movements E3 = 'traffic lights' function: the output is active in "open" and "open on pause" status and is disabled 3 seconds before the closing manoeuvre starts. Note: there is 3 seconds of pre-flashing before the closing manoeuvre. E4 = 'traffic lights' function: the output is active only in "closed" status.</p> <p>Attention: do not exceed the output's maximum load (24Vdc-3W). If necessary, use a relay and a power supply source outside the equipment.</p>	00	EC	<p>ENCODER: If the encoder is used, you may select its presence. If the encoder is present and enabled, "decelerations" and "partial opening" are controlled by the encoder (see relevant paragraphs). The encoder operates as an anti-crushing device: If the gate strikes an obstacle during opening or closing, the encoder immediately reverses gate leaf movement for 2 seconds. If the encoder operates again during the 2-seconds reversing time, it stops movement (STOP) without commanding any reversing. If no sensor is supplied, the parameter must be set on 00. If there is the encoder, adjust the sensitivity of the anti-crushing system, by varying the parameter between 01 (maximum sensitivity) and 99 (minimum sensitivity). from 01 to 99 = Encoder active and sensitivity adjustment 00 = Encoder disabled</p>	00
			rp	<p>Pre-limit switch DECELERATION: You can select gate deceleration before the opening and closing limit-switches have been tripped. Time can be adjusted from 00 to 99 in 0,1-second steps. If an encoder is used, the adjustment is not determined by time but by motor revs, thus obtaining greater deceleration precision. 00 = Deceleration disabled from 01 to 99 = Deceleration enabled</p>	10
PH	<p>CLOSING PHOTOCELLS LOGIC: Select the tripping mode of the closing photocells. They operate for the closing movement only: they stop movement and reverse it when they are released, or they reverse it immediately. y = Reverse on release no = Reverse immediately to opening</p>	no	ra	<p>Post-limit switch DECELERATION: You can select gate deceleration after the opening and closing limit-switches have been tripped. Time can be adjusted from 00 to 20 in 0.02-second steps. If an encoder is used, the adjustment is not determined by time but by motor revs, thus obtaining greater deceleration precision. 00 = Deceleration disabled from 01 to 20 = Deceleration enabled</p>	05
OP	<p>OPENING PHOTOCELLS LOGIC: Select the tripping mode of the opening photocells. They operate for the opening movement only: they stop the movement and restart it when they are released, or they reverse it immediately. y = Reverse immediately to closing no = Restart movement on release</p>	no	PO	<p>PARTIAL OPENING: You can adjust the width of partial leaf opening. Time can be adjusted from 01 to 20 in 1-second steps. If an encoder is used, the adjustment is not determined by time but by motor revs, thus obtaining greater partial-opening precision. For example, with pinion Z20, partial opening can vary from about 60 cm to 4 m.</p>	05

Display	Function	Default
ET	<p>WORK TIME (time-out): We advise you to set a value of 5 to 10 seconds over the time taken by the gate to travel from the closing limit-switch to the opening limit-switch and vice versa. Adjustable from 0 to 59 sec. in one-second steps. Subsequently, display changes to minutes and tens of seconds (separated by a point) and time is adjusted in 10 second steps, up to a maximum value of 4.1 minutes. Attention: the set value does not exactly match the motor's maximum operating time, because the latter is modified according to the performed deceleration spaces.</p>	2.0
AS	<p>ASSISTANCE REQUEST (combined with next function): If activated, at the end of countdown (settable with the next function i.e. "Cycle programming") it effects 2 sec. (in addition to the value already set with the PF function) of pre-flashing at every Open pulse (job request). Can be useful for setting scheduled maintenance jobs. Y = Active no = Disabled</p>	no
nc	<p>CYCLE PROGRAMMING: For setting countdown of system operation cycles. Settable (in thousands) from 00 to 99 thousand cycles. The displayed value is updated as cycles proceed. This function can be used to check use of the board or to exploit the "Assistance request".</p>	00
St	<p>GATE STATUS: Exit from programming, data saving, and return to viewing gate status (see par. 5.1.).</p>	

NB.: modification of programming parameters comes into effect immediately, whereas definitive memory storage occurs only when you exit programming and return to gate status viewing. If the equipment is powered down before return to status viewing, all modifications will be lost. To restore the default settings of the programming disconnect terminal strip J1, press the three buttons +, -, F simultaneously and keep them pressed for 5 seconds.

6 START-UP

6.1 Inputs check

The table below shows the status of the LEDs in relation to the status of the inputs.

Note the following: **LED LIGHTED** = closed contact

LED OFF = open contact

Check the status of the LEDs as per Table.

Operation of the signalling status LEDs

LEDS	LIGHTED	OFF
OP-A	Command activated	Command inactive
OP-B	Command activated	Command inactive
FC1	Limit-switch free	Limit-switch engaged
FC2	Limit-switch free	Limit-switch engaged
FW OP	Safety devices disengaged	Safety devices engaged
FW CL	Safety devices disengaged	Safety devices engaged
STOP	Command inactive	Command activated
SAFE	Safety devices disengaged	Safety devices engaged
ENC	Flashes while the motor rotates	

N.B.:

- The status of the LEDs while the gate is closed at rest are shown in bold.
- If the Encoder sensor is not installed, the ENC LED is always OFF.
- If you select the reverse opening direction (see par.5.1), the operation of the limit-switches is also reversed. Therefore, in closed status, the engaged limit-switch will be FC1 (LED OFF).

6.2 Installation using sliding gate operators

When you have made the connections between the 578D equipment and the on-board operator interface board, and have fitted the travel-limit plates on the rack (see operator instructions), check opening direction and limit-switch efficiency, as follows:

- Power up the system.
- Select the opening direction (see par.5.1.). If you look at the gate from the side where the operator is installed, the opening movement should be from left to right - if it is, select the standard direction, otherwise select the reverse direction.**
- Set parameter EC on 00 (see par.5.2).
- When you made the modifications, exit programming, return to inputs viewing and then power down and power up the system.
- Release the operator and, sliding the gate manually, check the efficiency of the limit-switches, controlling the status LEDs of the inputs (see par.6.1). If you look at the gate from the side where the operator is installed, the FC1 LED should go off when the stop position of the left to right movement is reached, and FC2 should go off when the stop position of the right to left movement is reached (also see fig.21).
- Lock the operator about midway along its travel.
- Give an OPEN A command and check if the gate moves in opening direction. If it does not, lock the movement and, after cutting the power to the system, change over the wires connected to terminals of MOT-1 and MOT-2.

DECELERATION - The deceleration is carried out only after a complete cycle has taken place from one limit switch to the other.

Each time the power is turned on/restored, the cycles carried out before the complete movement take place at normal or slow speed according to parameter **5r** in advanced programming.

NOTE - For motors with an inductive sensor (746 and 844) take care over setting post-limitswitch deceleration and braking: if deceleration is too long or braking is insufficient, the plate fitted on the gate rack can go beyond the sensor until it disengages the sensor. When the gate is stopped, check if only the limit-switch involved is engaged. The relevant LED must be off. If it went off and then re-lighted, or if both the LEDs of the limit-switches are off, reduce the post-limitswitch deceleration value and/or increase braking value.

6.3 Installation using the 541 operator

When you have made the connections between the 578D equipment and the on-board operator interface board, and have adjusted the limit-switches (see operator instructions), check opening direction as follows:

- Cut power to the system.
- Release the operator and partially open the door.
- Lock the operator, power up the system again and command opening. If the door begins its closing movement, change opening direction (see Par.5.1). After you have changed it, return to viewing automated system status, and then power down and power up the equipment.

NOTE - For perfect installation of the 578D equipment, using sectional doors operator 541, take care over the following aspects:

OPERATING LOGIC (L0) :

If you wish to control the operator 541 by using an UP and DOWN push-button, you have to use the following logics: B , C , B/C . (REFER TO THE TABLES OF THE LOGICS)

DECELERATION BEFORE (rP) AND AFTER TRAVEL-STOP (rR) AND PARAMETER S_r :

NOTE: NEVER INCREASE THE DEFAULT VALUE OF THE AFTER TRAVEL-STOP (rR), SET ON THE CONTROL BOARD

The reduction of the operator's speed during deceleration also reduces the force it can deliver. If the door is not well balanced, 541 may not be able to perform deceleration at opening (door with strong tendency to close) or at closing (door with strong tendency to open), because the delivered force is not sufficient to overcome the imbalance. **In this case, 0 must be set as the pre- and post-limitswitch deceleration value and S_r must be set to no (see advanced programming in Par.5.2),** because a different value could prevent the limit-switch being reached or prevent reversal of motion following tripping of the anti-crushing system.

ANTI-CRUSHING SAFETY DEVICE DURING CLOSING:

Although it has an Encoder sensor, the 541 operator cannot intrinsically guarantee this safety device, because it is not fitted directly on the door, but acts on the rope winding shaft. Therefore, the ENCODER sensor cannot detect any obstacle during closing. In this connection, we recommend to observe current legal regulations for protecting the lower part of the door.

6.4 Installation with three-phase operator (ES: 541 3ph)

DECELERATION BEFORE (rP) AND AFTER TRAVEL-STOP (rR) AND PARAMETER S_r :

Always set to 0 (ZERO) the deceleration parameters for the values: before and after travel-stop and set to no the parameter S_r

$$rP = 0 \quad rR = 0 \quad S_r = 0$$

FINAL BRAKING (br) :

Always set to 0 (ZERO) the final braking parameter

$$br = 0$$

7 FINAL OPERATIONS

At end of programming, run a few complete cycles to check if the automated system and the accessories connected to it are operating correctly, giving special attention to safety devices, operator thrust force adjustment, and to the anti-crushing device (Encoder sensor). Hand over the "User's guide" page (in the operator instructions) to the customer, and describe how the system works, as well as the operator release and locking operations indicated in the said guide.

Tab. 3/a

Logic "A"		PULSES					
GATE STATUS	OPEN-A	OPEN-B	STOP	OPENING SAFETY DEVICES	CLOSING SAFETY DEVICES	OP/CL SAFETY DEVICE	EDGE SAFETY DEVICE
CLOSED	Opens the leaf and closes it after pause time (1)	Opens leaf for the partial opening time and closes after pause time (1)		No effect (OPEN disabled)	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)
OPEN ON PAUSE	Reloads pause time (1) (3)			No effect (if on part.opng. OPEN A disabled)	Reloads pause time (1) (3)	Reloads pause time (1) (OPEN disabled)	Reloads pause time (1) (OPEN disabled)
CLOSING	Re-opens the leaf immediately (1)		Stops operation	No effect (saves OPEN)	See paragraph 5.2.	Locks and, on release, reverses to open	Reverses to open for 2" (2)
OPENING	No effect (1) (3)			See paragraph 5.2	No effect	Locks and, on release, continues opening	Reverses to close for 2" (2)
LOCKED	Closes the leaf (3)		No effect (OPEN disabled)	No effect	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)

Tab. 3/b

Logic "AP"		PULSES					
GATE STATUS	OPEN-A	OPEN-B	STOP	OPENING SAFETY DEVICES	CLOSING SAFETY DEVICES	OP/CL SAFETY DEVICE	EDGE SAFETY DEVICE
CLOSED	Opens the leaf and closes it after pause time	Opens leaf for the partial opening time and closes after pause time		No effect (OPEN disabled)	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)
OPEN ON PAUSE	Stops operation (3)			No effect (if on part.opng. OPEN A disabled)	Reloads pause time (3) (OPEN disabled)	Reloads pause time (OPEN disabled)	Reloads pause time (OPEN disabled)
CLOSING	Re-opens the leaf immediately		Stops operation	No effect (saves OPEN)	See paragraph 5.2	Locks and, on release, reverses to open	Reverses to open for 2" (2)
OPENING	Stops operation (3)			See paragraph 5.2	No effect	Locks and, on release, continues opening	Reverses to close for 2" (2)
LOCKED	Closes the leaf (with Closing Safety devices engaged, opens at the 2nd pulse) (3)		No effect (OPEN disabled)	No effect	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)

Tab. 3/c

Logic "S"		PULSES					
GATE STATUS	OPEN-A	OPEN-B	STOP	OPENING SAFETY DEVICES	CLOSING SAFETY DEVICES	OP/CL SAFETY DEVICE	EDGE SAFETY DEVICE
CLOSED	Opens the leaf and closes it after pause time	Opens leaf for the partial opening time and closes after pause time		No effect (OPEN disabled)	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)
OPEN ON PAUSE	Re-closes the leaf immediately (3)			No effect (if on part.opng. OPEN A disabled)	On release, closes after 5" (OPEN disabled) (3)	On release, closes after 5" (OPEN disabled)	Reloads pause time (OPEN disabled) (1)
CLOSING	Re-opens the leaf immediately		Stops operation	No effect (saves OPEN)	See paragraph 5.2	Locks and, on release, reverses to open	Reverses to open for 2" (2)
OPENING	Re-closes the leaf immediately (3)			See paragraph 5.2	No effect (saves OPEN)	Locks and, on release, continues opening	Reverses to close for 2" (2)
LOCKED	Closes the leaf (3)		No effect (OPEN disabled)	No effect	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)

Tab. 3/d

Logic "E"		PULSES					
GATE STATUS	OPEN-A	OPEN-B	STOP	OPENING SAFETY DEVICES	CLOSING SAFETY DEVICES	OP/CL SAFETY DEVICE	EDGE SAFETY DEVICE
CLOSED	Opens the leaf	Opens leaf for the partial opening time		No effect (OPEN disabled)	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)
OPEN	Re-closes the leaf immediately (3)			No effect (if on part.opng. OPEN A disabled)	No effect (OPEN disabled) (3)	No effect (OPEN disabled)	No effect (OPEN disabled)
CLOSING	Re-opens the leaf immediately		Stops operation	No effect (saves OPEN)	See paragraph 5.2	Locks and, on release, reverses to open	Reverses to open for 2" (2)
OPENING	Stops operation (3)			See paragraph 5.2	No effect	Locks and, on release, continues opening	Reverses to close for 2" (2)
LOCKED	Closes the leaf (with Closing Safety devices engaged, opens at the 2nd pulse) (3)		No effect (OPEN disabled)	No effect	No effect	No effect (OPEN disabled)	No effect (OPEN disabled)

Tab. 3/ e

Logic "EP"	PULSES				
	OPEN-A	OPEN-B	STOP	OPENING SAFETY DEVICES	CLOSING SAFETY DEVICES
GATE STATUS					
CLOSED	Opens the leaf	Opens leaf for the partial opening time	No effect (OPEN disabled)	No effect (OPEN disabled)	No effect (OPEN disabled)
OPEN	Re-closes the leaf immediately (3)		No effect (if on part. opng. OPEN A disabled)	No effect (OPEN disabled) (3)	No effect (OPEN disabled)
CLOSING	Stops operation		Stops operation	See paragraph 5.2 (saves OPEN)	Locks and, on release, reverses to open (2)
OPENING	Stops operation (3)			See paragraph 5.2	Locks and, on release, reverses to close for 2" (2)
LOCKED	Restarts movement in reverse direction (always closes after a Stop) (3)		No effect (OPEN disabled)	No effect (if it must open, it disables OPEN)	No effect (OPEN disabled)

Tab. 3/ f

Logic "C"	PULSES				
	OPEN-A (opening)	OPEN-B (closing)	STOP	OPENING SAFETY DEVICES	CLOSING SAFETY DEVICES
GATE STATUS					
CLOSED	Opens the leaf	No effect (OPEN-A disabled)	No effect (OPEN-A disabled)	No effect	No effect (OPEN-A disabled)
OPEN	No effect (OPEN-B disabled)	Closes the leaf	No effect (OPEN-A/B disabled)	No effect (OPEN-A disabled)	No effect (OPEN-B disabled)
CLOSING	Stops operation	/	Stops operation	No effect	Stops operation (OPEN-A/B disabled)
LOCKED	/	Stops operation		Stops operation (OPEN-A disabled)	Stops operation (OPEN-A/B disabled)

Tab. 3/ g

Logic "B"	PULSES				
	OPEN-A (opening)	OPEN-B (closing)	STOP	OPENING SAFETY DEVICES	CLOSING SAFETY DEVICES
GATE STATUS					
CLOSED	Opens the leaf	No effect	No effect (OPEN-A disabled)	No effect	No effect (OPEN-A disabled)
OPEN	No effect	Closes the leaf	No effect (OPEN-B disabled)	No effect	No effect (OPEN-B disabled)
CLOSING	Reverses to open	No effect	Stops operation	No effect (saves OPEN-A)	Stops operation (OPEN-B disabled)
OPENING	No effect	No effect	No effect	Stops operation (OPEN-A disabled)	No effect
LOCKED	Opens the leaf	Closes the leaf	No effect (OPEN-A/B disabled)	No effect (OPEN-A disabled)	No effect (OPEN-B disabled)

Tab. 3/ h


Logic "B/C"	PULSES				
	OPENING PULSE/CLOSING HOLD TO RUN CONTROLS	OPEN-A (opening)	OPEN-B (closing)	STOP	OPENING SAFETY DEVICES
GATE STATUS					
CLOSED	Opens the leaf	No effect	No effect (OPEN A disabled)	No effect	No effect (OPEN A disabled)
OPEN	No effect	Closes the leaf	No effect (OPEN B disabled)	No effect	No effect (OPEN B disabled)
CLOSING	Reverses to open	No effect	Stops operation	No effect (saves OPEN A)	Stops operation (OPEN-B disabled)
OPENING	No effect	No effect	No effect	Stops operation (OPEN-A disabled)	No effect
LOCKED	Opens the leaf	Closes the leaf	No effect (OPEN A/B disabled)	No effect (OPEN A disabled)	No effect (OPEN A/B disabled)


(1) If maintained, it prolongs the pause until disabled by the command (timer function)

(2) If a new pulse occurs within 2 seconds after reversing, it immediately stops operation.

(3) During the partial opening cycle, an OPEN A pulse causes total opening.

NB.: Effects on other active pulse inputs in brackets.

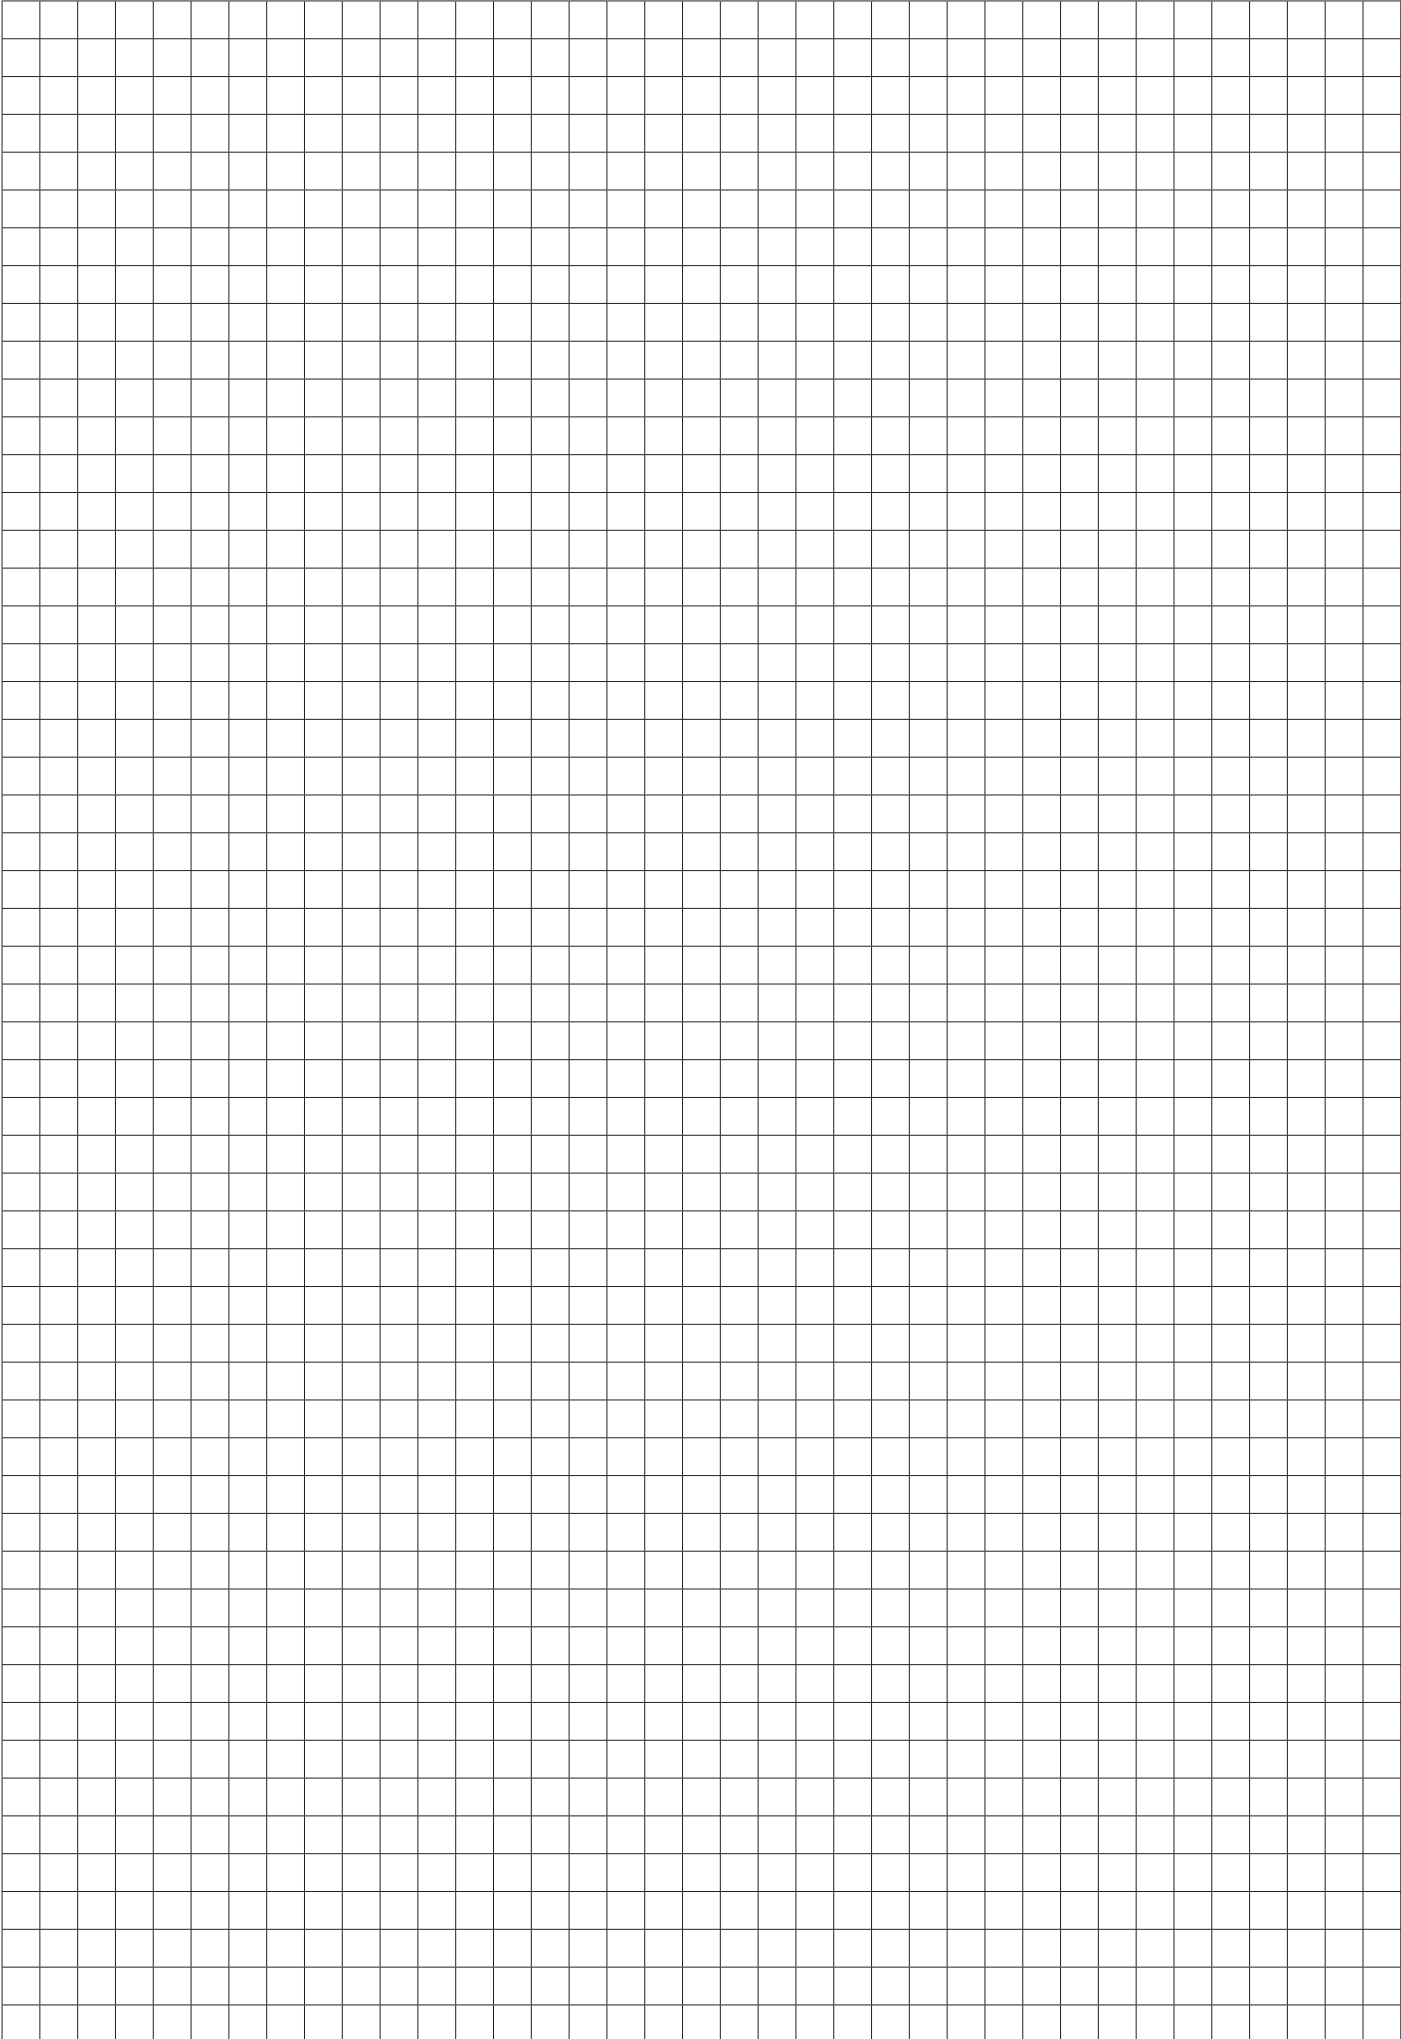

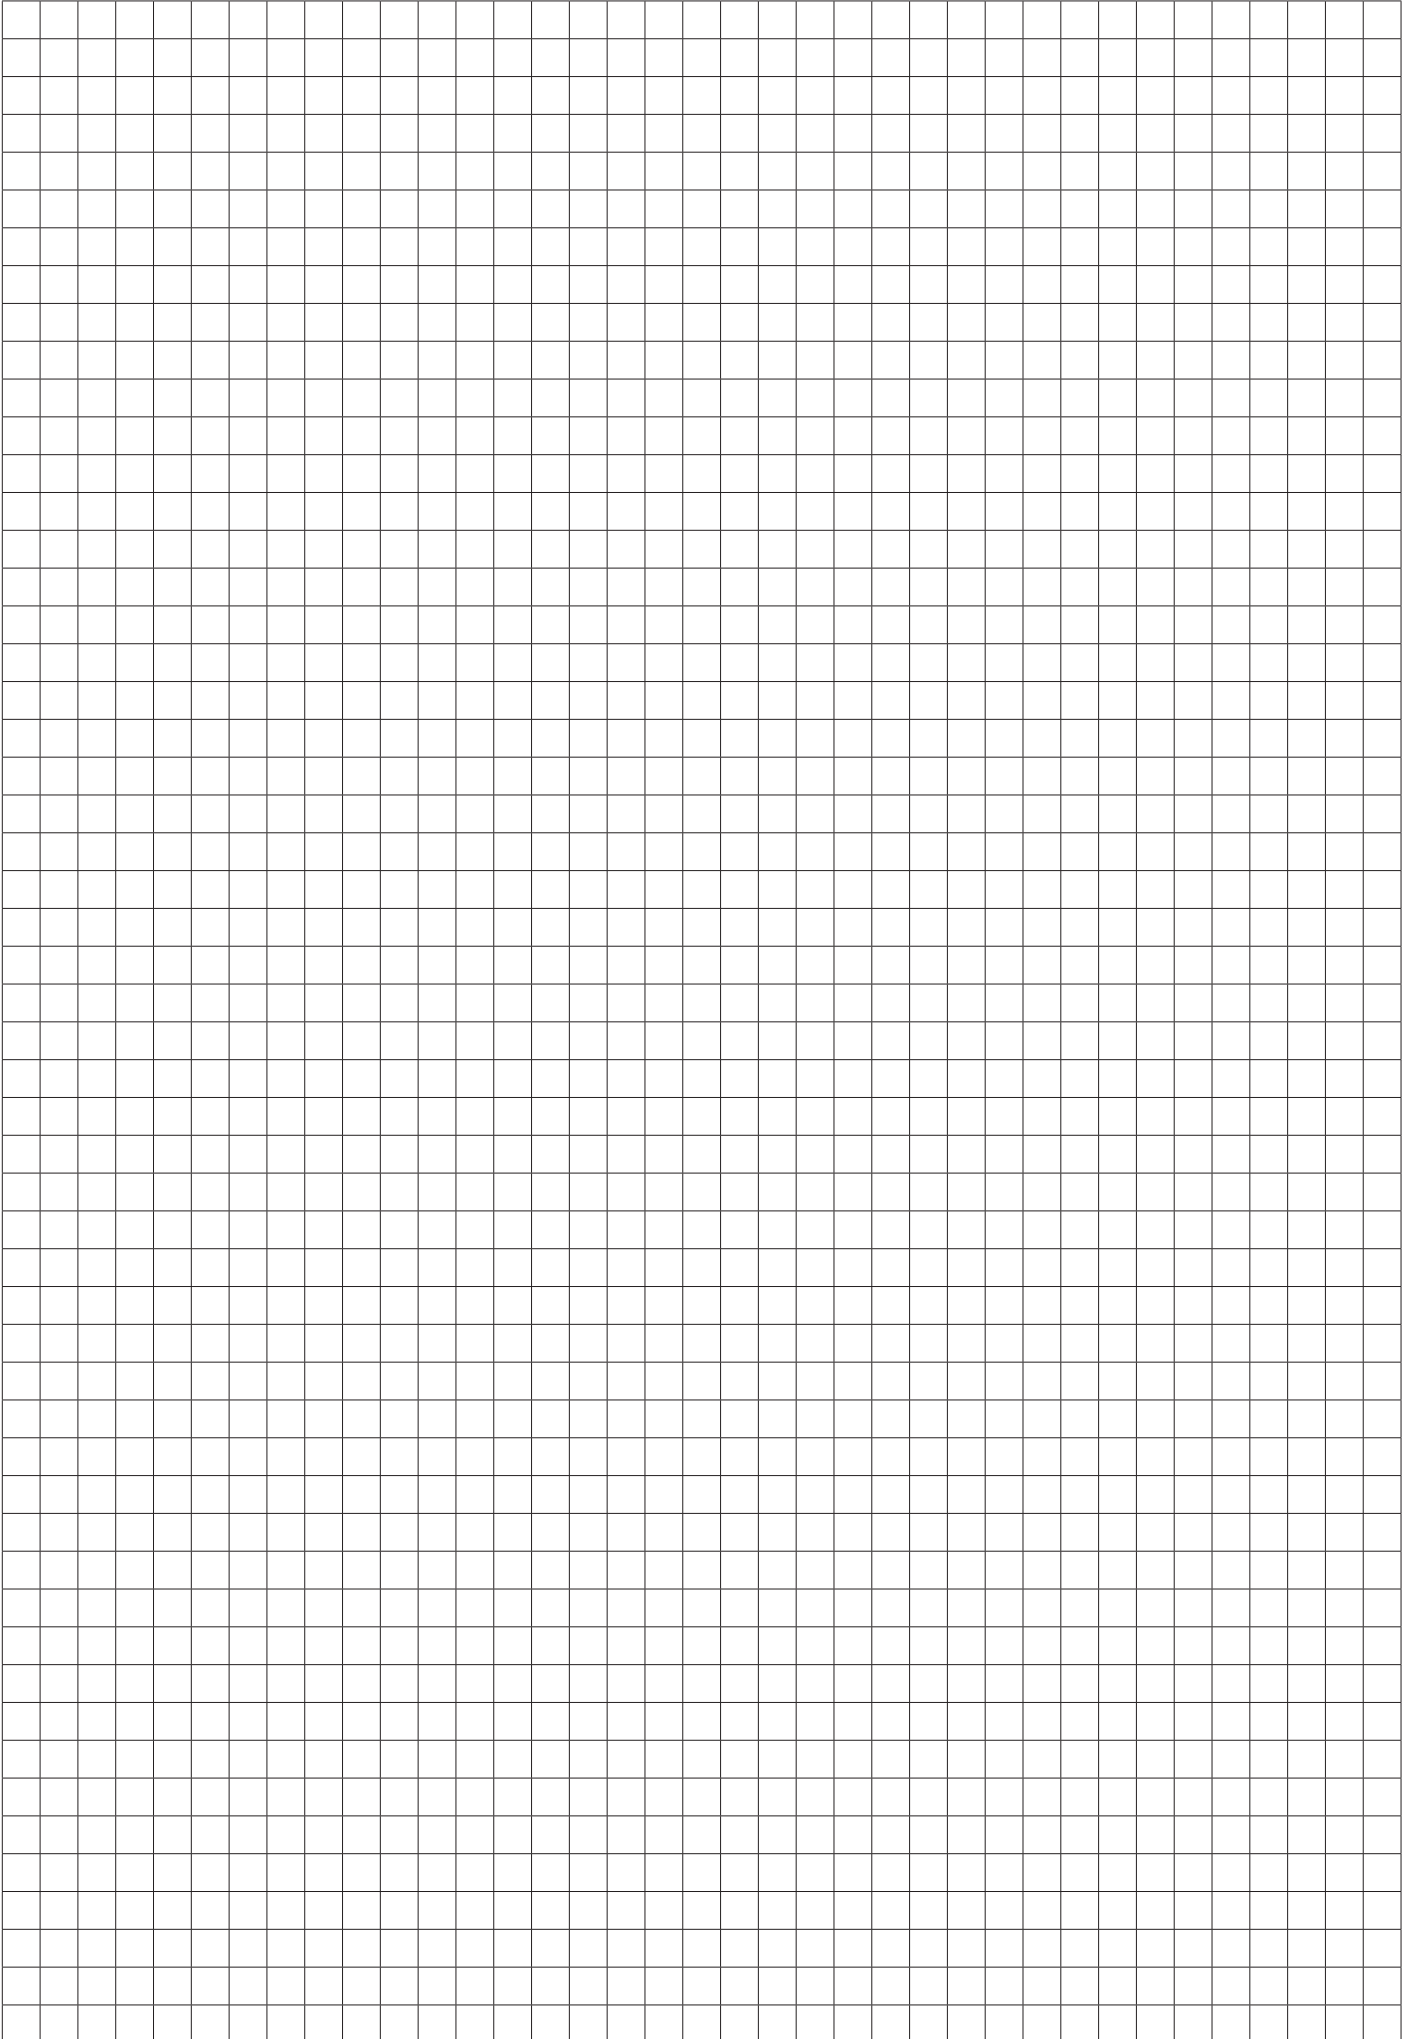



FAAC S.p.A. Soc. Unipersonale
Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY
Tel. +39 051 61724 - Fax +39 051 09 57 820
www.faac.it - www.faacgroup.com