

16/8/4CH MPEG-4 DVR

~Digital Video Recorder~

Real time performance 30IPS (N) / 25IPS (P) per channel

4CH



16CH / 8CH / 4CH



16CH / 8CH / 4CH Built-in DVD-RW Writer or CD-RW Writer



User's Manual

Please read instructions thoroughly before operation and retain it for future reference.

IMPORTANT SAFEGUARD



CAUTION

RISK OF ELECTRIC SHOCK



CAUTION:

To reduce the risk of electric shock, do not expose this apparatus to rain or moisture.

Only operate this apparatus from the type of power source indicated on the label.

The company shall not be liable for any damages arising out of any improper use, even if we have been advised of the possibility of such damages.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance-(servicing) instructions in the literature accompanying the appliance.



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive, which means our manufacture processes and products are strictly "lead-free" and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste.



CE Mark

This apparatus is manufactured to comply with the radio interference requirements.

We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. The content of this manual is subject to change without notice.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Note: Firmware Version: 1066-10-J4-04-AA-12; AP Version: 1046

Note: For any changes of AP, please refer to your distributor.

Note: Any changes of this manual made to the actual product are subjects to no further notification.

TABLE OF CONTENTS

PARTS AND FEATURES

1.1 FEATURES	1
1.2 PACKAGE CONTENTS	1
1.3 SPECIFICATION	2
1.4 FRONT PANEL	4
1.5 REAR PANEL	8

GETTING STARTED

2.1 GETTING STARTED	10
---------------------------	----

BASIC OPERATION

3.1 RECORDING	11
3.2 PLAYBACK	12

DETAILED MENU CONFIGURATION

4.1 MENU TREE	14
4.2 MAIN MENU OPTIONS_RECORD	15
4.3 MAIN MENU OPTIONS_TIMER	16
4.4 MAIN MENU OPTIONS_DATE	17
4.5 MAIN MENU OPTIONS_ADVANCE	18
4.6 ADVANCE MENU_CAMERA	18
4.7 ADVANCE MENU_DETECTION	19
4.8 ADVANCE MENU_DISPLAY	21
4.9 ADVANCE MENU_ALERT	22
4.10 ADVANCE MENU_REMOTE	23
4.11 ADVANCE MENU_SYSTEM	24
4.12 ADVANCE MENU_NETWORK	25
4.13 ADVANCE MENU_BACKUP	26
4.14 ADVANCE MENU_HDD INFO	28
4.15 ADVANCE MENU_EVENT LOG	28

ADDITIONAL OPERATION

5.1 SEARCH	29
5.2 2X DIGITAL ZOOM	30
5.3 KEY LOCK	30
5.4 SWITCH THE N/P SYSTEM	30
5.5 USB UPGRADE	31
5.6 LICENSED SOFTWARE AP	31
INSTALL THE SOFTWARE	31
AP BASIC OPERATION	32
AP ADVANCED SETTING	37
Network	37
DDNS	38
MAIL	39
FTP	39
DVR-CAMERA SETTING	40
DEVICE	40
DETECTION	41
NETWORK BACKUP & PLAYBACK	42
SEARCH LIST	43
TIMER RECORD	43
DATE	44
RECORD SETTING	44
ALARM	45
GENERAL	45
ACCOUNT	46
ONLINE USER INFO	46
FILE PATH	46
5.7 OPERATION VIA IE BROWSER	47
5.8 OPTIONAL PHERIPHERALS	48

TROUBLE SHOOTING

6.1 FAQ	48
---------------	----

<u>APPENDIX #1</u> INSTALL THE HDD	49
<u>APPENDIX #2</u> PIN CONFIGURATION	51
<u>APPENDIX #3</u> RS232 PROTOCOL	53
<u>APPENDIX #3</u> RECORDING TIME TABLE	54
<u>APPENDIX #4</u> COMPATIBLE USB BRAND	55
<u>APPENDIX #5</u> COMPATIBLE HDD BRAND	56

1.1 FEATURES

MPEG4 DVR Technology:

- Compression format providing crystal clear images with real time performance

Multiplex:

- Allow live display, record, playback, backup, and network all at the same time

Long-Recording Hours:

- 500GB can record more than 4 days. (16CH, Frame Best Quality, 120FPS)
- Connect to Independent Disk Array (optional) to have more storage capacity

Backup Function:

- Support file backup with a USB flash drive, DVD WRITER or CD WRITER, and network remote recording & backup
- The backup file via DVD Writer or CD Writer can be played directly in your PC via the supplied licensed AP, or via other media players (Ex: Windows Media Player or RealPlayer) after the file is converted to "AVI" format.

Remote Surveillance:

- Support remote surveillance with the licensed software AP and IE browser
- Web surveillance supports 5 users simultaneously

Intelligent Motion Trigger Recording:

- With advanced motion detection function, scheduled motion detection recording (4 different adjustable factors for motion detection sensitivity) and convenient search function, customized security environments are achieved
- Alarm trigger recording will send alerts with images to designated e-mails and the FTP address
- Support pre-alarm recording (8MB)

Covert Recording:

- A mask replaces the live image with a blank screen & the monitor shows nothing but recording is still on

A/V Support:

- Support 4 audio-in, 2 audio-out to record sounds
- Support VGA output to monitor (optional)

General:

- Support multi-language OSD
- System auto recovery after power reconnected
- IR remote control of the system and PTZ through RS-485
- Support daylight saving function
- Support manual / timer / motion / alarm / network remote recording functions
- Watermark function ensures the authentication of the recorded images
- Support TCP/IP, PPPoE, DHCP and DDNS network connection

1.2 PACKAGE CONTENTS

MODEL	16CH	8CH	4CH	16CH / 8CH / 4CH DVD-RW / CD-RW
Digital Video Recorder	✓	✓	✓	✓
Adapter	✓	✓	✓	✓
Licensed Software AP	✓	✓	✓	✓
IR Transmitter and IR Receiver	✓	✓	Optional	✓
Power and Data Bus	✓	✓	✓	✓
DSUB PIN Connector	✓	✓	✓	✓
Screws	✓	✓	✓	✓

NOTE: Please check the package contents to make sure that you receive all accessories shown above.

1.3 SPECIFICATION

MODEL	16CH / 16CH (D)	8CH / 8CH (D)	4CH / 4CH (D)
Video System	NTSC / PAL (switchable)		
Video Compression Format	MPEG 4		
Video Input (Composite video signal 1 Vp-p 75Ω BNC)	16 Channels	8 Channels	4 Channels
Video Loop Out (Composite video signal 1 Vp-p 75Ω BNC)	16 Channels	8 Channels	4 Channels
Video Output	<u>Main Monitor Output:</u> Composite video signal 1 Vp-p 75Ω BNC <u>Call Monitor Output:</u> Composite video signal 1 Vp-p 75Ω BNC		
Maximum Recording Rate (Frame)	720 × 480 pixels with 120 IPS <NTSC> 720 × 576 pixels with 100 IPS <PAL>	720 × 480 pixels with 60 IPS <NTSC> 720 × 576 pixels with 50 IPS <PAL>	720 × 480 pixels with 30 IPS <NTSC> 720 × 576 pixels with 25 IPS <PAL>
Maximum Recording Rate (CIF)	352 × 240 pixels with 480 IPS <NTSC> 352 × 288 pixels with 400 IPS <PAL>	352 × 240 pixels with 240 IPS <NTSC> 352 × 288 pixels with 200 IPS <PAL>	352 × 240 pixels with 120 IPS <NTSC> 352 × 288 pixels with 100 IPS <PAL>
Adjustable Recording Speed (Frame)	120, 60, 30, 15 IPS <NTSC> 100, 50, 25, 12 IPS <PAL>	60, 30, 15, 7 IPS <NTSC> 50, 25, 12, 6 IPS <PAL>	30, 15, 7, 3 IPS <NTSC> 25, 12, 6, 3 IPS <PAL>
Adjustable Recording Speed (CIF)	480, 240, 120, 60 IPS <NTSC> 400, 200, 100, 50 IPS <PAL>	240, 120, 60, 30 IPS <NTSC> 200, 100, 50, 25 IPS <PAL>	120, 60, 30, 15 IPS <NTSC> 100, 50, 25, 12 IPS <PAL>
Image Quality Setting	Best, High, Normal, and Basic		
Hard Disk Storage (IDE type, ATA66) (over 400GB)	16CH: support HDD * 2 16CH (D): support HDD *1	8CH: support HDD * 2 8CH (D): support HDD *1	4CH: support HDD * 1 4CH (D): support HDD *1
HDD Quick Cleaning	Quick clean up the "index system" of the recorded files. 250GB under 2 seconds		
Recording Mode	Manual / Timer / Motion / Alarm / Remote Network		
Watermark	Yes		
Refresh Rate	480 IPS for NTSC 400 IPS for PAL	240 IPS for NTSC 200 IPS for PAL	120 IPS for NTSC 100 IPS for PAL
Multiplex Operation	live display, record, playback, backup, and network		
Audio I/O	4 audio inputs, 2 audio outputs (Mono)		
Motion Detection Area	16 × 12 grids per camera for all channels		
Motion Detection Sensitivity	4 adjustable variables with precise calculation for motion detection		
Pre-alarm Recording	Yes (8 MB)		
Backup Device	Support USB 1.1/ 2.0 flash drive backup and network remote backup 16CH (D) / 8CH (D) / 4CH (D) models also support DVD-WRITER or CD-WRITER backup		
USB Interface	front panel * 1, back panel * 1		front panel * 1
Web Transmitting Compression Format	Motion JPEG		
Ethernet	10/100 Base-T. Support remote control and live view via Ethernet		
Web Interface	Support licensed software AP, and IE browser		
Remote Alarm Notification	E-mail images, and upload images to FTP site's specific account		
Network Protocol	TCP/IP, PPPoE, DHCP and DDNS		
IR transmitter	Remotely control DVR and PTZ via IR transmitter (RS-485)		(4CH: Optional)
PTZ control	Support PELCO-D protocol		
Dwell Time (Sequential Channel Switch)	Programmable with adjustable dwell time (2, 4, 8, 16 sec.)		
Alarm I/O	16 inputs, 1 output	8 inputs, 1 output	4 inputs, 1 output
Picture Zoom	Support 2X digital zoom function		

MODEL	16CH / 16CH (D)	8CH / 8CH (D)	4CH / 4CH (D)
Specification Continued ...			
Key Lock	Yes		
Video Loss Detection	Yes		
Camera Title	Support up to 6 letters		
Video Adjustable	Hue/Color/Contrast/ Brightness		
Date Display Format	YY/MM/DD, DD/MM/YY, MM/DD/YY, and Off		
Daylight Saving	Yes		
Power Source	DC 19V		
Power Consumption	< 64 W	4CH: <42 W ; 4CH (D): <64 W	
Operating Temperature	10°C ~ 40°C (50°F~104°F)		
Dimensions (mm)	432mm (W) × 90mm (H) × 326mm (D)		4CH: 343mm (W) × 59mm (H) × 223mm (D) 4CH (D): 432mm (W) × 90mm (H) × 326mm (D)
System Recovery	System auto recovery after power reconnected		
Optional Peripherals	Independent Disk Array ; VGA Converter		Independent Disk Array ; VGA Converter ; IR Remote Control

□ Any modifications made to the actual product are subject to change without notice.

— 16CH / 16CH(D)

Total IPS		120	60	30	15
Frame <D1>	Best	109	192	349	565
	High	138	243	442	714
	Normal	182	319	581	939
	Basic	293	516	939	1517
Total IPS		480	240	120	60
CIF	Best	130	229	417	673
	High	184	323	587	949
	Normal	242	424	773	1249
	Basic	335	588	1071	1730

— 8CH / 8CH(D)

Total IPS		60	30	15	7
Frame <D1>	Best	218	384	689	1130
	High	276	486	882	1428
	Normal	364	638	1162	1878
	Basic	586	1032	1878	3034
Total IPS		240	120	60	30
CIF	Best	260	458	834	1346
	High	368	646	1174	1898
	Normal	484	848	1546	2498
	Basic	670	1176	2142	3460

— 4CH / 4CH(D)



Total IPS		30	15	7	3
Frame <D1>	Best	436	767	1398	2260
	High	552	972	1764	2856
	Normal	728	1276	2324	3756
	Basic	1172	2064	3756	6068
Total IPS		120	60	30	15
CIF	Best	520	916	1668	2692
	High	736	1292	2348	3796
	Normal	968	1696	3092	4996
	Basic	1340	2352	4284	6920

※ 1. For 500GB HDD record time (hour)
2. Take outdoor environment as examples.

1.4 FRONT PANEL

- 16CH / 8CH
- 16CH (D) / 8CH (D) / 4CH (D)



- 1) **POWER:**
Press "POWER" button to turn on/ turn off the DVR.
(Under the recording mode, please stop recording before turning off the DVR)
- 2) **MENU:**
Press "MENU" button to enter the main menu.
- 3) **ENTER / RECORD:**
Press "ENTER" button to confirm.
Press "RECORD" to activate the manual recording
- 4) **" + " " - " :**
Press "+" or "-" button to change the setting in the menu / to select the channel.
Press "+" and "-" buttons simultaneously to open / close the DVD / CD WRITER.
- 5) **USB:**
Support firmware update and file backup.
- 6) **LED LIGHT:**
POWER: Power on
STANDBY: Standby
HDD: HDD is reading or recording
HDD Full: HDD is full.
ALARM: Once the alarm is triggered
TIMER: When timer recording is turned on.
REC: Under the recording status
PLAY: Under the playing status
- 7) **MODE  :**
Press "MODE  " button to switch the channel display mode.

- 8) “ ■■ ” :
Press “ ■■ ” button to pause playing files.
- 9) “ ■ ” :
Press “ ■ ” button to stop playing files.
- 10) “ ◀◀ ” :
Under the playback mode, press “ ◀◀ ” button to fast rewind.
- 11) “ ▶▶ ” :
Under the playback mode, press “ ▶▶ ” to fast forward.
- 12) “ZOOM” :
Press “ZOOM” button to enlarge the picture of the selected channel (2X digital zoom).
- 13) “PLAY” :
Press “PLAY” button to play the recorded files.
- 14) “ ▲▼◀▶ ” :
Press “ ▲▼◀▶ ” to move the cursor up / down / left / right.
- 15) “SHIFT” + “SEQ” :
Press “SHIFT” + “SEQ” to activate the call monitor function and press “SEQ” to escape the call monitor mode.
- 16) “SHIFT” + “AUDIO” :
Press “SHIFT” + “AUDIO” to select live or playback sounds of the 4 audio channels.
- 17) “SHIFT” + “SLOW” :
Under the playback mode, press “SHIFT” + “SLOW” to show slow playback.
- 18) “SHIFT” + “CH- “ or “CH+ ” :
Press “SHIFT” + “CH- “ or “CH+ ” to change the setting in the menu / to select the channel.
- 19) “SHIFT” + “SET” :
Press “SHIFT” + “SET” to change the position of the channel display.
Press “ ▲▼◀▶ ” to select the channel you would like to change.
Press “ + ” or “ - ” to select the channel you would like to show.
Press “ENTER” button to confirm.
- 20) “SHIFT” + “SEARCH” :
Press “SHIFT” + “SEARCH” buttons to enter the search mode.
- 21) “ ◀◀ ” + “ ▶▶ ” :
Press “ ◀◀ ” + “ ▶▶ ” buttons at the same time to enter / exit the PTZ control mode.
- 22) “ ◀ ” or “ ▶ ” + “POWER”
Press and hold “ ◀ ” or “ ▶ ”, and press “POWER” to switch to NTSC or PAL system. Please see “5.4 SWITCHING THE N/P SYSTEM” at P.30.







1.4 FRONT PANEL Continued...


● 4CH



- 1) **“HDD Cartridge Lock”** :
Lock / Unlock the cartridge of the HDD.
- 2) **“USB”** :
Support firmware update and file backup.
- 3) **“LED LIGHT”** :

HDD: HDD is reading or recording
HDD Full: HDD is full.
ALARM: Once the alarm is triggered
TIMER: When timer recording is turned on
PLAY: Under the playing status
REC: Under the recording status
- 4) **“MENU”** :
Press “MENU” button to enter the main menu.
- 5) **“ENTER” / “SET”** :
Press “ENTER” button to confirm.
Press “SET” to change the position of the channel display.
Press “▲▼◀▶” to select the channel you would like to change.
Press “+” or “-” to select the channel You would like to show.
- 6) **“SEARCH”** :
Press “SEARCH” button to enter the search mode.
- 7) **“SLOW”** :
Under the playback mode, press “SLOW” button to show slow playback.




- 8) **“ZOOM”** :
Press “ZOOM” button to enlarge the picture of the selected channel (2X digital zoom).
- 9) **“ / “ - ”** :
Press “ “ button to show the 4 channel display mode.
Press “ - ” button to change the setting in the menu.
- 10) **“SEQ” / “ + ”** :
Press “SEQ” button to activate the call monitor function and press “SEQ” button again to escape the call monitor mode.
Press “ + ” button to change the setting in the menu.
- 11) **“POWER”** :
Press this button to turn on / turn off the DVR.
(Under the recording mode, please stop recording before turning off the DVR).
- 12) **“CH1 ” “CH2 ” “CH3 ” “CH4 ”** :
Press the button “1”, “2”, “3” or “4” to select the desired channel.
- 13) **“REC”** :
Press “REC” button to activate the manual recording.
- 14) **“PLAY”** :
Press “PLAY” button to playback the recorded files.
- 15) **“UP / PAUSE , DOWN / STOP, LEFT / FAST REWIND, RIGHT / FAST FORWARD”** :
Press “ “ to move the cursor up / down / left / right.





Under the playback mode, press “ “ button to pause playback.





Under the playback mode, press “ “ button to stop playback.

Under the playback mode, press “ “ button to fast rewind.

Under the playback mode, press “ “ button to fast forward.


- 16) **“ ”** :
 
SLOW ZOOM
Press these two buttons to select live or playback sounds of the 4 audio channels.

- 17) **“ ”** :
 
 | - SEQ. | +
Press these two buttons at the same time to enter / exit the PTZ control mode.


- 18) **“ ” or “ ” + “POWER”**
Press and hold “ ” or “ ”, and press “POWER” to switch to NTSC or PAL system.
Please see “5.4 SWITCHING THE N/P SYSTEM” at P.30.

1.5 REAR PANEL


● 16CH / 16CH (D)

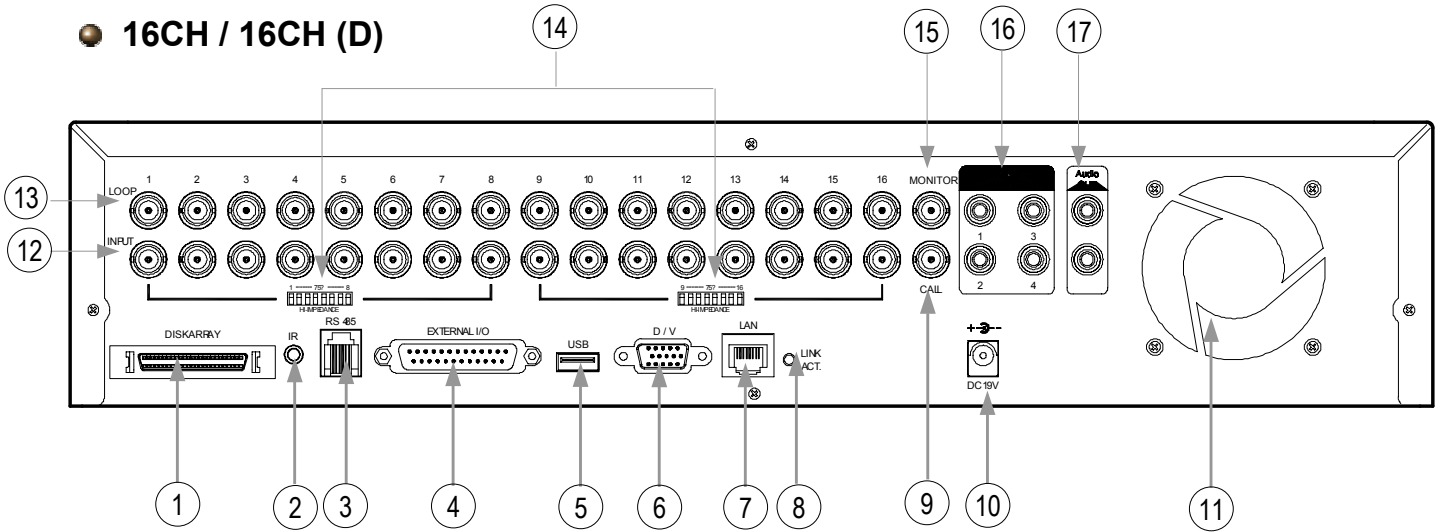


● 8CH / 8CH (D)

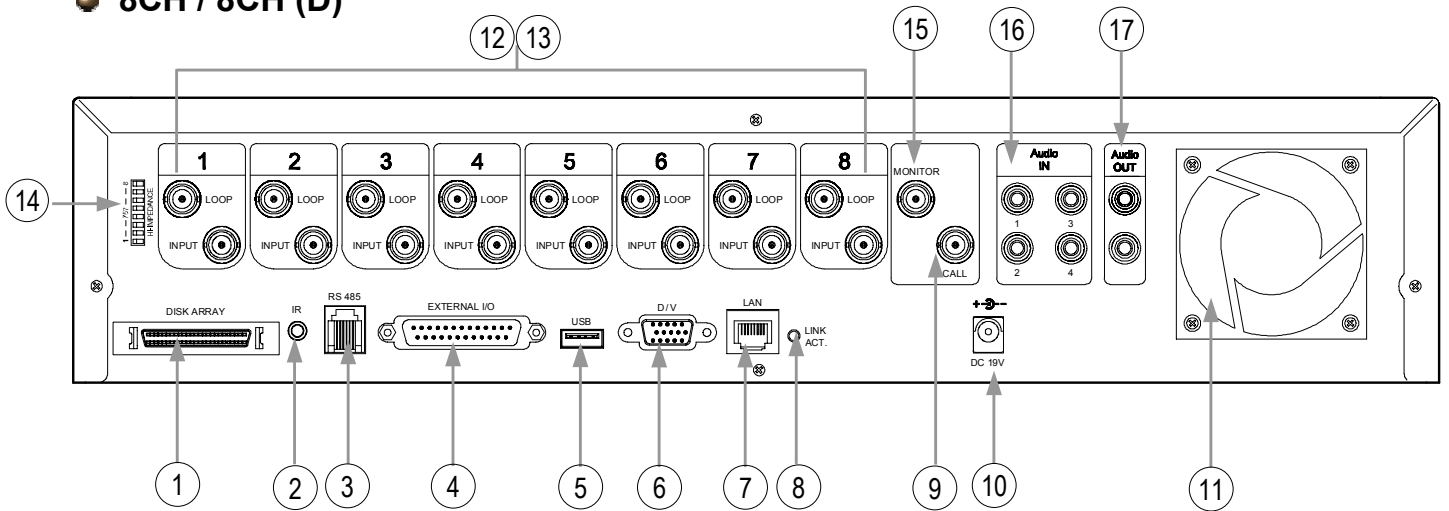

● 4CH / 4CH (D)

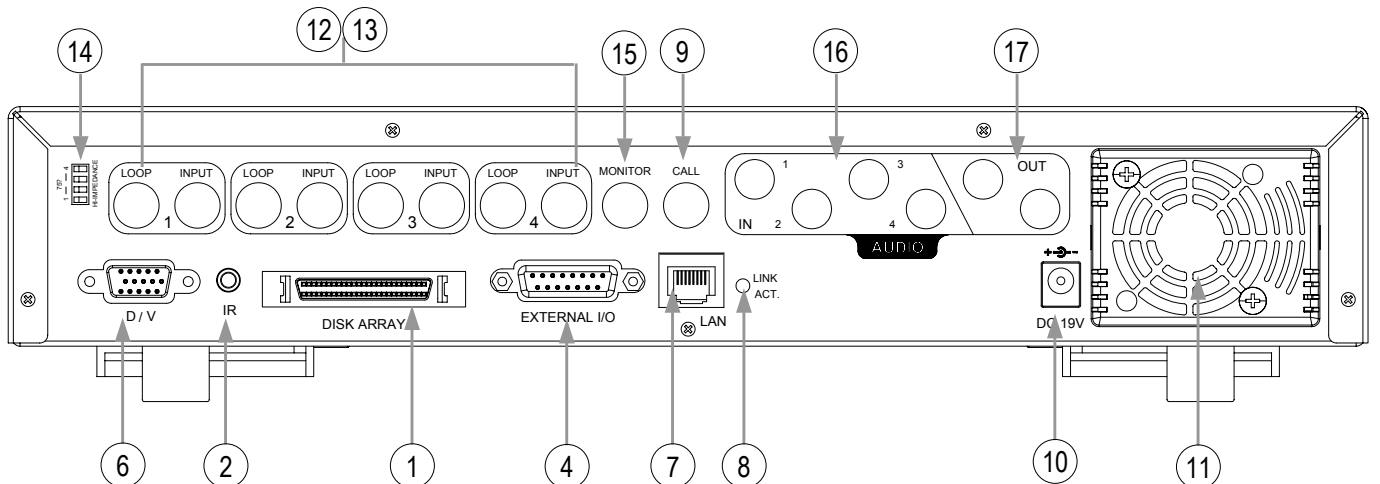

- 1) **DISK ARRAY PORT:**
Connect to one disk array for extending HDD capacity.
- 2) **IR PORT:**
Connect to the IR receiver.
- 3) **RS485 PORT:**
Connect to external devices (such as PTZ camera) with RS485-A and RS485-B.
- 4) **EXTERNAL I/O PORT:**
Insert the supplied 15PIN DSUB to this port for connecting external devices (alarm input, external alarm, PTZ camera).
For detailed I/O port PIN configuration, please refer to Appendix #2.
- 5) **USB PORT:**
Support firmware update and file backup.
- 6) **D/V PORT (Digital Video Port):**
Connect to a VGA converter card.
- 7) **LAN:**
Connect to Internet by a LAN cable.
- 8) **LINK / ACT LED light:**
When the Internet is activated, the LED light will be on.
- 9) **CALL MONITOR:**
Connect to CALL monitor. Show the channel switch display. When the alarm is triggered, the call monitor will show the image of the triggered channel for a period of time.
- 10) **POWER:**
Connect to the provided adapter.
- 11) **FAN:**
For ventilation.
- 12) **VIDEO INPUT (CHANNEL 1 – 16 / CHANNEL 1 – 8 / CHANNEL 1 – 4):**
Connect to video sources, such as cameras.
- 13) **LOOP (CHANNEL 1 – 16 / CHANNEL 1 – 8 / CHANNEL 1 – 4):**
Video output.
- 14) **75Ω / HI-IMPEDANCE:**
When using Loop function, please switch to HI-IMPEDANCE. When you don't use Loop function, please switch to 75Ω.
- 15) **MONITOR:**
Connect to the Main monitor.
- 16) **AUDIO IN (1-4):**
Connect to audio sources, such as cameras equipped with the audio function.
When users start the recording function, the audio input will be recorded.
- 17) **AUDIO OUT:**
Connect to a monitor or speaker with 2 mono audio outputs from the same source.

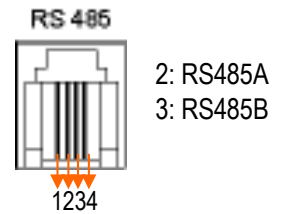

2.1 GETTING STARTED



Connect all the devices to construct a surveillance.

- 1) Install HDD:
The HDD must be installed before the DVR is turned on. Please refer to Appendix #1 for HDD installation instructions.
- 2) Connect cameras, monitors and external devices. Please refer to "Section 1.5 Rear Panel" for connection, and Appendix#2 for pin configurations of the external I/O port.

NOTE: Be sure the cameras are connected and power-supplied before the DVR is powered on. Otherwise the DVR will not be able to detect N/P system automatically.



- 3) Connect the AC power cord to power adapter and plug into an electrical outlet.
The standby LED would be on as red. Press the "POWER" button.
The power LED will be on as red.
It takes approximately 10 to 15 seconds to boot the system.

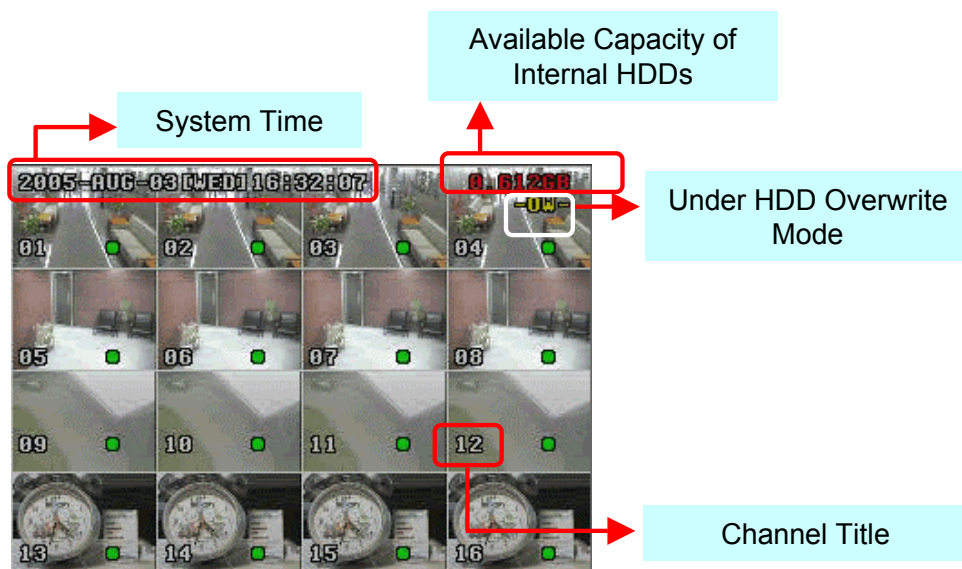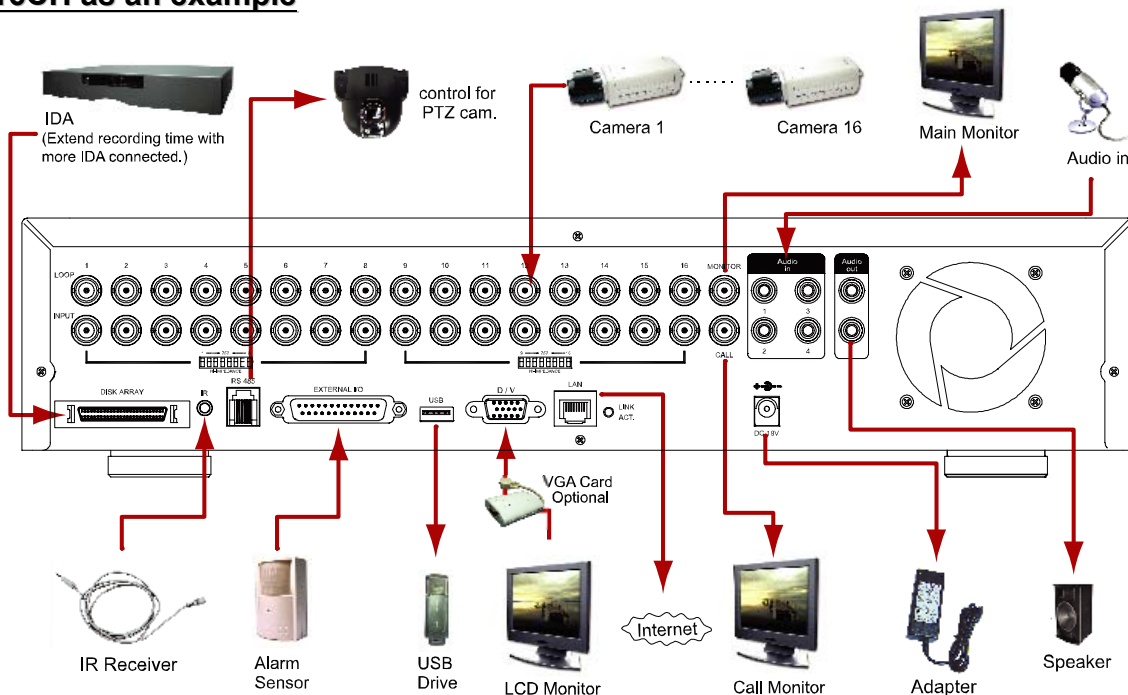Take 16CH as an example



3.1 RECORDING

The DVR offers three recording modes: manual record, event record and timer record. If the power is off accidentally, recorded video files will still be stored in the HDDs. The DVR will return to its original recording status after the power is on again.


- 1) **MANUAL RECORDING** (continuous recording):
Recording is initiated by manually pressing the “REC” button, indicated by the sign “●”.
- 2) **EVENT RECORDING** (triggered by motion and external alarm):
When this function is activated, the recording is triggered by a motion or external alarm, indicated by the sign “” (motion) and “” (external alarm).
- 3) **TIMER RECORDING** (scheduled time):
Recording is scheduled by Timer, indicated by the words “**TIMER RECORD**”.

There must be at least 8192 images of recorded data for playback to work properly. If not, your DVR will stop the playback. For example, if the IPS is set to 30, the recording time should be at least 273 seconds (8192 images / 30 IPS) for the playback to work properly.

Take 16CH as an example

NOTE :

When the HDD is full under O/W recording mode, previous recorded files may be overwritten without further warning notices. Under "Overwrite" mode, DVR will clear 8GB data from the oldest for overwriting once the HDD is full.

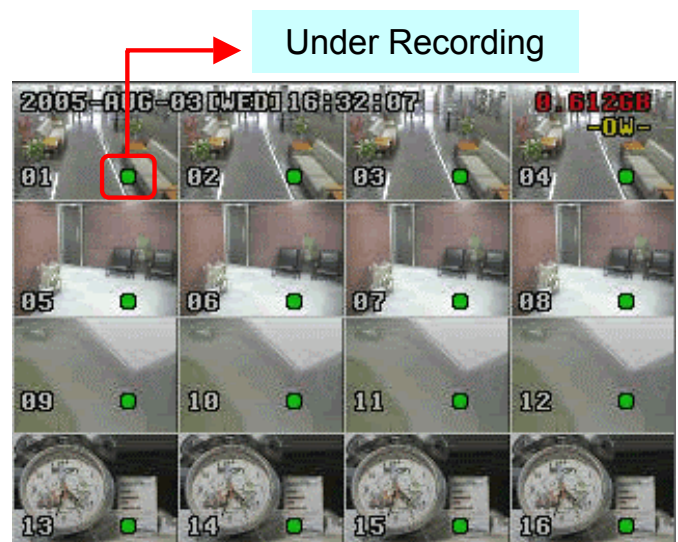

3.2 PLAYBACK

- 16CH / 8CH
- 16CH (D) / 8CH (D) / 4CH (D)

Press “PLAY” button, and the DVR will display the last recorded video.

1) **FAST FORWARD (F.F.) & FAST REWIND (REW):**

You can increase the speed for fast forward and rewind on the DVR.

In the playback mode,

* Press “▶▶” once to get 4X speed forward and press twice to get 8X speed, etc., and the maximum speed is 32X.

* Press “◀◀” once to get 4X speed rewind and press twice to get 8X speed, etc., and the maximum speed is 32X.

* The type of recorded image size (Frame or CIF) will also be shown on the screen.

2) **PAUSE / IMAGE JOG:**

Press “⏸” button to pause the current image displayed on the screen.

In the Pause mode,

* Press “▶▶” once to get one frame forward.


* Press “◀◀” once to get one frame rewind.

3) **STOP:**

Pressing “■” button under all circumstances will return DVR to live monitoring mode.

4) **CHANNEL SHIFT:**

* Display mode:

Press MODE “” button to select the display mode.

* Full Screen Switch:

Press “+” or “-” button to show the channel in the full screen.

* Channel display switch:

Press “**SHIFT**” + “**SET**” buttons.

Press “▲” “▼” “◀” “▶” to select the channel you would like to change.

Press “+” or “-” select the channel you would like to show.

Press “ENTER” button to confirm the setting.

5) **SLOW PLAYBACK:**

Press “**SHIFT**” + “**SLOW**” button to get 1/4X speed playback and press twice to get 1/8X speed.

6) **AUDIO:**

Press “**SHIFT**” + “**AUDIO**” to select live or playback sounds of the 4 audio channels.

* AUDIO 1 (L) -- audio channel 1, live audio / AUDIO 1 (P) -- audio channel 1, playback audio

* AUDIO 2 (L) -- audio channel 2, live audio / AUDIO 2 (P) -- audio channel 2, playback audio

* AUDIO 3 (L) -- audio channel 3, live audio / AUDIO 3 (P) -- audio channel 3, playback audio

* AUDIO 4 (L) -- audio channel 4, live audio / AUDIO 4 (P) -- audio channel 4, playback audio

Note: For the playback of the DVD or CD backup file, please refer to “[Section 4.13 ADVANCE MENU BACKUP](#)” for details.



● 4CH

Press “PLAY” button, and the DVR will display the last recorded video.

1) **FAST FORWARD (F.F.) & FAST REWIND (REW):**

You can increase speed for fast forward and rewind on the DVR.



In the playback mode,

- * Press “” once to get 4X speed forward and press twice to get 8X speed, etc., and the maximum speed is 32X.
- * Press “” once to get 4X speed rewind and press twice to get 8X speed, etc., and the maximum speed is 32X.
- * The type of recorded image size (Frame or CIF) will also be shown on the screen.


2) **PAUSE / IMAGE JOG:**

Press “” button to pause the current image displayed on the screen.






In the Pause mode,

- * Press “” once to get one frame forward.
- * Press “” once to get one frame rewind.

3) **STOP:**

Pressing “” button under all circumstances will return DVR to live monitoring mode.



4) **CHANNEL SHIFT:**

- * Display mode:
Press MODE “” button to 4-channel display.
- * Full Screen Switch:
Press “+” or “-” button to show the channel in the full screen.
- * Channel display switch:
Press “SET” to change the display position of the channel.
Press “   ” to select the channel you would like to change.
Press “+” or “-” to select the channel you would like show.
Press “ENTER” button to confirm the setting.

5) **SLOW PLAYBACK:**

Press “SLOW” button to get 1/4X speed playback and press twice to get 1/8X.


6) **AUDIO:**

Press “ ” to select live or playback sounds of the 4 audio channels.

- * AUDIO 1 (L) -- audio channel 1, live audio / AUDIO 1 (P) -- audio channel 1, playback audio
- * AUDIO 2 (L) -- audio channel 2, live audio / AUDIO 2 (P) -- audio channel 2, playback audio
- * AUDIO 3 (L) -- audio channel 3, live audio / AUDIO 3 (P) -- audio channel 3, playback audio
- * AUDIO 4 (L) -- audio channel 4, live audio / AUDIO 4 (P) -- audio channel 4, playback audio

DETAILED MENU CONFIGURATION



4.1 MENU TREE

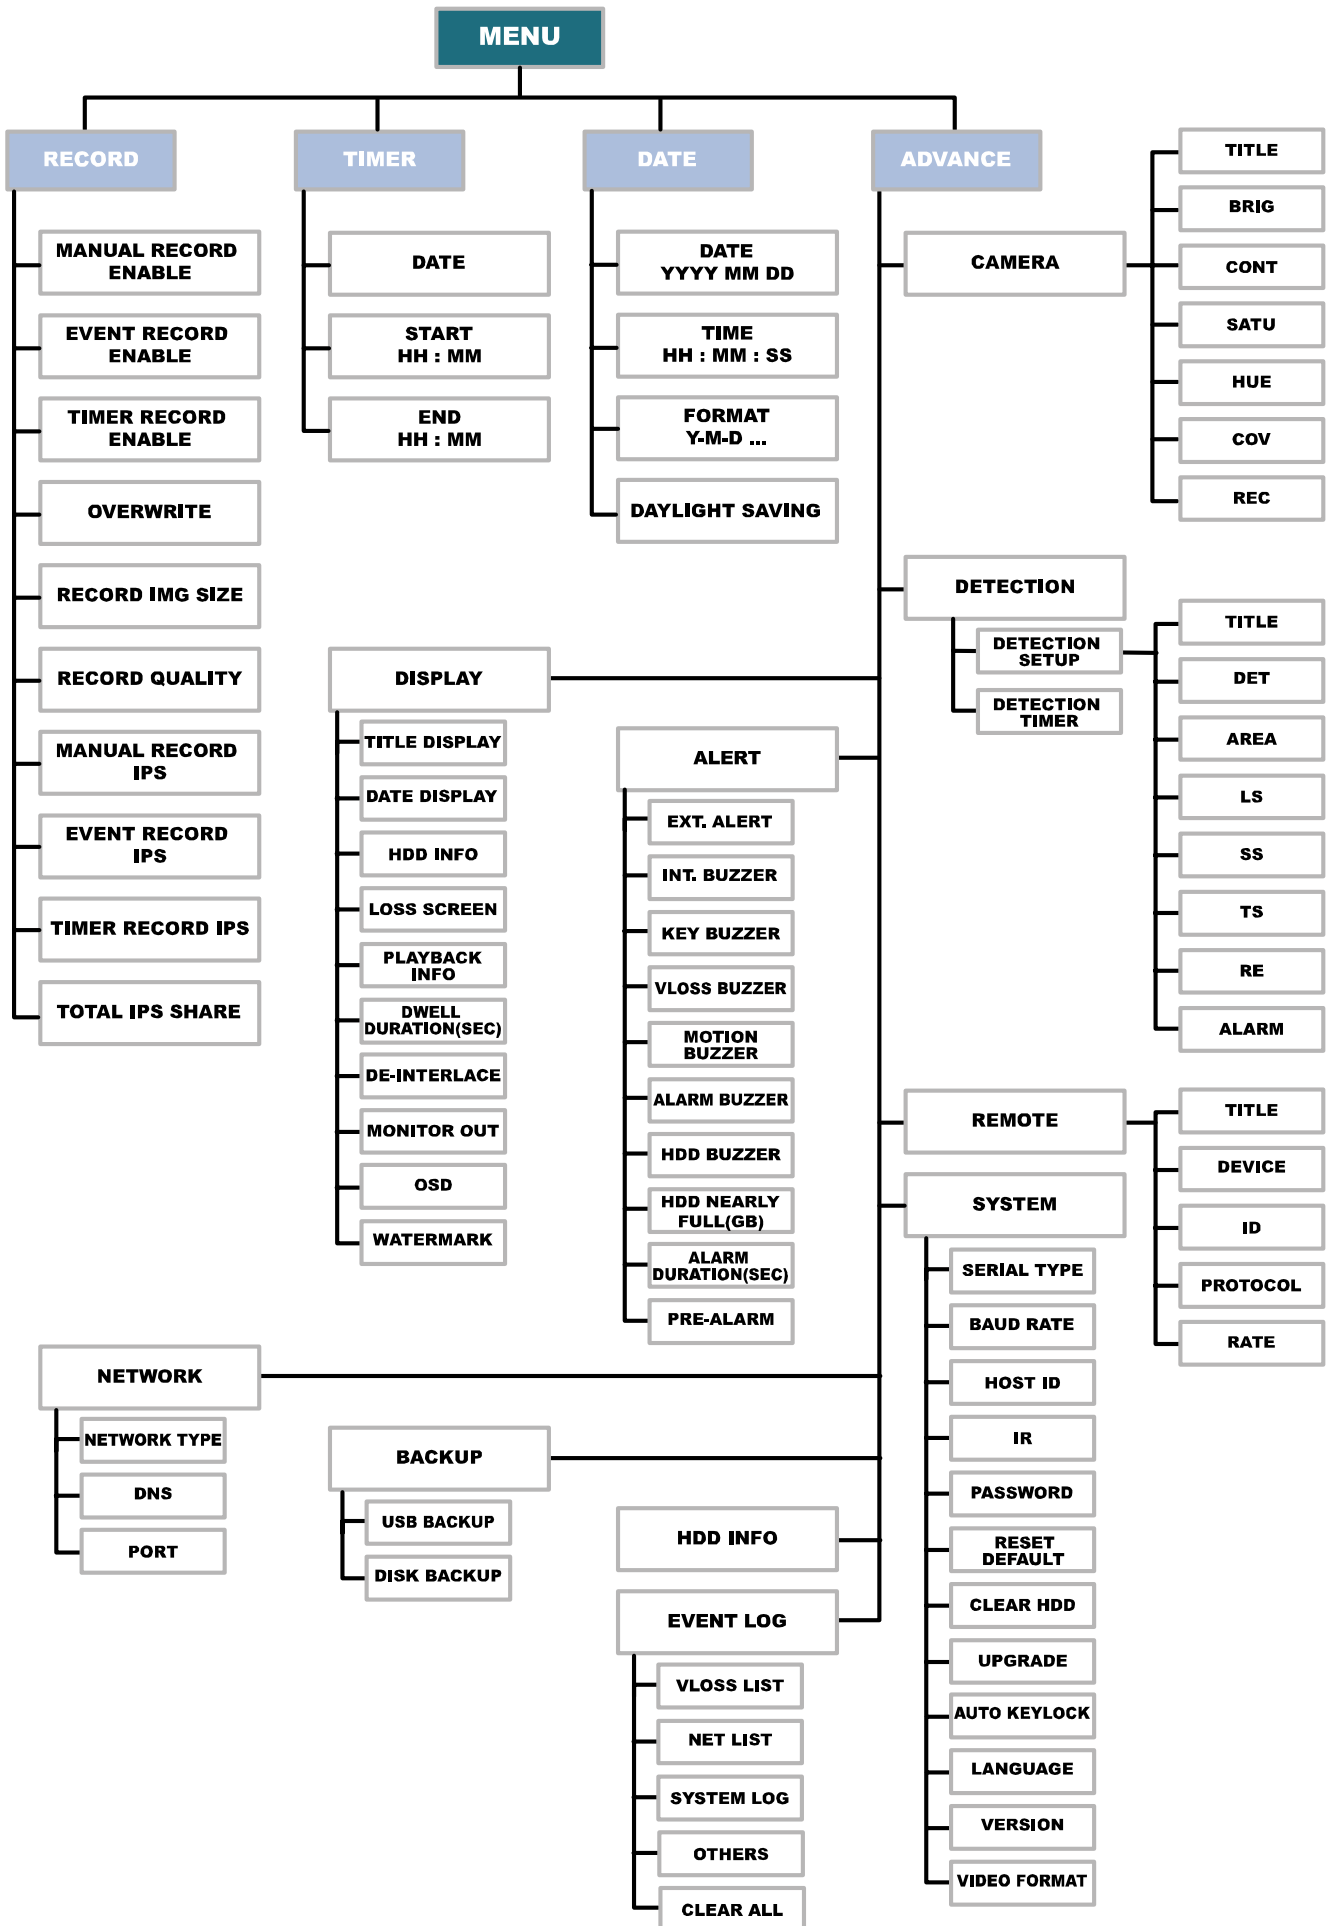

4.2 MAIN MENU OPTIONS RECORD

Press “MENU” button to enter the main menu list. **The default admin password is 0000.** Enter the default password and press “ENTER”. (Users could alter the password later. Please refer to “Section 4.11 ADVANCE MENU SYSTEM”)

Move the cursor to “RECORD”, press ”ENTER”, and the screen will show the following options.

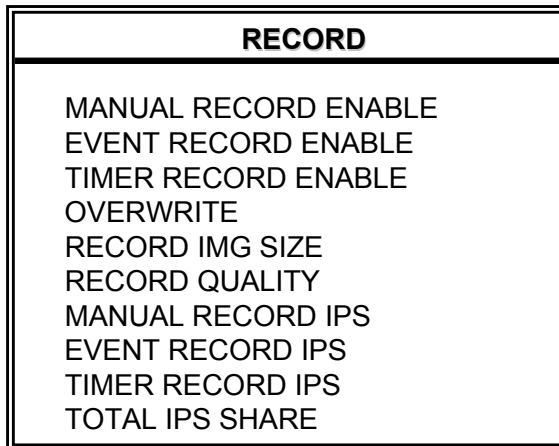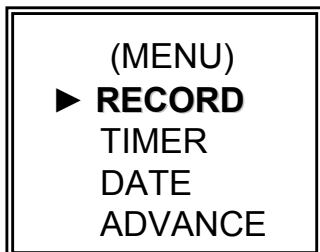

Use the following buttons for menu setting:

- “▲▼◀▶” to move the cursor
- “+ , -” to choose the numbers / selections
- “ENTER” to go to the submenu / to confirm the selection
- “MENU” to go to the menu OSD
/ to confirm the change / to exit the menu OSD

- 1) MANUAL RECORD ENABLE:
Start / stop the manual recording function.
- 2) EVENT RECORD ENABLE:
Start / stop the event recording function. When this function is activated, the recording will be triggered by the motion or external alarm.
- 3) TIMER RECORD ENABLE:
Start / stop the timer recording function.
- 4) OVERWRITE:
Select to overwrite the previous recorded video in HDD. When the HDD is full under O/W recording mode, previous recorded files will be overwritten without further warning notices.
- 5) RECORD IMG SIZE:
There are two recording options: FRAME & CIF. If they want to change the record image size, users need to stop recording first.
- 6) RECORD QUALITY:
There are four quality settings: BEST, HIGH, NORMAL & BASIC.

The following (7) ~ (9) sections are for 16-channel DVRs.

For 8-channel DVRs, divide the IPS by 2. For 4-channel DVRs, divide the IPS by 4.

- 7) MANUAL RECORD IPS:
Recording is activated by pressing the “REC” button. Select the images per second for manual recording. The options are as the followings:
NTSC: FRAME: 120, 60, 30, 15 PAL: FRAME: 100, 50, 25, 12
 CIF: 480, 240, 120, 60 CIF: 400, 200, 100, 50

8) EVENT RECORD IPS:

Recording is activated by events (alarm and motion trigger). Select the images per second for event recording. The options are as the followings:

NTSC: FRAME: 120, 60, 30, 15
CIF: 480, 240, 120, 60

PAL: FRAME: 100, 50, 25, 12
CIF: 400, 200, 100, 50

9) TIMER RECORD IPS:

Recording is activated by the timer schedule. Select the images per second for timer recording. The options are as the followings:

NTSC: FRAME: 120, 60, 30, 15
CIF: 480, 240, 120, 60

PAL: FRAME: 100, 50, 25, 12
CIF: 400, 200, 100, 50

10) TOTAL IPS SHARE:

There are two IPS settings: (Take 16ch as an example)

FIX: IPS per channel = RECORD IPS ÷ 16 channels

GROUP: Every 4 channels will form a group.

IPS per channel = RECORD IPS ÷ 4 ÷ number of channels under recording within the group.

Ex.: If you set the record IPS as 120 IPS, then:

Channel 01 will get 30 IPS (120 / 4 / 1 = 30)


Channel 05 and 06 each will get 15 IPS (120 / 4 / 2 = 15)

“●” means under recording

● 01				Group 1 : CH 01 ~ 04
● 05	● 06			Group 2 : CH 05 ~ 08
				Group 3 : CH 09 ~ 12
				Group 4 : CH 13 ~ 16

NOTE: When users choose the image size as “CIF”, the total IPS share will be fixed. That means IPS per channel will be equal to record IPS divided by 16 channels.

4.3 MAIN MENU OPTIONS __ TIMER

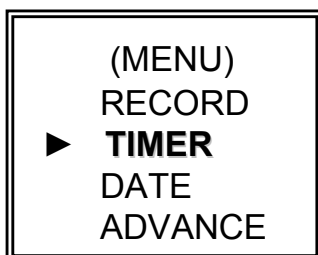


Move the cursor to “TIMER”, press ”ENTER”, and the screen will show the following options.

RECORD			
DATE	START		END
OFF	00 : 00	-	00 : 00
DAILY	08 : 00	-	18 : 00
SUN	06 : 00	-	23 : 00
MON-FRI	00 : 00	-	00 : 00
OFF	00 : 00	-	00 : 00
OFF	00 : 00	-	00 : 00
OFF	00 : 00	-	00 : 00

- 1) DATE:
 A scheduled record date (SUN/MON/TUE/ WED/ THU/ FRI/ SAT/ MON–FRI / SAT-SUN / DAILY/OFF) could be set to activate the timer recording.
 NOTE 1 : Specific date could be changed by “+” or “–” button.
 NOTE 2 : If you plan to set the timer recording across the midnight, there are two ways for setting the timer recording schedule. Please follow the instructions below.
Example 1 : If you only want to set the recording timer schedule from every Sunday 23:30 to Monday 23:30, then you could set it as Sunday from 23:30 to 23:30.
Example 2 : If you plan to set the timer recording from Sunday 08:00 to Monday 15:00, then you could set it as Sunday from 08:00 to 00:00, and Monday 00:00 to 15:00.
Note: Please turn on “TIMER RECORD ENABLE” in RECORD menu (refer to P.15).
- 2) START:
 Select the start time for recording.
- 3) END:
 Select the end time for recording.

4.4 MAIN MENU OPTIONS __ DATE

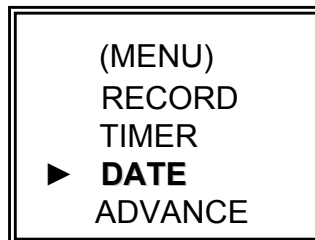

Move the cursor to “DATE”, press ”ENTER”, and the screen will show the following options.



DATE	
DATE	2006-MAR-28 14:30:00
FORMAT	Y-M-D
DAYLIGHT SAVING	ON

- 1) DATE:
 Set the correct time of the DVR (YEAR / MONTH / DAY / HOUR / MIN / SEC).
- 2) FORMAT:
 There are three date formats: Y-M-D, M-D-Y, D-M-Y.
- 3) DAYLIGHT SAVING:
 Specify whether to use daylight saving time and time period. (START / END)
 Daylight saving time can be adjusted manually.
 Enter the daylight saving menu to set the start/end time, and adjust the hour of the daylight saving.

DAYLIGHT SAVING	
START	4TH-SUN-MAR 01: 00: 00
END	4TH-SUN-OCT 01: 00: 00
ADJUST	01 : 00

NOTE: The illustrated setting means: During the daylight saving time period (start from the 4th Sunday of March, end on the 4th Sunday of October), the DVR system time will plus one hour.

4.5 MAIN MENU OPTIONS __ ADVANCE

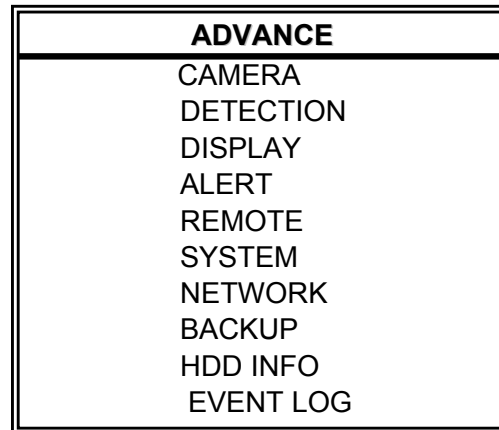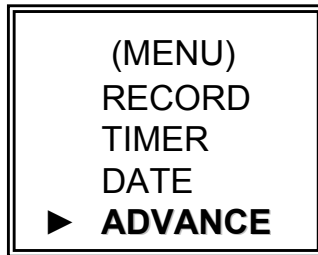

Move the cursor to “ADVANCE”, press “ENTER”, and the screen will show the following options.

4.6 ADVANCE MENU __ CAMERA

Move the cursor to “CAMERA”, press “ENTER”, and the screen will show the following options.

Take 16CH as an example		CAMERA				
TITLE	BRIG	CONT	SATU	HUE	COV	REC
01	110	128	128	128	NO	YES
02	110	128	128	128	NO	YES
03	110	128	128	128	NO	YES
04	110	128	128	128	NO	YES
05	110	128	128	128	NO	YES
06	110	128	128	128	NO	YES
07	110	128	128	128	NO	YES
08	110	128	128	128	NO	YES
PREV	NEXT					

- 1) TITLE:
Move the cursor to the title you want to change, and press “ENTER” to access the setting screen. Assign each channel a title (up to six characters (letters or symbols...)). The default title is the channel number.
- 2) BRIG / CONT / SATU / HUE:
Adjust the Brightness/Contrast/Saturation/Hue of each channel. The level is from 0 to 255. The default value of BRIG is 110, and others are 128.
- 3) COV (COVERT):
Select “YES” to mask the selected channel which is under recording. When this function is activated, the “COV” word will be shown on the screen.
- 4) REC (RECORD):
Select “YES” to enable the record function. Select “NO” to disable the recording.
- 5) PREV / NEXT:
Select “PRE” to go to the previous page. Select “NEXT” to go the next page.

4.7 ADVANCE MENU _____ DETECTION

Move the cursor to "DETECTION", press "ENTER", and the screen will show the following options.

DETECTION
DETECTION SETUP
DETECTION TIMER


1) DETECTION SETUP:

Take 16CH as an example		DETECTION					
TITLE	DET	AREA	LS	SS	TS	RE	ALARM
01	ON	SETUP	07	03	02	10	OFF
02	ON	SETUP	07	03	02	10	LOW
03	ON	SETUP	07	03	02	10	HIGH
04	ON	SETUP	07	03	02	10	OFF
05	ON	SETUP	07	03	02	10	OFF
06	ON	SETUP	07	03	02	10	OFF
07	ON	SETUP	07	03	02	10	OFF
08	ON	SETUP	07	03	02	10	OFF
PREV	NEXT						


- a) TITLE:
Show the title of each channel of the camera.
- b) DET:
Select "ON" to activate the motion detection function of each channel.
Select "OFF" to inactivate the motion detection function of each channel.
- c) AREA:
Press the "ENTER" button to set the detection area.
Pink blocks represent the area that is not being detected while the transparent blocks are the area that is under detection.




Press "ENTER" to confirm the start area

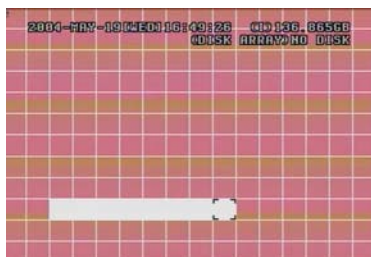

Press ◀ or ▶ to choose the width of the area

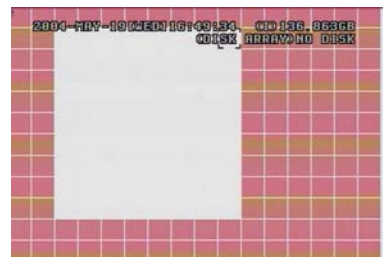


Press ◀ or ▶ to choose the height of the area, and press "ENTER" again to confirm.

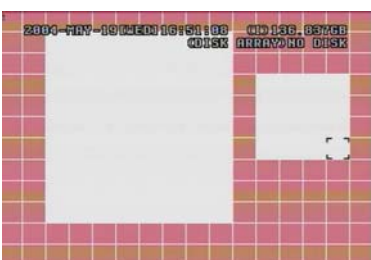

Multi-detected areas



Press "-" to set the whole area under detection

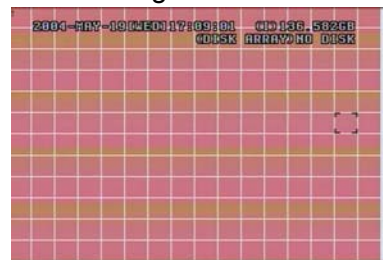

Press "+" to set the whole undetected

▲▼◀▶ : navigates between targets.

- d) LS :
The sensitivity of comparing two different images. The smaller the value, the higher the sensitivity for motion detection.
The highest sensitivity setting is 00, and the lowest sensitivity setting is 15.
The default value is 07.
- e) SS :
The sensitivity towards the size of the triggered object on the screen (the number of motion detection grids). The smaller the value, the higher the sensitivity for motion detection.
The highest sensitivity setting is 00, and the lowest sensitivity setting is 15.
The default setting is 03.

Note: The default setting of Spatial Sensitivity (SS) is 03, which means when 3 grids are detected for any motion at one time, the system will get triggered. So the value of Spatial Sensitivity must be less than the number of grids which you set up for the motion detection area.

- f) TS :
The sensitivity towards how long the object gets triggered. The smaller the value, the higher the sensitivity for motion detection.
The highest sensitivity setting is 00, and the lowest sensitivity setting is 15.
The default setting is 02.
- g) RE :
The value of RE is a reference for detection. The default value is 10, which means the DVR will compare 10 continuous images at one time according to the sensitivity of LS, SS, TS simultaneously. Therefore, the bigger the value, the higher the sensitivity for motion detection. The highest sensitivity is 61.
- h) ALARM :
Select LOW / HIGH for the alarm polarity. The default alarm value is OFF.
- i) PRE / NEXT:
Select "PRE" to go to the previous page; Select "NEXT" to go the next page. Targets set in the AREA.

- 2) DETECTION TIMER:
Set the date and start/end time of the detection function.

DETECTION TIMER		
DATE	START	END
OFF	00 : 00 -	00 : 00
DAILY	08 : 00 -	18 : 00
SUN	06 : 00 -	23 : 00
MON-FRI	00 : 00 -	00 : 00
OFF	00 : 00 -	00 : 00
OFF	00 : 00 -	00 : 00
OFF	00 : 00 -	00 : 00

4.8 ADVANCE MENU __ DISPLAY

Move the cursor to "DISPLAY", press "ENTER", and the screen will show the following options.

DISPLAY	
TITLE DISPLAY	ON
DATE DISPLAY	ON
HDD INFO	ON
LOSS SCREEN	BLUE
PLAYBACK INFO	NORMAL
DWELL DURATION (SEC)	2
DE-INTERLACE	ON
MONITOR OUT	MAIN
OSD	SETUP
WATERMARK	ON

- 1) TITLE DISPLAY:
Turn the channel title display on / off.
- 2) DATE DISPLAY:
Turn the date display on / off.
- 3) HDD INFO:
Turn the display information of internal HDD on / off.
- 4) LOSS SCREEN:
Set the color of the video loss screen (blue or black)
- 5) PLAYBACK INFO:
Set the position where playback information will be indicated on the left hand side of the bottom screen (center or normal).
- 6) DWELL DURATION (SEC):
Set the duration time of each channel for CALL MONITOR (2, 4, 8, 16 sec.)
- 7) DE-INTERLACE:
Set the "DE-INTERLACE" function on / off.
- 8) MONITOR OUT:
Select Select "MAIN" when the video output device is CRT monitor.
Select "VGA" when the video output device is LCD monitor.
Note: If the connected video output device is LCD monitor, but the setting here is "MAIN", motion detection area setting will be disabled.
- 9) OSD:
Customize OSD color.
- 10) WATERMARK:
In the playback mode of the software AP, users could prove the authenticity of the **BACKUP VIDEO**. If the **BACKUP VIDEO** had been altered, the video image will turn to light red and the playback will be paused.
Please refer to P. 36 for detailed instruction.

4.9 ADVANCE MENU __ALERT

Move the cursor to “ALERT”, press “ENTER”, and the screen will show the following options.

ALERT	
EXT. ALERT	ON
INT. BUZZER	ON
KEY BUZZER	ON
VLOSS BUZZER	ON
MOTION BUZZER	ON
ALARM BUZZER	ON
HDD BUZZER	ON
HDD NEARLY FULL (GB)	05
ALARM DURATION (SEC)	05
PRE-ALARM	OFF

- 1) EXT. ALERT:
Set the sound on / off when the external alarm is triggered.
- 2) INT. BUZZER:
Set the sound of KEY / VLOSS / MOTION / ALARM / HDD FULL on or off.
- 3) KEY BUZZER:
Set the sound on / off when pressing the button.
- 4) VLOSS BUZZER:
Set the sound on / off when any video loss happened.
- 5) MOTION BUZZER:
Set the sound on / off when any motion alarm is triggered.
- 6) ALARM BUZZER:
Set the sound on / off when any internal alarm is triggered.
- 7) HDD BUZZER:
Set the sound on / off when the HDD is full.
- 8) HDD NEARLYFULL (GB):
If HDD BUZZER is on, you could choose to have a buzzer notification when the HDD available capacity is only xxx GB left.
- 9) ALARM DURATION (SEC):
Press “ENTER” or “+” or “-” button to set the duration time of alarm recording (5, 10, 20, 40 sec.).
- 10) PRE-ALARM:
Set the pre-alarm function on (8MB) / off.
When pre-alarm and event recording functions are activated, the DVR will record 8MB file before any alarm / motion is triggered.

4.10 ADVANCE MENU _____ REMOTE

Move the cursor to "REMOTE", press "ENTER", and the screen will show the following options.

Take 16CH as an example			REMOTE	
TITLE	DEVICE	ID	PROTOCOL	RATE
01	PTZ	001	P - D	02400
02	CAMERA	002	NORMAL	02400
03	CAMERA	003	NORMAL	02400
04	CAMERA	004	NORMAL	02400
05	CAMERA	005	NORMAL	02400
06	CAMERA	006	NORMAL	02400
07	CAMERA	007	NORMAL	02400
08	CAMERA	008	NORMAL	02400
PREV	NEXT			

- 1) TITLE:
Title of each camera.
- 2) DEVICE:
Select to control a normal camera or PTZ camera for each channel.
- 3) ID:
Set the ID number (0 ~ 255) of the PTZ camera.
Note: After connecting to a PTZ camera correctly, the **default ID** of the PTZ camera will be shown on the screen.
Note: Please refer to the instruction "**PTZ Connection and Control**" below.
- 4) PROTOCOL:
Select NORMAL (our protocol) or PELCO-D protocol.
- 5) RATE:
Set the baud rate of each channel (2400, 4800, 9600, 19200, 57600). For the connected cameras, such as PTZ and speed dome cameras, etc., please make sure the baud rate setting is the same as the setting here.

*****PTZ Connection and Control: *****

- 1) Device: Our own brand PTZ / Pelco-D protocol PTZ
- 2) Connection: For detailed connection and instructions, please refer to your PTZ camera manual.
Note:
As for "RS485A and RS485B Port" connection, please refer to "Section 1.5 Rear Panel", or refer to "Appendix #2 PIN Configuration".
- 3) Control Mode: Refer to the front panel or your IR remote control manual.

4.11 ADVANCE MENU SYSTEM

Move the cursor to "SYSTEM", press "ENTER", and the screen will show the following options.

SYSTEM	
SERIAL TYPE	RS - 485
BAUD RATE	02400
HOST ID	003
IR	ON
PASSWORD	SETUP
RESET DEFAULT	RESET
CLEAR HDD	MASTER
UPGRADE	NO
AUTO KEYLOCK	NEVER
LANGUAGE	ENGLISH
VERSION	1066-10-J4-04-AA-1
VIDEO FORMAT	NTSC

- 1) SERIAL TYPE:
Press "ENTER" or "+" or "-" button to set the control serial type (RS-485, RS-232) of DVR.
- 2) BAUD RATE:
Press "ENTER" or "+" or "-" button to set the BAUD RATE of DVR (2400, 9600, 19200, 57600).
- 3) HOST ID:
Press "ENTER" or "+" or "-" button to set the ID of DVR (0 ~ 255).
- 4) IR:
Press "ENTER" or "+" or "-" button to set the IR function on / off.
- 5) PASSWORD:
Press "ENTER" to set the password for accessing DVR (**The default admin password is 0000 and the default guest password is 1111**). Users who use guest password to access the DVR will be only allowed to view the live streaming video and sequence display, shift the channel display, and lock keys.
- 6) RESET DEFAULT:
Press "ENTER", and select "YES" to confirm or "NO" to cancel.
- 7) CLEAR HDD:
Press "ENTER" and "YES" to confirm clear HDD or "NO" to cancel.
In this function, you can press "+" or "-" to select the HDD MASTER HDD, SLAVE HDD or DISK ARRAY which you plan to clear.
- 8) UPGRADE:
Press "ENTER", and select "YES" to confirm upgrade or "NO" to cancel.
- 9) AUTO KEYLOCK:
Set the time-out after which the key lock function is activated.
(Never / 10 sec / 30 sec / 60 sec)
- 10) LANGUAGE (support multi-language):
Press "ENTER", and select the language of the OSD.
- 11) VERSION:
The firmware version information will be shown on the screen.
- 12) VIDEO FORMAT:
The information of the DVR's video format will be shown on the screen.

4.12 ADVANCE MENU NETWORK

Move the cursor to "NETWORK", press "ENTER", and the screen will show the following options.

NETWORK	
NETWORK TYPE	STATIC
DNS	168. 95. 1. 1
PORT	0080

1) NETWORK TYPE (STATIC):

Select NETWORK TYPE, press "+" or "-" button to set the network type as STATIC, and then press "ENTER" to go to the submenu of the network. In the submenu of the network type, use "+" or "-" button to set all the information needed in the DVR. See the illustration below.

STATIC	
IP	60. 121. 46. 236
GATEWAY	60. 121. 46. 226
NETMASK	255. 255. 255. 254

2) NETWORK TYPE (DHCP):

This DHCP function needs to be supported by a router or cable modem network with DHCP service. For detailed DHCP settings, please refer to P.37 and P.38 (Licensed Software AP).

3) NETWORK TYPE (PPPoE):

This PPPoE function needs to have "username" and "password" subscribed from one ISP supplier. For detailed PPPoE settings, please refer to P.37 and P.38 (Licensed Software AP).


NOTE:

DHCP and PPPoE network types need to apply DDNS service to get "Hostname" to correspond to the dynamic IP address. For detailed DDNS settings, please refer to P.38.


4.13 ADVANCE MENU _____ BACKUP

- 16CH / 8CH / 4CH
- 16CH (D) / 8CH (D) / 4CH (D)

Move the cursor to "BACKUP", press "ENTER", and the screen will show the following options.

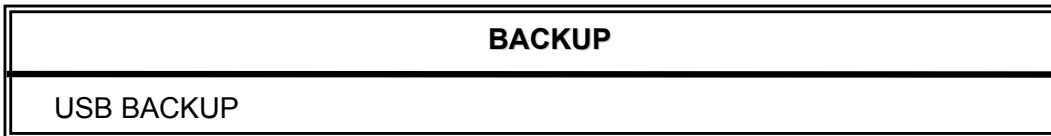

Select "USB BACKUP" and then press "ENTER".

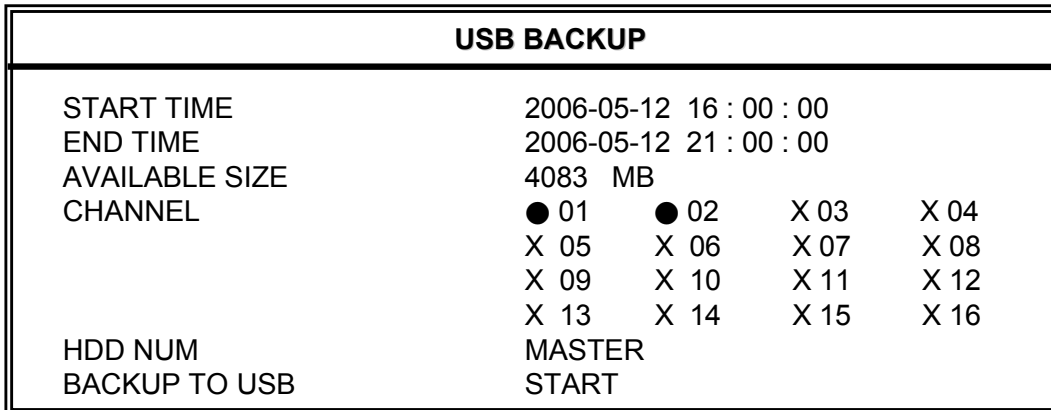


- 1) START TIME:
Select the start time of the backup.
- 2) END TIME:
Select the end time of the backup.
- 3) AVAILABLE SIZE:
Display the available capacity in the inserted USB flash drive.
- 4) CHANNEL:
Select channels by pressing "ENTER" button to change the symbol in front of the channel number.
Symbol "X" means that this channel is not selected.
Symbol "●" means that this channel is selected.
- 5) HDD NUM:
Choose the HDD.
- 6) BACKUP TO USB:
Press "ENTER" to start backup the chosen file to the inserted USB flash drive.
- 7) Backup Image with Audio:
Only 4 channels support audio backup. If you want to backup images with audio, please connect the camera to the correct channels.
16CH / 16CH(D) models: CH13, CH14 , CH15 and CH16
8CH / 8CH(D) models: CH5, CH6, CH7 and CH8
4CH / 4CH(D) models: CH1, CH2, CH3 and CH4

NOTE:


- ① Please use PC to format the USB flash drive as "FAT 32".
- ② If the USB flash drive is not supported by the DVR, then the "USB ERROR" message will be shown on the screen.
- ③ We recommend to clear all the files in the USB flash drive before you backup files in your USB flash drive.
- ④ The backup files can be viewed on the licensed software AP. Or users can convert the recorded file to AVI format. For detailed AP playback, please refer to P.36.

● 16CH (D) / 8CH (D) / 4CH (D)

Move the cursor to “BACKUP”, press “ENTER”, and the screen will show the following options.

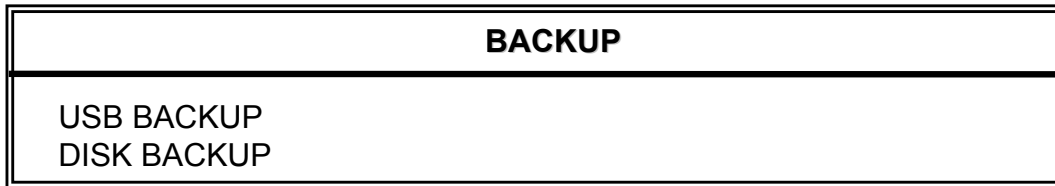

Select “DISK BACKUP” and then press “ENTER”.

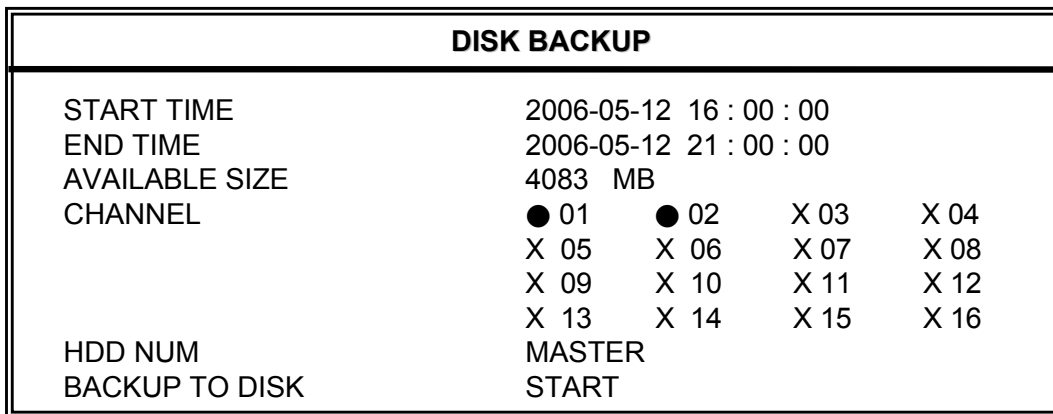

- 1) Press “+” and “-” buttons to open the **DVD / CD WRITER**. Put the **DISK** into **DVD / CD WRITER**, and press “+” and “-” buttons again to close. **(NOTE: Use DVD-R DISK only)**

- 2) Go to “DISK BACKUP” menu and set the start time, end time, channels and HDD number.

Note:

Select channels by pressing “ENTER” button to change the symbol in front of the channel number.

Symbol “X” means that this channel is not selected.

Symbol “●” means that this channel is selected.

Only 4 channels support audio backup. If you want to backup images with audio, please connect the camera to the correct channels.

16CH / 16CH(D) models: CH13, CH14 , CH15 and CH16

8CH / 8CH(D) models: CH5, CH6, CH7 and CH8

4CH / 4CH(D) models: CH1, CH2, CH3 and CH4

- 3) After setting up the backup information, move the cursor to “START”, and press “ENTER”. While the files are backing up to **DISK**, users will see the backup completed percentage on the screen.
- 4) After backup files to **DISK**, “DISK BURN FINISH” message will be prompted on the screen. Press “+” and “-” to eject the **DISK** from **DVD / CD WRITER**.
- 5) Put **DISK** into the **DVD / CD -ROM** of your PC. (O/S system: Windows XP and Windows2000). And then double click the file → Convert the file → Play the backup file at PC side.

NOTE:

1. The maximum number of backup files in the CD is 41.
2. The backup file can be played directly in your PC via the supplied licensed AP, or via other media players (Ex: Windows Media Player or RealPlayer) after the file is converted to “AVI” format.

4.14 ADVANCE MENU __ HDD INFO

You can get all the capacity information of the connected HDD.

HDD INFO			
HDD NUM	HDD SIZE	HDD NUM	HDD SIZE
MASTER	400.517	SLAVE	NO HDD
EXT001	400.517	EXT 002	400.517
EXT003	400.517	EXT 004	NO HDD
EXT005	NO HDD	EXT 006	NO HDD
EXT007	NO HDD	EXT 008	NO HDD
EXT009	NO HDD	EXT 010	NO HDD
EXT011	NO HDD	EXT 012	NO HDD

4.15 ADVANCE MENU __ EVENT LOG

You can get all the information (event type, time, and channel) of the event list, including video loss list, net list, other lists (such as power on / off, key unlock, reset to default). Select the event list you want to see and press "ENTER".

EVENT LOG	
VLOSS	LIST
NET	LIST
OTHERS	
CLEAN	ALL

- 1) VLOSS LIST:
Show the information of the video loss time.
- 2) NET LIST:
Show the information of the net login time.
- 3) OTHERS:
Show the information of "power on / off", "unlock", and "reset to default" time.
- 4) CLEAN ALL:
Clear all the event log lists.

5.1 SEARCH

- 16CH / 8CH
- 16CH (D) / 8CH (D) / 4CH (D)

Press “**SHIFT**” + “**SEARCH**” buttons on the front panel of the DVR to enter the search mode. Then the screen will show the following options.

- 4CH

Press “**SEARCH**” button on the front panel of the DVR to enter the search mode. Then the screen will show the following options.

- 1) HDD:
Master HDD.
- 2) FULL LIST:
Show the time list for all types of the recorded files. The capital letters stand for the following: R: RECORD / S: SYSTEM / A: ALARM / MS: MOTION / T: TIMER.
- 3) RECORD LIST:
List the time of manual recorded files.
- 4) SYSTEM LIST:
List the time of system recorded files.
Under the manual recording mode, the DVR system will save one recorded file every one hour.
- 5) ALARM LIST:
List the time of alarm trigger recorded files.
- 6) MOTION LIST:
List the time of motion trigger recorded files.
- 7) EVENT SEARCH:
Search the recorded files by the specific time period (YEAR / MONTH / DAY / HOUR / MIN), channel, HDD, and event type (motion / alarm triggered recording). When you playback the recorded videos, they will be played with the fast speed.
- 8) TIME SEARCH:
Search the recorded files by the specific time period (YEAR / MONTH / DAY / HOUR / MIN).

SEARCH	
HDD	MASTER
FULL	LIST
RECORD	LIST
SYSTEM	LIST
ALARM	LIST
MOTION	LIST
EVENT	SEARCH
TIME	SEARCH

NOTE:

Move the cursor to the specific recorded file and press “ENTER” to play the video. Press stop “■” button to return the live display.

5.2 2X DIGITAL ZOOM

Press “ZOOM” button on the front panel of the DVR to enlarge the picture of selected channel (2X digital zoom). You will have ¼ view size of the enlarged picture. Therefore use the “▲▼◀▶” to navigate.

Normal View



Zoom View



- 1) Press “ZOOM” button again to exit the zooming.
- 2) Press “▲▼◀▶” button to move the zoom position.
- 3) Users can also press “Digital Zoom” button on the IR remote control.

5.3 KEY LOCK

- 1) Key Lock On:
 - ① Press “MENU” + “ENTER” buttons on the DVR front panel to lock keys.
 - ② Press “F2” button on the IR remote control to lock keys.
 - ③ Auto key lock: refer to “Section 4.11 ADVANCE MENU_SYSTEM”.
- 2) Key Lock Off:

Press any key (except “SHIFT” and “POWER” buttons) and then key in the password to exit Key Lock mode.
- 3) Password:

For the password setting, please refer to “5) PASSWORD” in “Section 4.11 ADVANCE MENU_SYSTEM” at P.24.

5.4 SWITCH THE N/P SYSTEM


- 1) Press “POWER” button on the DVR front panel to shutdown. Then press and hold “▶” first, and press “POWER” to switch to PAL system.
(Press the buttons till the monitor shows the video image of the DVR)
- 2) Press “POWER” button on the DVR front panel to shutdown. Then press and hold “◀” first, and press “POWER” to switch to NTSC system.
(Press the buttons till the monitor shows the video image of the DVR.)

5.5 USB UPGRADE

Users can use USB flash drives to upgrade.

Please format the USB memory device as FAT 32 format first.

- 1) Get the upgrade files from your distributor.
- 2) Save the upgrade files in your USB device (Do not change the file name).
- 3) Go to the "MENU – SYSTEM - UPGRADE" , and press "ENTER".
- 4) Select "YES", and press "ENTER" again to confirm upgrade.

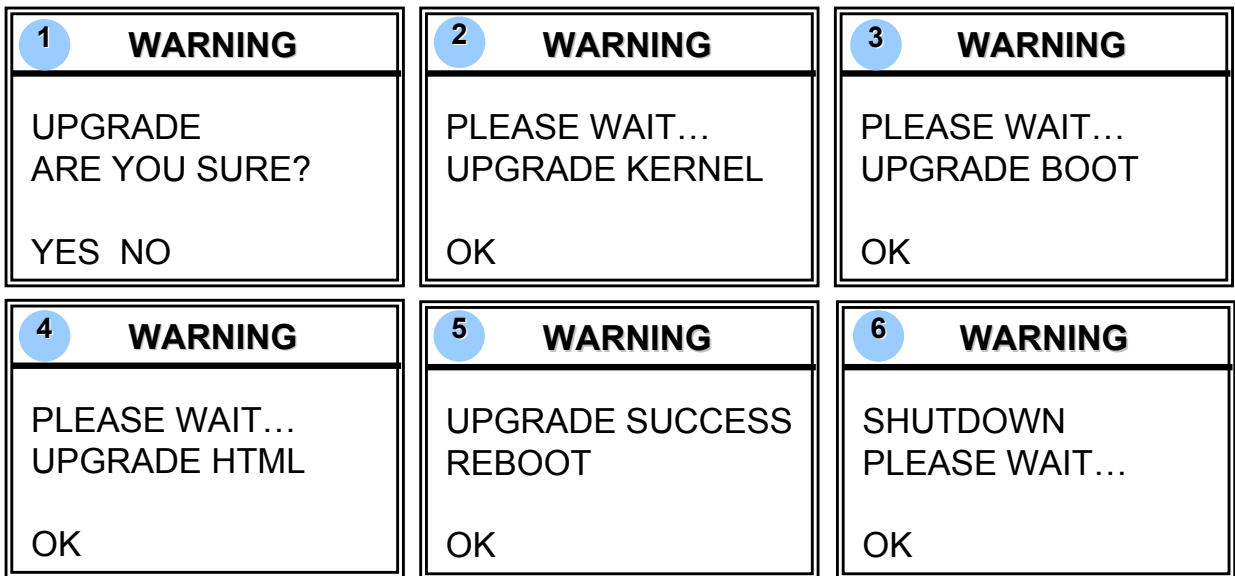


NOTE:

- ① Please use PC to format your USB flash drive as "FAT 32".
- ② If the USB flash drive can't be detected by the DVR, the "USB ERROR" message will be shown on the screen.

5.6 LICENSED SOFTWARE AP

1) Install the Software:

- ① Place the attached CD into one CD-ROM drive and install application programs into PC (Including AP and JAVA program).
- ② After setup, users will see "  " icon on the desktop.

Video Server E

NOTE:


For the latest version of the software AP, please refer to your distributor, or refer to "Section 5.7 OPERATION VIA IE BROWSER".

2) AP Basic Operation:

① Connect your DVR to PC via RJ45 network line.

② LAN Setting :

The default DVR IP is “192.168.1.10”, and default “username” and “password” are both “admin”. Users should set PC’s IP address as “IP:192.168.1.XXX” (1~255, except 10) in order to make the PC and DVR under the same domain.

③ Double click  to enter login page. Key in IP address (192.168.1.10), your username (admin), password (admin), port (80) in the login page. After connecting to the DVR with local LAN, users could modify the network settings in the DVR or in “SYSTEM CONFIG” menu of the licensed software AP.


④ Network Type ~ Static IP :

Set the network information in the DVR menu (Section 4.12) or in “SYSTEM CONFIG” menu of the licensed software AP (P.37).

Network Type ~ Dynamic IP (DHCP and PPPoE) :

Set the Network information in “SYSTEM CONFIG” menu of the licensed software AP.

For detailed DHCP and PPPoE settings, please refer to P.37 and P.38.

⑤ After setting up the network information, double click  to enter login page. Key in “Username”, “ Password”, “IP” (Static IP) or “Host name” (Dynamic IP), and “Port”. And then click the green button to connect.

⑥ LOGIN AP Icon Explanation



Address Book: Press this button to add a new IP into the IP Address Book or choose any preset IP address to access the software AP.



Copy: Press this button to copy all the software installation files, so users can keep all the settings of the video web server for next software installation on other PC.



Search: Search available DVR IP addresses in the local area network and modify the network setting of the DVR.



Upgrade Firmware: Press this button to upgrade DVR firmware or OSD language files. The provided firmware and OSD files should be saved at PC first.




Player: Press this button to access and play the recorded files that are saved in your PC.

NOTE: The version of the licensed software will shown on the login page.



⑦ AP Control Panel

Digital Device Control Panel ~ Take 16CH DVR as an example

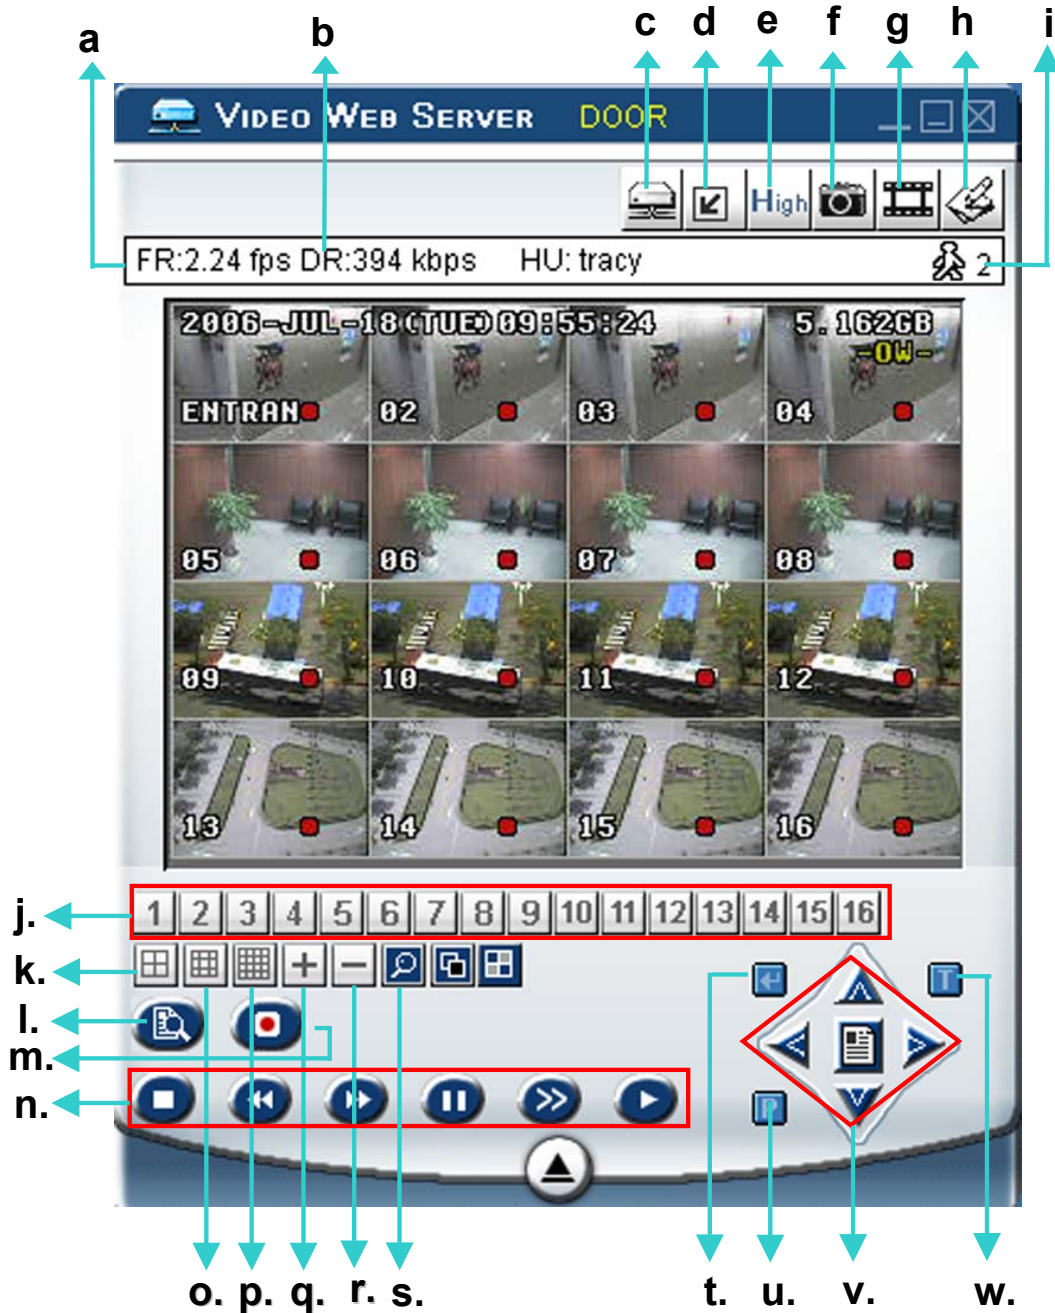

- a. Image Transfer Rate Per Second
- b. Data Transfer Rate
- c. Connect / Disconnect
- d. Resolution:
 NTSC: 320 × 228 ; 640 × 456
 PAL: 320 × 276 ; 640 × 552
- e. Image Quality (High, Medium, Low)
- f. Snapshot : press this button to have a snapshot of the image which will be saved in the designated destination you set in “SYSTEM CONFIG – FILE PATH – Snapshot Path”.

- g. Record : press this button to start recording, and press this button again to stop recording. The recorded files will be saved to the designed path on the PC. Each recording file can be up to 18,000 frames. When the recorded file is full, the new recorded file will be saved as the second file.
If the HDD space is less than 200MB, the program will stop recording.
- h. SYSTEM CONFIG: press this button to enter the setting page of the software AP.
- i. Number of Online Users
- j. CH 1 ~ 16
- k. 4, 9, 16 Channel Display
- l. Search
- m. Record
- n. Stop / Fast Rewind / Fast Forward / Pause / Slow Playback / Play
- o. +: for changing system settings and switching channels
- p. -: for changing system settings and switching channels
- q. Digital Zoom: digital zoom in/out
- r. Set: Press this button to change the position of the channel display.
Press “▲▼◀▶” to select the channel you would like to change.
Press “+” or “-” select the channel you would like to show.
Press “Enter” button to confirm the setting.
- s. Sequence: Press this button to enter the call monitor function and press again to exit from the call monitor mode. When any motion is detected, the monitor will switch to the channel which is motion-triggered.
- t. Enter: for confirming the system settings or entering your selection
- u. PTZ Control On / Off:
When the PTZ control turned on, users could select the PTZ device, and press “OK” button to enter the PTZ control AP screen. (Press “ESC” to exit from the PTZ control AP screen and return to DVR control AP screen)

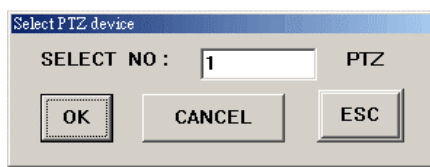

- v. Menu / Up / Down / Left / Right
- w. Turbo ON/ OFF:
To speed up menu selection or the control of the PTZ camera under software AP, users can activate TURBO function by clicking this button. Users are allowed to change the turbo steps from 1 to 10.
Ex: If users activate TURBO function, and set the value of the turbo step as 3, then when users press one of the button up/down/left/right, one mouse click will function as clicking 3 times.

Digital Device Control Panel ~ PTZ



- j. Preset 1 ~ 16
- k. AUTO
- l. Zoom Tele Zoom Wide
- m. Focus Near Focus Far
- n. Max Zoom In Max Zoom Out
- o. Enter
- p. PTZ Control On / Off:
When the PTZ control mode is turned on, users can select the PTZ device and press “OK” button to enter the PTZ control AP screen. (Press “ESC” to exit from the PTZ control AP screen and return to DVR control AP screen)
- q. Menu / Up / Down / Left / Right
- r. Turbo:
To speed up menu selection or the control of the PTZ camera under the software AP, users can activate TURBO function by clicking this button. Users are allowed to change the turbo steps from 1 to 10.
Ex: If users activate the TURBO function, and set the value of the turbo step as 3, then when users press one of the button up/down/left/right, one mouse click will function as clicking 3 times.

⑧ AP Playback Operation

One click to activate

AP Playback Window :



AP Config. Setting Box :



- De-interlace
- De-blocking
- OSD
- AVI Convert
- Config. Setting
- Watermark
- Open Previous File
- Open Next File



A. Playback Information :

Display information such as “Date”, “Time”, “Resolution”, “Rewind / Forward Speed”, “Status” and “Functions”, etc.

B. Time Progress Bar :

Show the playback progress status.

C. Functions :

- **De-interlace:** Reduce the vibration of the paused picture.
- **De-blocking:** Reduce the video mosaic phenomenon.
- **OSD:** Display the OSD of the AP playback window.
- **AVI conversion:** Convert the entire recorded file to AVI format.
- **Config. Setting:** Enter AP config. setting box, and set the file path, text color, and text color of progress status.
- * Mute: Play the video only (without audio).
- * AV sync.: Play with the audio and video synchronously.
- **Watermark:** Proof the authenticity of the backup video.
- **Open Previous File:** Open the previous backup video.
- **Open Next File:** Open the next backup video.

D. Playback Control Buttons :

Play / Stop / Pause / Fast Rewind / Fast Forward

E. Snapshot :

Press this button to take a snapshot of the current image which will be saved in the designated destination.

F. Close the Player



To snap a video clip, right-click of the mouse to make a starting point (red) and click one more time to make an ending point. Then right-click to convert to AVI format.

Note:

- When users pause the playback picture, press “” button to go to the previous frame, or press “” button to go to the next frame.
- In the playback mode of the software AP, users could press “” button to check the authenticity of the **BACKUP VIDEO**. If the **BACKUP VIDEO** had been altered, the video image will turn to light red and the playback will be paused.

Note:

- When users use remote AP recording, the watermark function is not supported.

3) AP Advanced Setting:



- ❑ Press “System Config ” button to enter the system setting page.

Network

The network configuration allows the DVR to connect to an Ethernet network or dial-up network.

① Static IP:

Enter the “Server IP”, “Gateway”, “Net Mask” and “Web Port”, then press “APPLY” to confirm.

② PPPoE:

Enter the “User Name” and “Password” provided by your ISP (Internet Service Provider) supplier, then press “APPLY” to confirm.

③ DHCP:

This DHCP function need to be supported by a router or cable modem network with DHCP services. Choose “DHCP” IP type and press “APPLY” to confirm.

Note:

PPPoE and DHCP network connection types will require to apply DDNS service to get a “Hostname” to correspond to dynamic IP address.




Please refer to P.38 for details.

Note:

Some router brands may need to restart the DVR to get the IP address.

④ Web Port:

The DVR can be viewed over the network with the software AP or a web browser. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security. The valid number ranges from 1 to 9999.

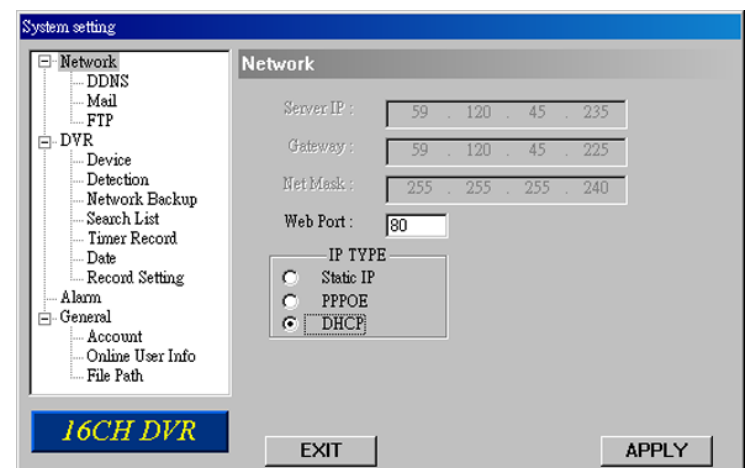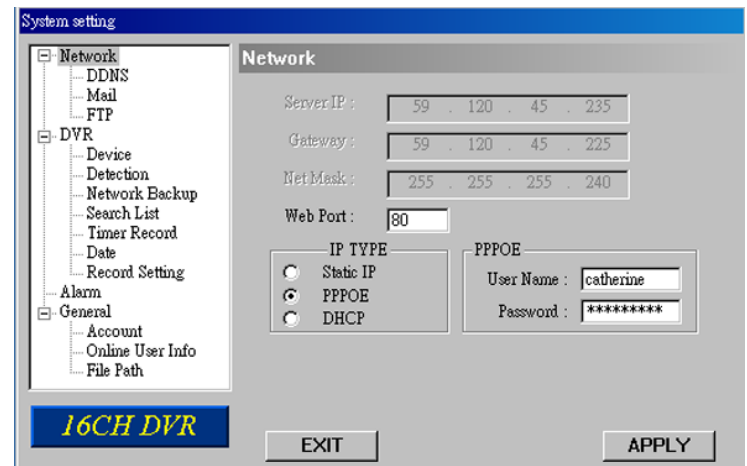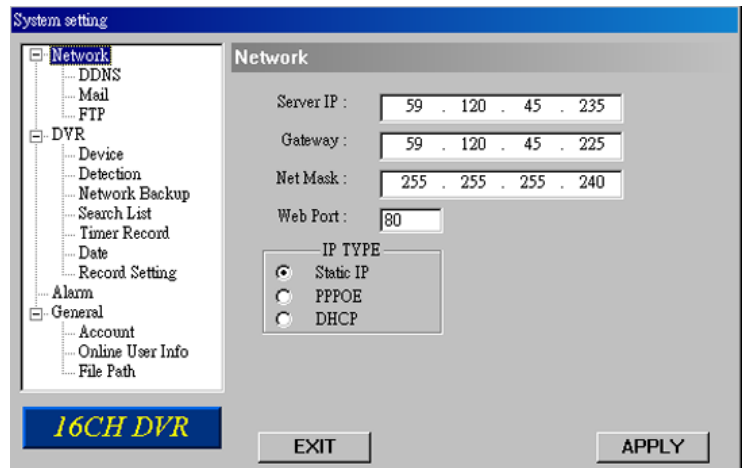


DDNS

① DDNS is a service for transforming the dynamic IP corresponding to a specific "Hostname".

② **DDNS Apply:**
Go to a website which provide free DDNS services and apply a "Hostname". See the example below.


③ **Enable the DDNS function:**
Enter your DDNS user name into "User Name" column.
Enter your DDNS password into "Password" column.
Enter your host name into "Domain" column.
Choose one DDNS system name from "System Name" column.
After setting, press "APPLY" to confirm.

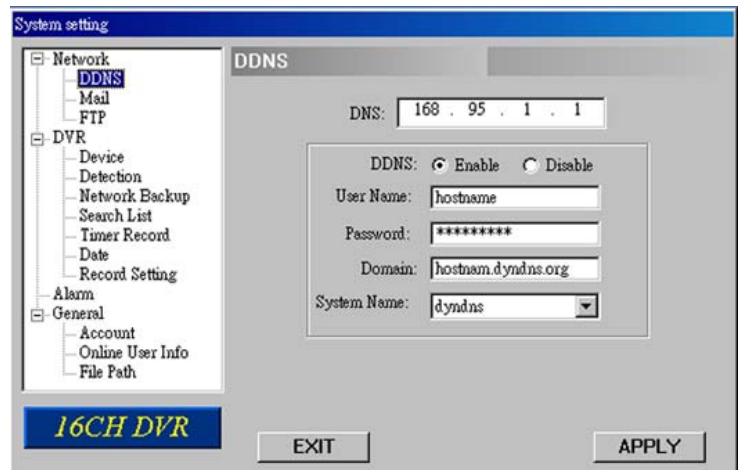

④ **Auto:**
When using DHCP network connection, the "AUTO" check box will appear on this window. The system will automatically get DNS information from the Internet if this check box is selected.

DDNS APPLY EXAMPLE:

- ❑ Go to a website which provides free DDNS services. For example, "http://www.dyndns.org".
- ❑ Create an account in DynDNS.
- ❑ After created your account, users will receive a confirmation e-mail within few minutes. To complete registration, please follow the instructions received. Users must complete these steps within 48 hours to complete the registration. If the confirmation e-mail is not received within an hour, request "password reset" (<http://www.dyndns.org/account/resetpass/>).
- ❑ Use the DDNS username and password to login the DynDNS.
- ❑ **Create Hostname:**
Login → "Account" → "My Service" → "Add Host Services" → "Add Dynamic DNS Host" → Enter and choose the hostname → Click on "Add Host" → DDNS Hostname created.

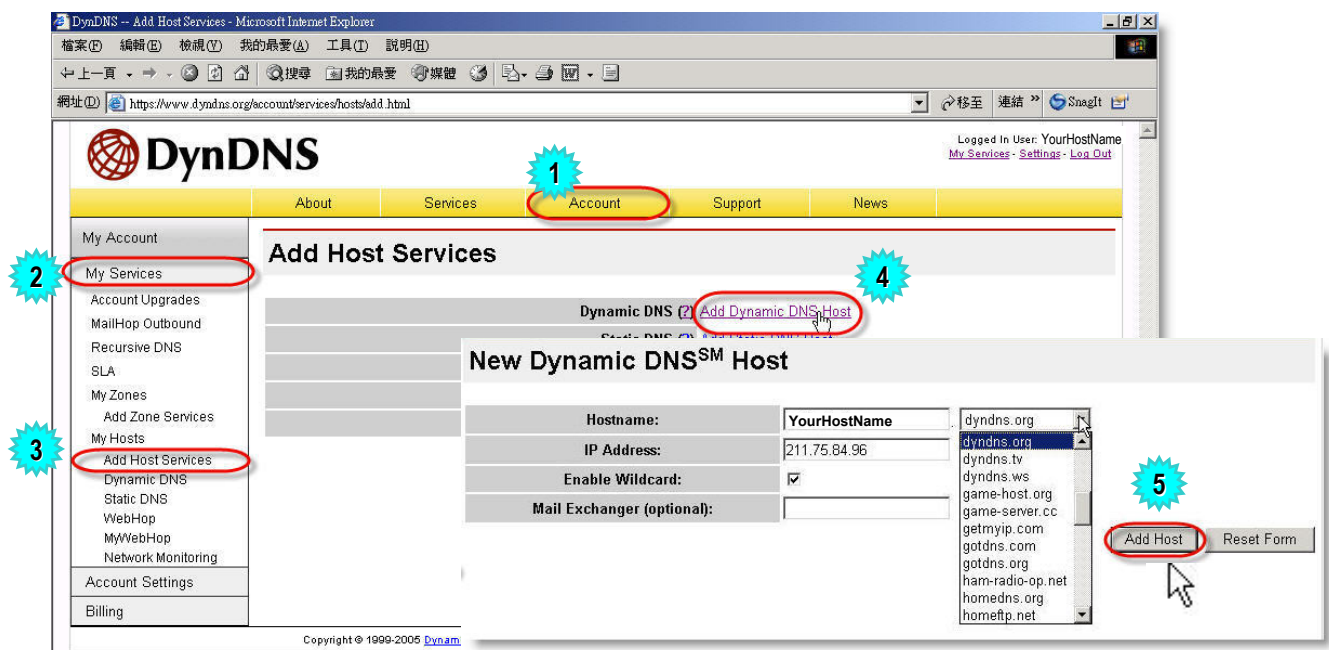

Mail

- ① When the recording is triggered by an alarm or a motion, a video copy file can be captured. The DVR will send an e-mail notification to the assigned recipients (up to 5 recipients).

*****Note***:**

To activate the e-mail notification function, please enable the function of e-mail notification in the “**Alarm**” setting first (page 43).

- ② Add the recipients’ email accounts in “**Mail Account**” column.

For detailed information (SMTP server, username and password), please get from your e-mail system supplier.

- ③ Please type the entire email address in the “**Mail from**” column to ensure emails will not be blocked by SMTP.
- ④ In some cases, mail servers require to verify password. Please enter the “**user name**” and “**password**”.
- ⑤ After finishing the settings, press “**APPLY**” to confirm.

The screenshot shows the 'System setting' window with the 'Mail' tab selected. The left sidebar shows a tree view with 'Mail' highlighted under the 'Network' category. The main area contains the following fields and controls:

- Server:** 211.76.85.99
- Mail from:** catherine@tech.com.t
- Modify alarm email address:** Buttons for ADD, DELETE, and EDIT.
- Mail Account:** A table with one entry: catherine.lee@ya.com
- Verify Password:** Radio buttons for Yes (selected) and No.
- User:** catherine.lee
- Password:** *****
- Buttons for EXIT and APPLY.

FTP

- ① When the recording is triggered by an alarm or a motion, a video copy file can be captured. And the DVR will upload the captured images to the assigned FTP site.
- ② Enter the detailed FTP information.

*****Note***:**

To activate the FTP notification function, please enable the function of FTP notification in the “**Alarm**” setting first.

- ③ After setting, press “**APPLY**” to confirm.

The screenshot shows the 'System setting' window with the 'FTP' tab selected. The left sidebar shows a tree view with 'FTP' highlighted under the 'Network' category. The main area contains the following fields and controls:

- UserName:** catherine.lee
- Password:** *****
- Port:** 21
- Server:** 211.76.82.102
- Directory:** /catherine/alarm notification
- Buttons for EXIT and APPLY.

DVR – Camera Setting

- ① Each camera channel can be adjusted independently.
- ② Select the desired camera channel. Press “Edit” to enter the setting box.
- ③ **Title:**
Enter the camera channel name up to 6 characters.
- ④ **Adjustment:**
Adjust the BR (brightness) / CT (contrast) / SU (saturation) / HU (hue) / REC (recording) of the camera.
- ⑤ After setting, press “OK” and then press “APPLY” to confirm.

Take 16CH as an example

The screenshot shows the 'System setting' window with 'DVR-CAMERA' selected. The table below shows the configuration for 16 channels:

NO.	TITLE	BR	CT	SU	HU	COV	REC
1	ENTRAN	110	128	128	128	NO	YES
2	02	110	128	128	128	NO	YES
3	03	110	128	128	128	NO	YES
4	04	110	128	128	128	NO	YES
5	05	110	128	128	128	NO	YES
6	06	110	128	128	128	NO	YES
7	07	110	128	128	128	NO	YES
8	08	110	128	128	128	NO	YES
9	09	110	128	128	128	NO	YES
10	10	110	128	128	128	NO	YES
11	11	110	128	128	128	NO	YES

The 'Edit' dialog box below shows the following settings for channel 1:

NO.	DEVICE	ID	PROTOCOL	RATE
1	PTZ	0	NORMAL	2400

Device

- ① Select the desired channel of the installed external device. Press “Edit” to enter the setting box.
- ② **Device Type:**
Choose either general camera or PTZ camera.
- ③ **ID No. :**
Set the ID number (0 ~ 255) of the installed external PTZ device.
- ④ **Protocol Type :**
Choose “NORMAL” protocol for our own brand camera.
Choose “P-D” protocol for PELCO-D protocol camera.
- ⑤ **Baud Rate :**
Set the baud rate of each channel (2400, 4800, 9600, 19200, 38400, 57600, 115200).
- ⑥ After setting, press “OK” and then press “APPLY” to confirm.

Take 16CH as an example

The screenshot shows the 'System setting' window with 'DVR-Device' selected. The table below shows the configuration for 17 channels:

NO.	DEVICE	ID	PROTOCOL	RATE
1	PTZ	0	NORMAL	2400
2	CAMERA	0	NORMAL	2400
3	CAMERA	0	NORMAL	2400
4	CAMERA	0	NORMAL	2400
5	CAMERA	0	NORMAL	2400
6	CAMERA	0	NORMAL	2400
7	CAMERA	0	NORMAL	2400
8	CAMERA	0	NORMAL	2400
9	CAMERA	0	NORMAL	2400
10	CAMERA	0	NORMAL	2400
11	CAMERA	0	NORMAL	2400
12	CAMERA	0	NORMAL	2400

The 'Edit' dialog box below shows the following settings for channel 1:

NO.	DEVICE	ID	PROTOCOL	RATE
1	PTZ	0	NORMAL	2400

Detection

① Select the desired channel, and press “Edit” to enter the motion detection sensitivity and area setting box.

② **Motion Detection Sensitivity:** Set the detection sensitivity in 4 different adjustable factors.

LS: The sensitivity of comparing two different images. The smaller the value, the higher the sensitivity for motion detection.

SS: The sensitivity towards the size of the triggered object on the screen (the number of motion detection grids). The smaller the value, the higher the sensitivity for motion detection.

TS: The sensitivity towards how long the object stays in the detection area to get triggered. The smaller the value, the higher the sensitivity for motion detection.



RE: The value of RE is a reference for the detection. The bigger the value is, the higher the sensitivity for motion detection.

③ **Alarm:** Select LOW / HIGH for the alarm polarity.

④ **Motion Detection Area:** By clicking the area with your mouse, one can choose the motion area to be detected. The under-detected area is in transparent while the undetected area is in pink color.
*Click the “**Select All**” to activate the detection area as full area.
*Click the “**Clear All**” to clean the previously selected detection area.

⑤ After setting, press “OK” and then press “APPLY” to confirm.





Take 16CH as an example

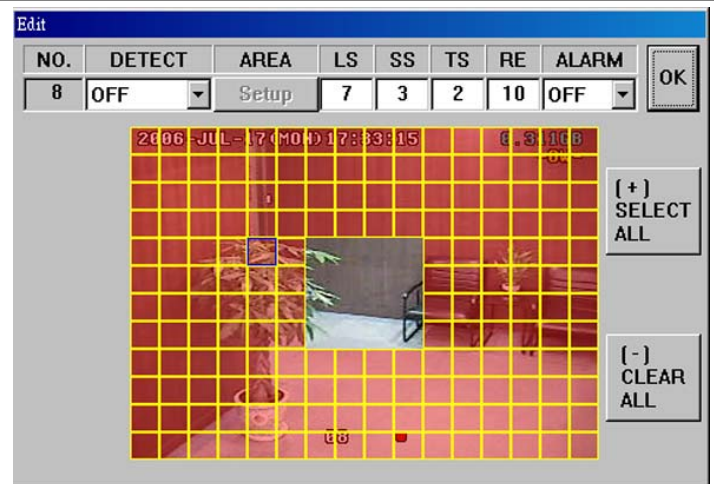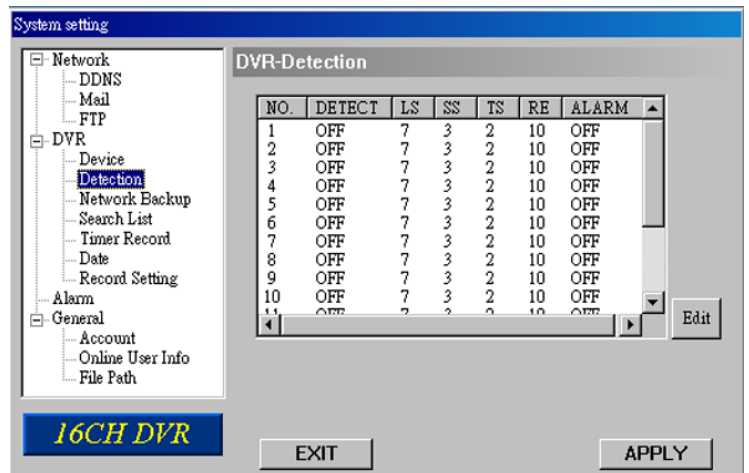

Note: Enable the motion detection function. When any motion is detected, a “🔴” icon will be shown on the screen. And the software AP will start recording automatically.

Network Backup & Playback

- ① Backup the recorded files from your DVR to your PC via network.
- ② Enter the backup information and then press "Start" button. When the backup is succeeded, "DVR-Network Backup" pop-up window will show. Then, press "PLAY" button to directly convert and play the file.

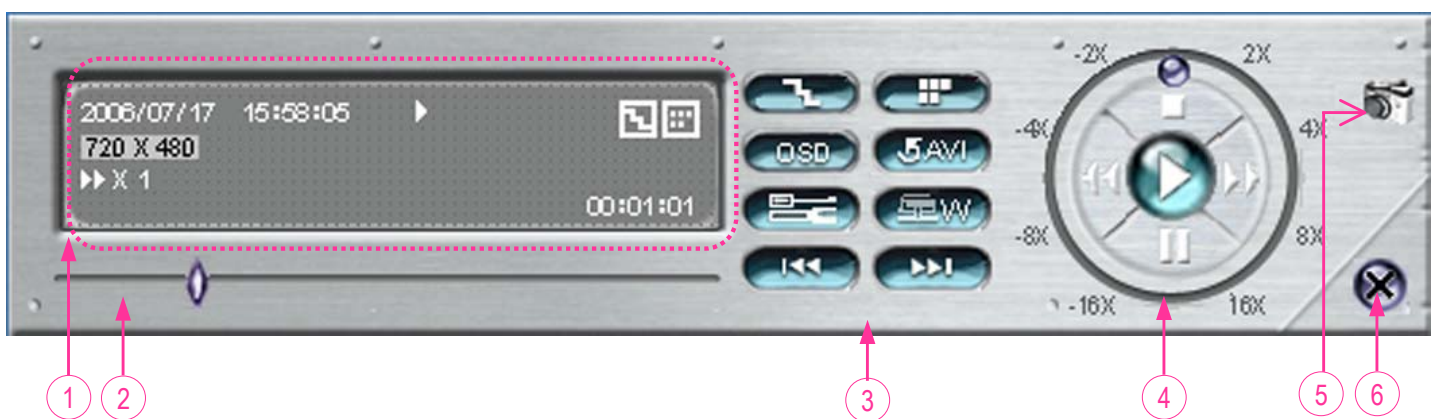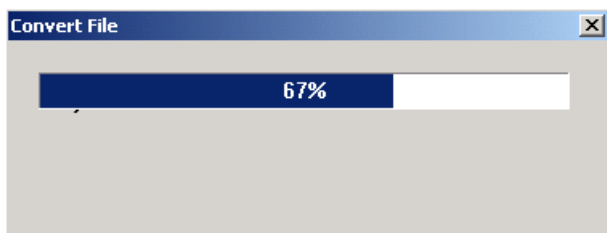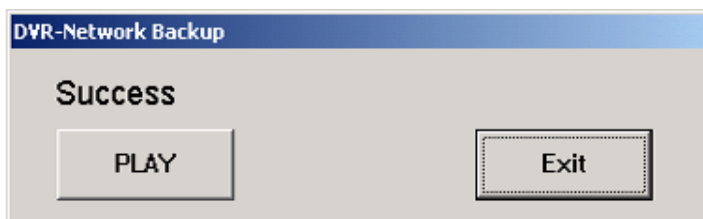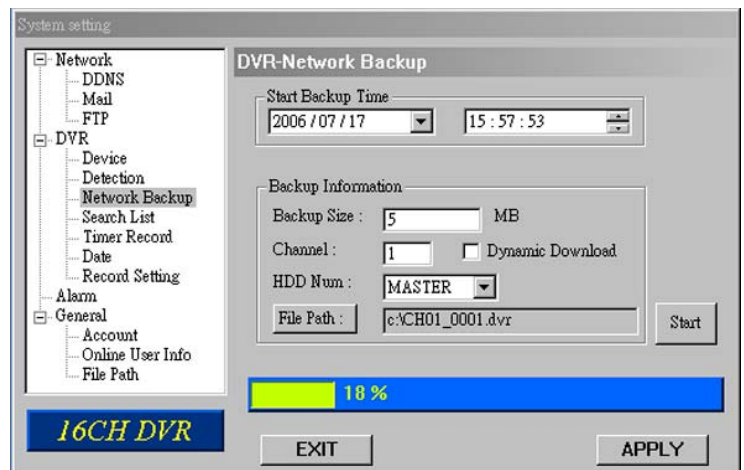

1. Playback Information

2. Time Progress Bar

3. Functions :

- (1) De-interlace
- (2) De-blocking
- (3) OSD
- (4) AVI Conversion
- (5) Config. Setting
- (6) Watermark
- (7) Open Previous
- (8) Open Next File

4. Playback Control Buttons :

Play / Stop / Pause / Fast Rewind / Fast Forward

5. Snapshot



6. Close the Player

NOTE:

1. During the file backup process, users can still see the live image at the same time.
2. The maximum size per file for Network Backup is 500MB.

Search List


- ① **HDD Number:**
Select one HDD (Master).
- ② **List Type:**
Select one list type (All/ Manual/ System/ Alarm/ Motion).
- ③ **Max List Number:**
Maximum number of the list (128)
- ④ **Download HDD List:**
Press this button to start downloading the list.

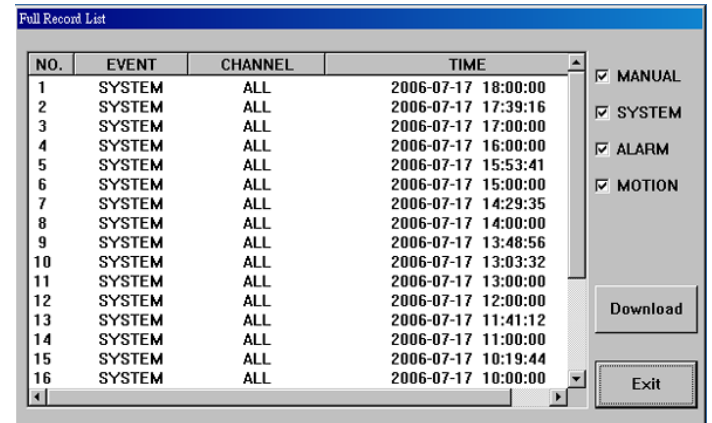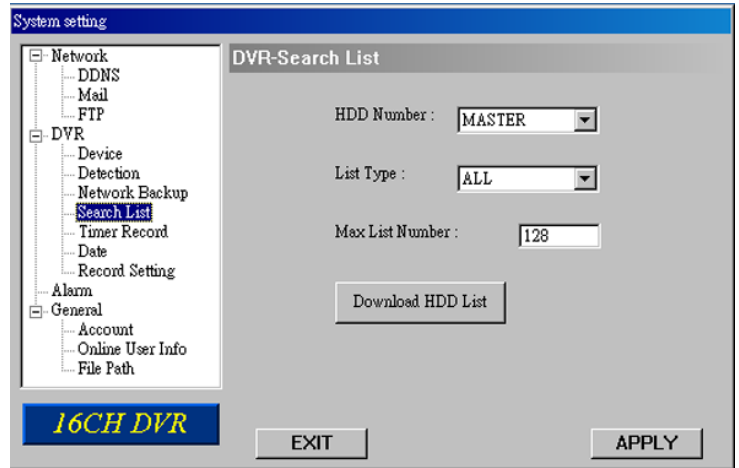

Timer Record

In this menu, you can schedule 7 different sets of time for recording.

- ① **DATE:**
Choose a day from “DATE” drop-down menu. The options are OFF, SUN, MON, TUE, WED, THU, FRI, SAT, MON-FRI, SAT-SUN and DAILY.
- ② **START:**
Enter the start time of timer recording.
- ③ **END:**
Enter the end time of timer recording.

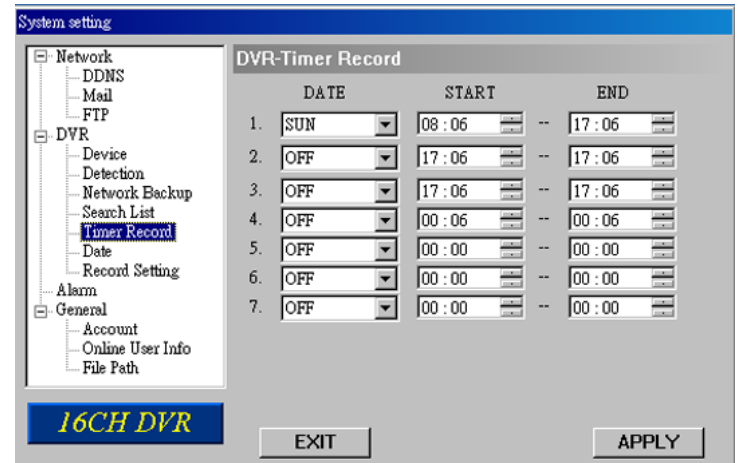

Press “APPLY” if the settings are correct; press “EXIT” to quit without saving.

Date

In this menu, you can set the date for your DVR.

① **DATE:**

Choose the current date from “DATE” drop-down menu and enter the current time. When you click the drop-down menu, a calendar like the picture below shows for you to set the current date.




② **FORMAT:**

Choose the format for date display from the three options: Y-M-D, D-M-Y and M-D-Y.

③ **DAYLIGHT SAVING:**

Specify whether to use daylight saving time (ON / OFF), time period (START / END), and adjust the daylight saving time in hour (ADJUST).

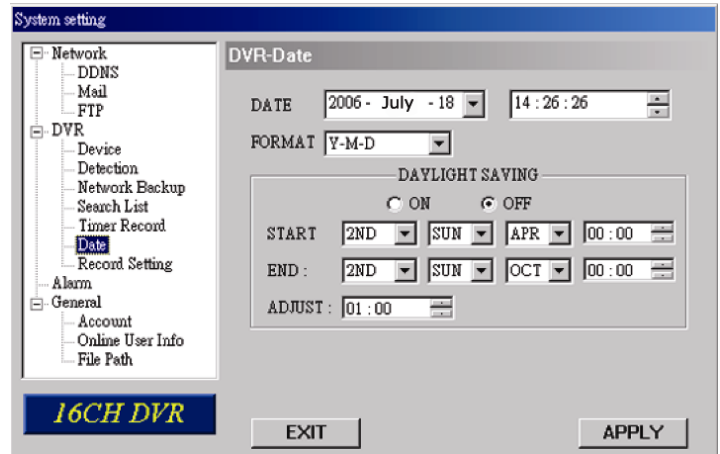

Record Setting

① **MANUAL RECORD:**

Specify whether to use manual recording (YES / ON) and set IPS number.

② **EVENT RECORD:**

Specify whether to use event recording (YES / ON) and set IPS number.

③ **TIMER RECORD:**


Specify whether to use timer recording (YES / ON) and set IPS number.

④ **OVER WRITE:**

Specify whether to overwrite the HDD capacity when the HDD is full (YES / NO).

⑤ **RECORD IMG SIZE:**

Choose “FRAME” or “CIF”. This selection will affect the available IPS options in the 3 recording modes described above.

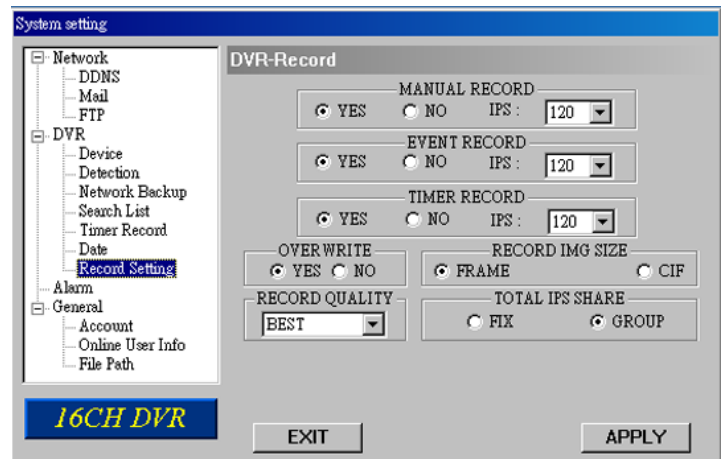

⑥ **RECORD QUALITY:**


4 options are available from the drop-down menu: BEST, HIGH, NORMAL and BASIC.

⑦ **TOTAL IPS SHARE:**

Choose the IPS share as FIX or GROUP.

Alarm

- ① **Alarm Trigger:**
Enable or disable Email and FTP notification function.
- ② **Alarm Method:**
Two notification methods — Email and / or FTP.
- ③ **Post Numbers:**
Set MJPEG pictures (1-10 pictures).
- ④ **Alarm Duration:**
Set the duration time of motion trigger recording (5 SEC, 10 SEC, 20 SEC, 40 SEC).
- ⑤ **Alarm Refresh:**
Clean the alarm message “🔥” which is shown on the screen.

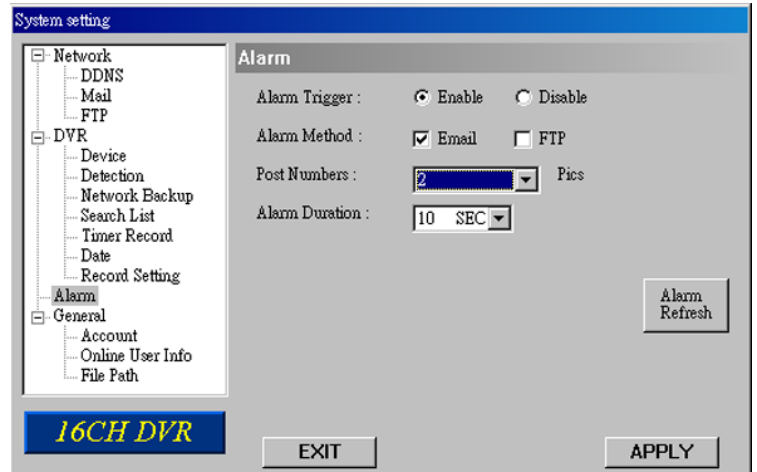

Note:

Email Notification:


MJPEG pictures will be made at your designated space set in “File Path”, plus an e-mail contained with the MJPEG pictures (1-10 pictures) to be sent to the address which is set under “Mail”.

FTP Notification:

MJPEG pictures will be made at your designated space set in “File Path”, plus a FTP file contained with the MJPEG pictures (1-10 pictures) to be sent to the address which is set under “FTP”.

General

- ① Get the information of the DVR firmware version in this window.
- ② **Select “Turbo Step” (1 - 10)**
To speed up menu selection or the control of the PTZ camera under video web servers, users can activate "TURBO" function by clicking this button. Users are allowed to change the turbo steps from 1 to 10.
Ex: If the value of turbo step is “5”, it means that when users press one of the button up/down/left/right, one click is as clicking 5 times.
- ③ **MAX LOG LIST:**
Set the maximum number of log list.
- ④ **Server Log:**
Press “Server Log” button to enter the server log list window.
- ⑤ **Title:**
Name the title which will be shown on the top of the AP live viewer (up to 8 characters).

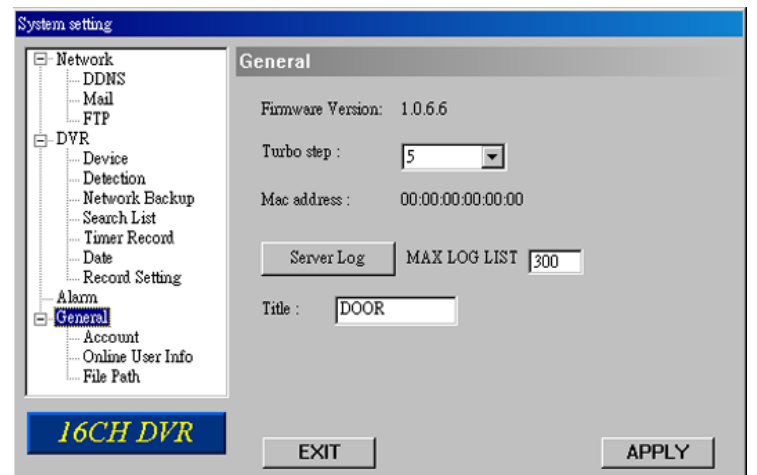




Server Log

NO.	EVENT	TIME	CH	
1	REMOTE LOGIN [a...	06-03-24 15:44:34	NO	<input checked="" type="checkbox"/> POWER ON
2	REMOTE LOGIN [a...	06-03-24 15:43:54	NO	<input checked="" type="checkbox"/> VIDEO LOSS
3	REMOTE LOGIN [a...	06-03-24 15:43:00	NO	<input checked="" type="checkbox"/> REMOTE LOGIN
4	REMOTE LOGIN [a...	06-03-24 15:42:02	NO	<input checked="" type="checkbox"/> HDD FULL
5	REMOTE LOGIN [a...	06-03-24 15:41:52	NO	<input checked="" type="checkbox"/> KEY LOCK
6	REMOTE LOGIN [a...	06-03-24 15:41:37	NO	<input checked="" type="checkbox"/> KEY UNLOCK
7	REMOTE LOGIN [a...	06-03-24 15:41:27	NO	<input checked="" type="checkbox"/> RESET DEFAULT
8	REMOTE LOGIN [a...	06-03-24 15:40:41	NO	<input checked="" type="checkbox"/> EMAIL FAILED
9	REMOTE LOGIN [a...	06-03-24 15:40:22	NO	<input checked="" type="checkbox"/> FTP FAILED
10	REMOTE LOGIN [c...	06-03-24 15:22:06	NO	<input checked="" type="checkbox"/> HDD DMA ERROR
11	REMOTE LOGIN [a...	06-03-24 15:16:53	NO	<input checked="" type="checkbox"/> DDNS
12	REMOTE LOGIN [a...	06-03-24 15:16:41	NO	<input checked="" type="checkbox"/> PPPOE
13	REMOTE LOGIN [c...	06-03-24 15:16:25	NO	<input checked="" type="checkbox"/> DHCP
14	REMOTE LOGIN [a...	06-03-24 15:16:09	NO	
15	REMOTE LOGIN [a...	06-03-24 15:15:16	NO	
16	REMOTE LOGIN [a...	06-03-24 15:14:58	NO	
17	REMOTE LOGIN [a...	06-03-24 14:56:05	NO	
18	REMOTE LOGIN [c...	06-03-24 14:32:07	NO	

OK


Account

- Set up the user's account (Max 5 accounts), password, life time, and authority level (Max 5 users on line at the same time).
- User's level:**
SUPERVISOR —
 Control all the functions ("a", "b", "c", "d", "e" and "f").
HIGH —
 Control only "a", "b", "c", "d" and "e" functions, but cannot control "f" function.
NORMAL —
 Control only "a", "d", and "e" functions, but cannot control "b", "c" and "f" functions.
GUEST —
 Watch the image only. Only "a" function can be used.
- Life time :**
 According to different authority levels, different accounts can stay online for different time periods (1 Min, 5 Min, 10 Min, 1 Hour, 1 Day, INFINITY).

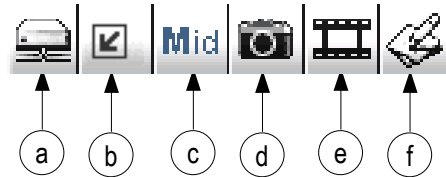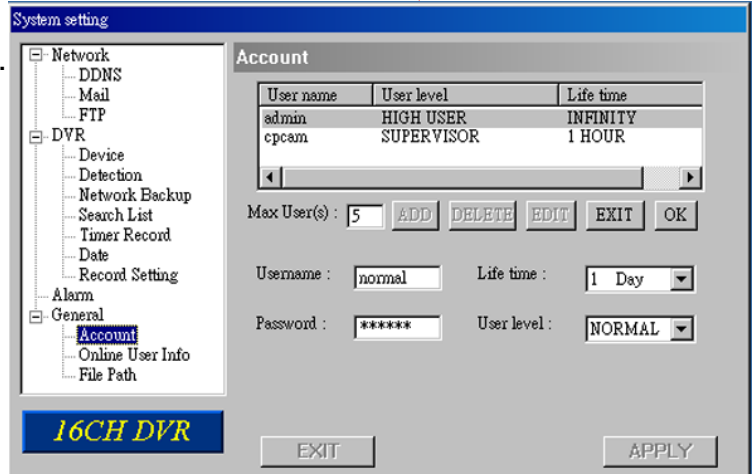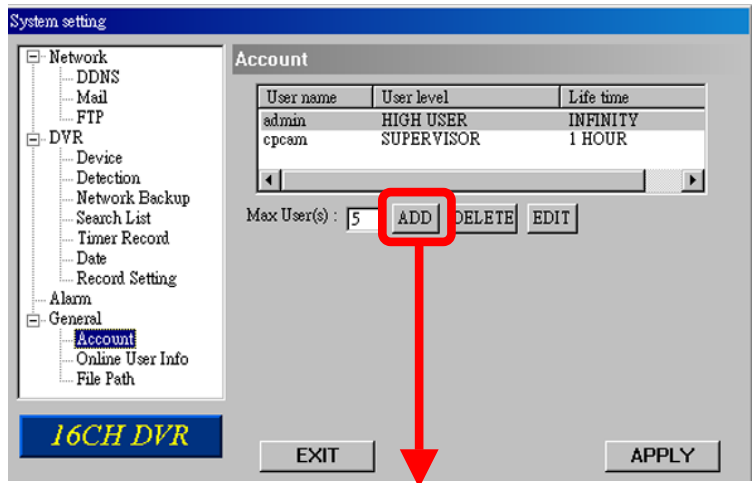


Online User Info

- Get all the current online users' information list (Name, IP Address, Authority Level, Resolution and Image Quality).

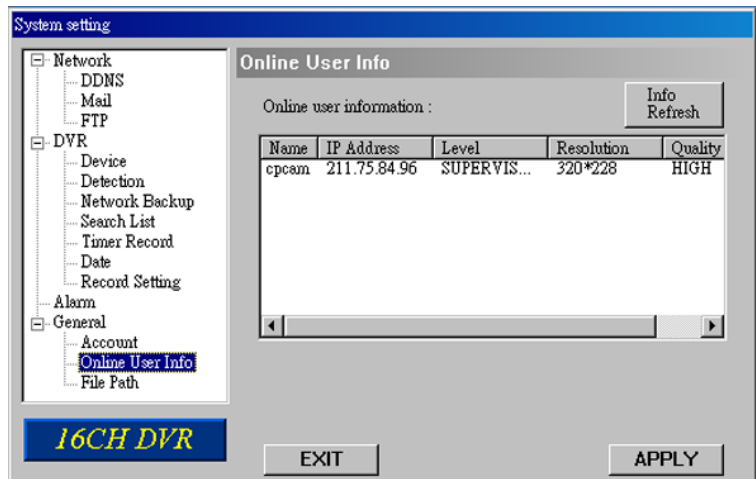

File Path

- Snapshot Path:**
Assign the route for saving the snapshot picture.
- Record Path:**
Assign the route for saving the manually recorded file.

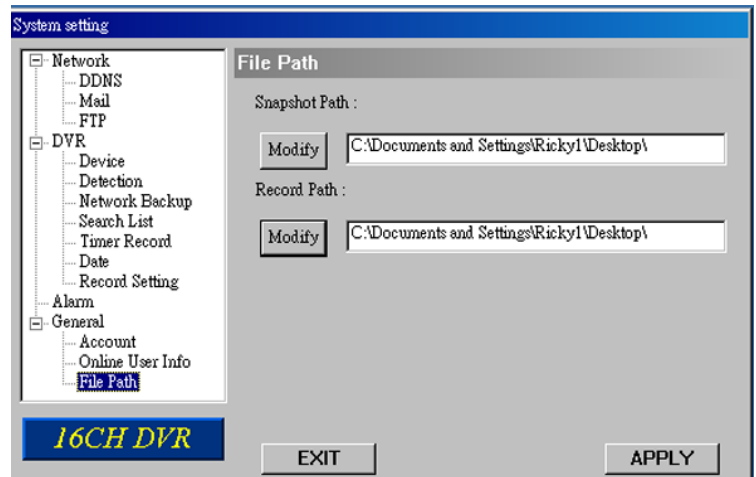

5.7 OPERATION VIA IE BROWSER

The surveillance images can also be viewed over the network with IE web browser. Please install the licensed software AP first.


***** This function is suitable in both Windows 2000 and Windows XP *****

Step 1: Type one IP address into the URL address box and press Enter. Then you'll see the following page.

NOTE: If the TCP port number is not 80, see the example below.

IP address: 60.121.46.236 ; Port number: 888

→ Key in “**http://60.121.46.236 :888**” into the URL address box and press Enter.

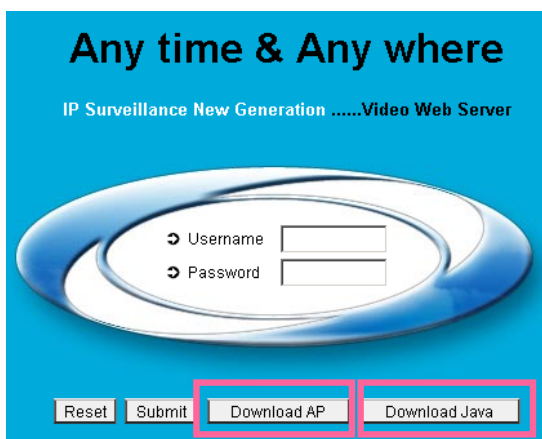


Download JAVA Program

- 1) Press “Download Java” button to go to JAVA website.
- 2) Select “Java Runtime Environment (JRE) 5.0 Update 7”, and press “Download”.
- 3) Press “Accept License Agreement”.
- 4) Choose “Windows offline installation” or “Windows online installation”.
- 5) Take “Windows offline installation” for an example. After downloading the setup file, run the setup file on the PC.

NOTE: Users can download the latest AP version and update the JAVA program from the website. The latest version of JAVA program is JRE 5.0 Update 7 at the time this manual goes to press.

Step 2: Key in “Username” and “Password” to login.

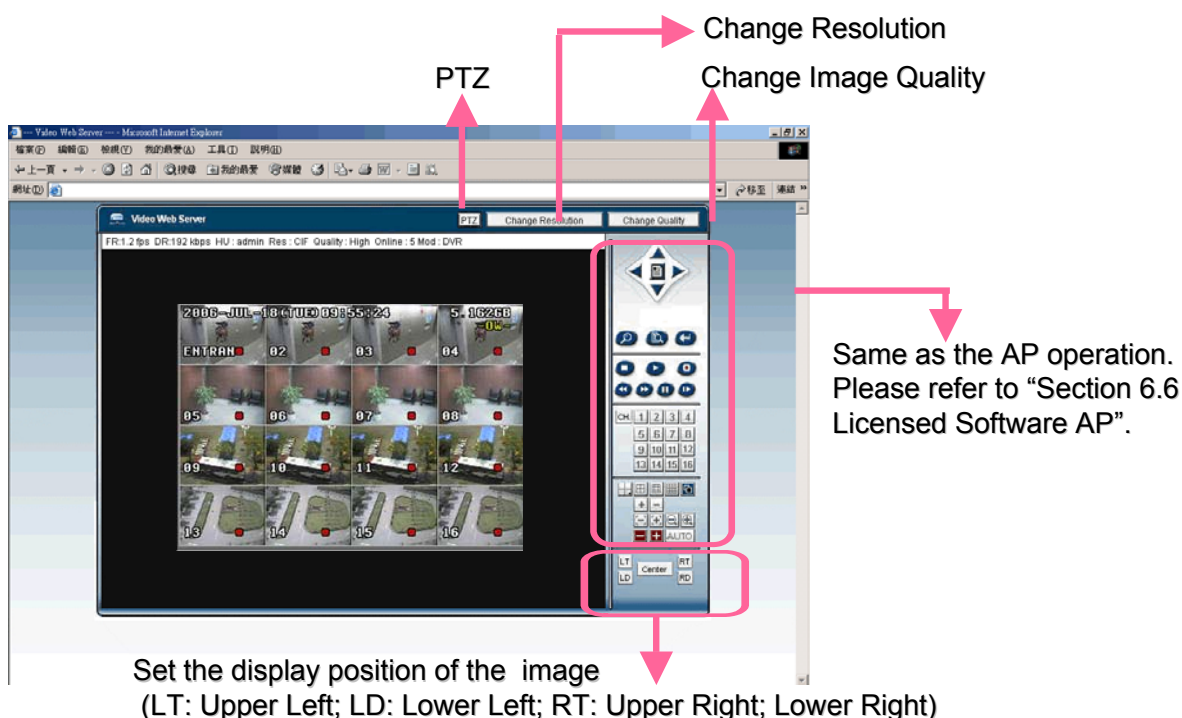

5.8 OPTIONAL PERIPHERALS

For the operation of the following peripherals, please refer to their manuals individually.

- 1) IDA (independent disk array)
- 2) VGA converter
- 3) IR Remote Control (4CH DVR only)

TROUBLESHOOTING

6.1 FAQ

Please refer to the FAQ table below for easy troubleshooting. The table below describes some typical problems and also their solutions. Please check them before calling your DVR dealer.

PROBLEM	SOLUTION
No power	Check power cord connection.
	Confirm that there is power at the outlet.
Not working when pressing any button	Press any key and then enter the password to exit "Key Lock" mode.
Timer record is not working	Check if the "RECORD ENABLE" is set to "YES".
No live video	Check the camera's video cable and connections.
	Check the monitor's video cable and connections.
	Confirm the camera is power supplied.
	Check the setting of the camera lens.
No recorded video	Check if the HDD is installed and connected properly
DVR keeps rebooting	Make sure the power connector and HDD are connected closely, or change another suitable HDD.
Detect HDD fail	Change another HDD for testing.
	Change another HDD cable for testing.
	Make sure HDD "Master", "Slave" mode is correctly set.
Can't detect your USB flash drive	Change another USB flash drive to test.
When two Seagate's power-saving HDDs are installed, DVR can't be turned on successfully.	Please don't use 2 Seagate's power-saving HDDs simultaneously.
Can't view the DVR images over the network with IE web browser	Update the JAVA program Update the firmware of the software AP
Can't play the recorded file on my DVR.	There must be at least 8192 images of recorded data for playback to work properly. If not, your DVR will stop the playback. For example, if the IPS is set to 30, the recording time should be at least 273 seconds (8192 images / 30 IPS) for the playback to work properly.


APPENDIX #1 – INSTALL THE HDD

- 16CH / 8CH
- 16CH (D) / 8CH (D) / 4CH (D)

Carefully follow the steps to ensure correct installation.

*** Note: If you want to install two HDDs, please set one HDD to “Master Mode” or “Single Mode”, and the other one to “Slave Mode”. ***


- 1) Open the upper cover of the DVR and screw out the bracket. ① ~ ②
- 2) Screw HDD to the HDD bracket. ③ ~ ⑧
- 3) Connect the HDD to the power connector and IDE BUS (make sure to align the HDD precisely to the pin connection). ⑨ ~ ⑭
- 4) Close the upper cover of the DVR.

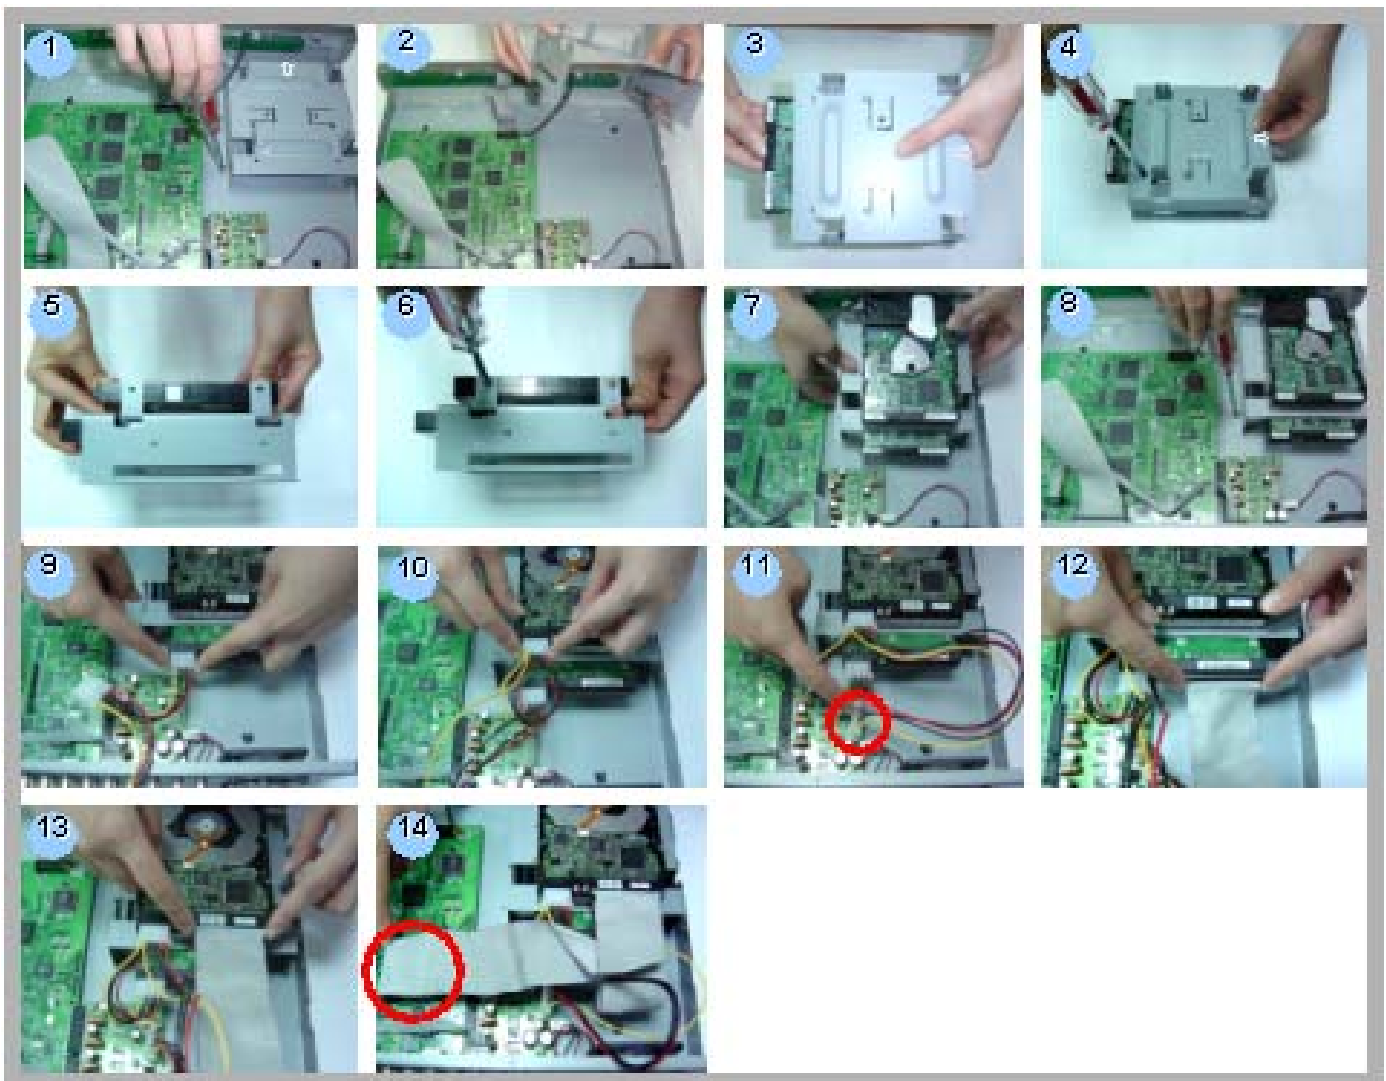


● 4CH

Carefully follow the steps to ensure correct installation.

*** Note: Please set one HDD to “Master Mode” or “Single Mode” ***

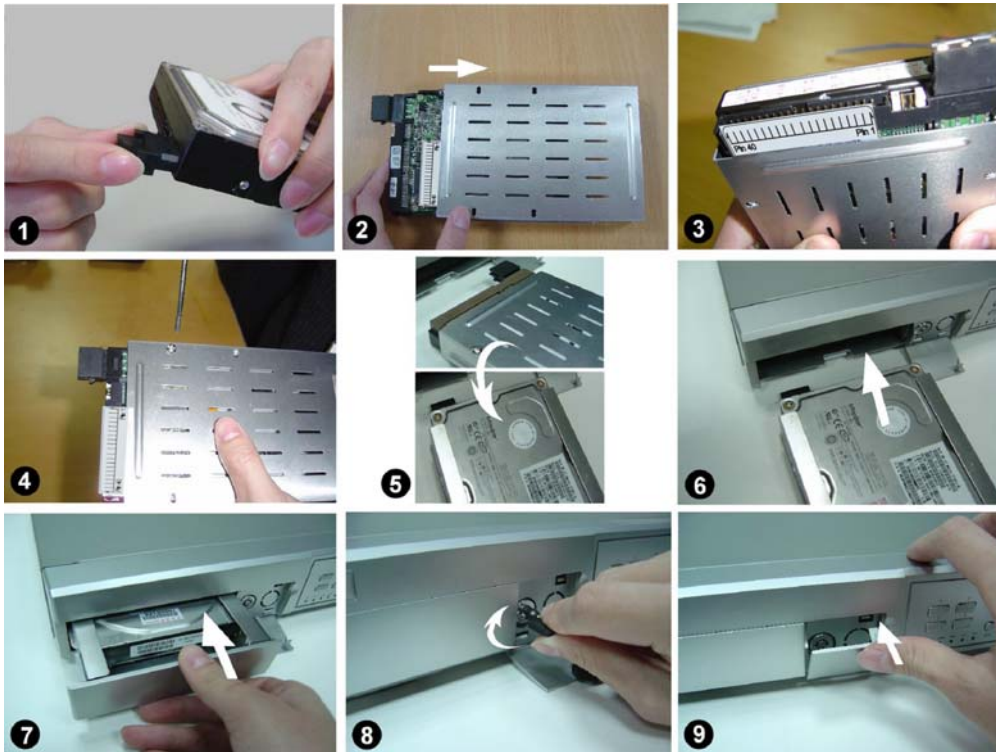

- **Step 1** Connect the connector with the HDD (Pic. 1).
- **Step 2** Put HDD into the HDD cartridge with the pins facing outside (Pic. 2).
- **Step 3** Fasten the HDD to the cartridge. Before you fasten the HDD, please be aware that you must to align the pins of the HDD with the pin marks of the cartridge. Then fasten the HDD correctly (Pic. 3 & 4). You must precisely align the hard disk to the pin connection to ensure correct installation.
- **Step 4** Reverse the HDD and put it into DVR (Pic. 5, 6 & 7).
- **Step 5** Lock the HDD slot by turning the key clockwise (Pic. 8).

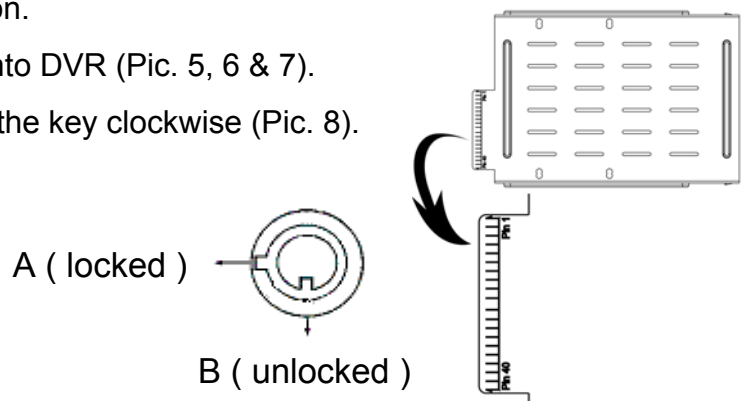


Note : If you do not lock the HDD slot, the DVR system will not function properly.

- **Step 6** Close the cap (Pic. 9).

APPENDIX #2 – PIN CONFIGURATION

- 16CH / 8CH
- 16CH (D) / 8CH (D)

PIN	FUNCTION	DESCRIPTION
1	GND	GROUND
2~9	ALARM INPUT	When connecting the wire from ALARM INPUT (PIN 2 -- 9) to GND (PIN 1) connector, DVR will start recording and the buzzer will be on. When "MENU -> ADVANCE -> DETECTION -> DETECTION SETUP -> ALARM" is set to "Low" : When the alarm input signal is " Low ", the unit starts to record and buzzer. When "MENU -> ADVANCE -> DETECTION -> DETECTION SETUP -> ALARM" is set to "High" : When the alarm input signal is " High ", the unit starts to record and buzzer.
10	PIN OFF	
11	TXD232	DVR can be controlled remotely by the keyboard of PC by using RS-232 serial communication signals.
12	RS485-A	DVR can be controlled remotely by the keyboard of PC by using RS-485 serial communication signals.
13	EXTERNAL ALARM NO.	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
14	PIN OFF	
15~22	ALARM INPUT	When connecting the wire from ALARM INPUT (PIN 15 -- 22) to GND (PIN 1) connector, DVR will start recording and the buzzer will be on. When "MENU -> ADVANCE -> DETECTION -> DETECTION SETUP -> ALARM" is set to "Low" : When the alarm input signal is " Low ", the unit starts to record and buzzer. When "MENU -> ADVANCE -> DETECTION -> DETECTION SETUP -> ALARM" is set to "High" : When the alarm input signal is " High ", the unit starts to record and buzzer.
23	RXD232	DVR can be controlled remotely by the keyboard of PC by using RS-232 serial communication signals.
24	RS485-B	DVR can be controlled remotely by the keyboard of PC by using RS-485 serial communication signals.
25	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.

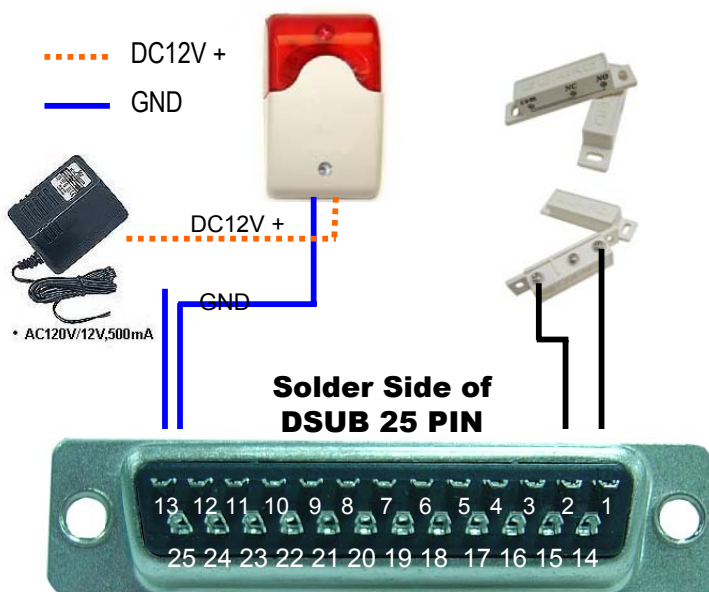


When the magnetic contact is opened, the alarm will be triggered and the recording is on. At the same time, COM connects with NO and the siren with strobe starts wailing and flashing.

NOTE: Please go to MENU -> ADVANCE -> DETECTION -> DETECTION SETUP, and set ALARM to LOW on the local machine.

● 4CH / 4CH (D)


Solder Side of DSUB 15 PIN

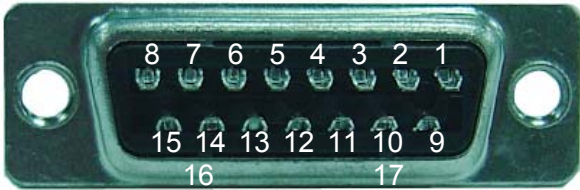

PIN	FUNCTION	DESCRIPTION
1	RS232-TX	DVR can be controlled remotely by the keyboard of PC by using RS-232 serial communication signals.
2	RS232-RX	DVR can be controlled remotely by the keyboard of PC by using RS-232 serial communication signals.
3~6	ALARM INPUT	To connect the wire from ALARM INPUT (PIN 3 -- 6) to GND (PIN 9) connector, DVR will start recording and the buzzer will be on. When "MENU -> DETECTION -> DETECTION SETUP -> ALARM" is set to "Low" : When the alarm input signal is " Low ", the unit starts to record and buzzer. When "MENU -> DETECTION -> DETECTION SETUP -> ALARM" is set to "High" : When the alarm input signal is " High ", the unit starts to record and buzzer.
7	EXTERNAL ALARM NC	Under the normal operation, COM connects with NC and disconnects from NO. But when any alarm is triggered, COM disconnects with NC and connects with NO. Attention: The voltage restriction is under DC24V 1A.
8	EXTERNAL ALARM NO.	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
9	GND	Signal GND.
10	RS485-B	DVR can be controlled remotely by the keyboard of PC by using RS-485 serial communication signals.
11	RS485-A	DVR can be controlled remotely by the keyboard of PC by using RS-485 serial communication signals.
12~13	PIN OFF	
14	ALARM RESET	Connecting the wire from ALARM RESET (PIN 14) to GND (PIN 9) connector will disable alarms. An external signal to ALARM RESET (PIN 14) can be used to reset both ALARM OUTPUT signal and DVR's internal buzzer. When any alarm has been triggered, the signal becomes "Low", and all alarm activities will be stopped. Under the normal operation, the signal remains "High".
15	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
16~17	GND	Earth GND

APPENDIX #3 – RS-232 Protocol

- 1) Use PC keyboards to simulate DVR keypads.
- 2) Data: REMOTE PROTOCOL uses 8 bit data, 1 start bit, 1 stop bit.

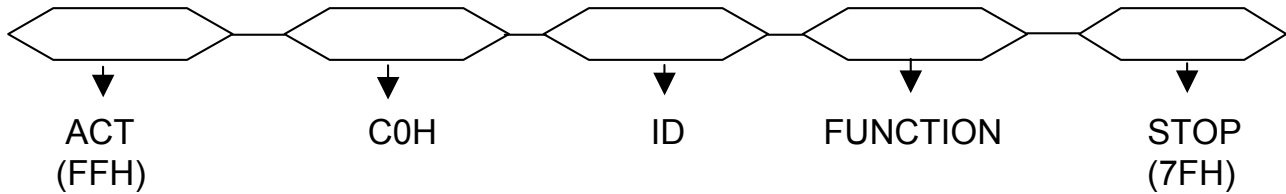

FUNCTION	CODE	ASCII	FUNCTION	CODE	ASCII
KEY_MENU	0x4D	M	KEY_SET_CHANNEL	0x6e	n
KEY_ENTER	0x0D	ENTER	KEY_DWELL	0x65	e
KEY_PLUS	0x6b	k	KEY_CH1	0x31	1
KEY_MINUS	0x6d	m	KEY_CH2	0x32	2
KEY_UP	0x55	U	KEY_CH3	0x33	3
KEY_DOWN	0x4E	N	KEY_CH4	0x34	4
KEY_LEFT	0x4C	L	KEY_CH5	0x35	5
KEY_RIGHT	0x52	R	KEY_CH6	0x36	6
KEY_POWER	0x57	W	KEY_CH7	0x37	7
KEY_REC	0x72	r	KEY_CH8	0x38	8
KEY_PLAY	0x50	P	KEY_CH9	0x39	9
KEY_SLOW	0x53	S	KEY_CH10	0x41	A
KEY_ZOOM	0x5A	z	KEY_CH11	0x42	B
KEY_KEY LOCK	0x4B	K	KEY_CH12	0x43	C
KEY_AUDIO	0x64	d	KEY_CH13	0x44	D
KEY_SEARCH	0x73	S	KEY_CH14	0x45	E
KEY_PTZ_MODE	0x70	p	KEY_CH15	0x46	F
KEY_PTZ_PRESET	0x71	q	KEY_CH16	0x47	G
KEY_PTZ_ZOOM_IN	0x69	i	KEY_EJECT_DVD	0x6a	j
KEY_PTZ_ZOOM_OUT	0x66	f	KEY_IRIS_NEAR	0x67	g
KEY_MODE	0x6f	o	KEY_IRIS_FAR	0x68	h
KEY_4 CUT	0x61	a	KEY_PTZ_LIGHT	0x6c	l
KEY_9 CUT	0x62	b	KEY_PTZ_WIPER	0x77	w
KEY_16 CUT	0x63	c			

APPENDIX #4 – RECORDING TIME TABLE

Take 16CH as an example

- 1) Recording time varies depending on the following factors:
 - * Different camera quality
 - * Different picture composition (such as frequency of the object movement)
- 2) Record day for 8CH: please multiply “Record day” by 2.
Record day for 4CH: please multiply “Record day” by 4.

Record mode	Quality	IPS	500GB record time(hour)	Record day
Frame	Best	120	109	4.6
		60	192	8.0
		30	349	14.6
		15	565	23.5
	High	120	138	5.8
		60	243	10.1
		30	442	18.4
		15	714	29.8
	Normal	120	182	7.6
		60	319	13.3
		30	581	24.2
		15	939	39.1
	Basic	120	293	12.2
		60	516	21.5
		30	939	39.1
		15	1517	63.2
CIF	Best	480	130	5.4
		240	229	9.5
		120	417	17.4
		60	673	28.0
	High	480	184	7.6
		240	323	13.4
		120	587	24.5
		60	949	39.5
	Normal	480	242	10.1
		240	424	17.7
		120	773	32.2
		60	1249	52.0
	Basic	480	335	13.9
		240	588	24.5
		120	1071	44.6
		60	1730	72.1

APPENDIX #5 – COMPATIBLE USB BRAND

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table. If the USB flash drive is not supported by the DVR, the "USB ERROR" message will be shown on the screen.

NOTE: Please use PC to format the USB flash drive as "FAT 32".

Manufacturer	Model	Capacity
Transcend	JetFlash 110	256MB
Transcend	JetFlash 110	512MB
Kingston	DataTraveler DTI KUSBDTI/256FE	256MB
Kingston	DataTraveler DTI KUSBDTI/256FE	512MB
PQI	Cool Drive (U339)	256MB
PQI	Cool Drive (U339)	512MB
Apacer	HANDY STENO HF202	256MB
Apacer	HANDY STENO HF202	512MB
SanDisk	Cruzer Micro	128MB
SanDisk	Cruzer Micro	256MB
SanDisk	Cruzer Micro	512MB

APPENDIX #6 – COMPATIBLE HDD BRAND

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table.

Brand Name	Model	Capacity	Rotation
HITACHI	Deskstar HDS728080PLAT20	80GB	7200 rpm
HITACHI	Deskstar 180 GXP	120GB	7200 rpm
HITACHI	Deskstar 7K250, HDS722516VLAT20	160GB	7200 rpm
HITACHI	HDS722516VLAT80	160GB	7200 rpm
HITACHI	HDS722516DLAT80	160GB	7200 rpm
HITACHI	Deskstar 7K250, HDS722525VLAT80	250GB	7200 rpm
HITACHI	Deskstar 511DHT0021	500GB	7200 rpm
IBM	Deskstar 120GXP (80GB)	80GB	7200 rpm
IBM	Deskstar 120GXP (120GB)	120GB	7200 rpm
Maxtor	DiamondMax 536DX(60GB) 4W060H4	60GB	5400 rpm
Maxtor	DiamondMax Plus 9	80GB	7200 rpm
Maxtor	DiamondMax Plus 9, Model#6Y120L	120GB	7200 rpm
Maxtor	DiamondMax Plus 9, Model#6Y160L0	160GB	7200 rpm
Maxtor	DiamondMax 10 6L120PO	120GB	7200 rpm
Maxtor	DiamondMax 10 6L160R0	160GB	7200 rpm
Maxtor	DiamondMax 10 6L200R0	200GB	7200 rpm
Maxtor	DiamondMax 10 6L200PO	200GB	7200 rpm
Maxtor	MaxLine Plus II , Model#7Y250P0	250GB	7200 rpm
Maxtor	DiamondMax 10 6L250R0-3	250GB	7200 rpm
Seagate	Barracuda ATA IV, ST380021A	80GB	7200 rpm
Seagate	Barracuda ATA V, ST3120023A	120GB	7200 rpm
Seagate	Barracuda 7200.7 Plus, ST3160023A	160GB	7200 rpm
Seagate	Barracuda 7200.8 ST3200826A	200GB	7200 rpm
Seagate	Barracuda 7200.8 ST3250826A	250GB	7200 rpm
Seagate	Barracuda 7200.8 ST3300831A/P	300GB	7200 rpm
Seagate	Barracuda 7200.8 ST3400832A/P	400GB	7200 rpm
Western Digital	Caviar WD1200BB-00CAA1	120GB	7200 rpm
Western Digital	Caviar SE WD1200JB	120GB	7200 rpm
Western Digital	Caviar SE WD1600JB	160GB	7200 rpm
Western Digital	Caviar WD2000BB-00DWA0	200GB	7200 rpm
Western Digital	CaviarSE WD2500JB	250GB	7200 rpm