

SAMSUNG TECHWIN



SALES NETWORK

• SAMSUNG TECHWIN CO., LTD.

145-3, Sangdaewon 1-dong, Jungwon-gu, Seongnam-si,
Gyeonggi-do 462-703, Korea
TEL : +82-31-740-8137~8139 FAX : +82-31-740-8145

• SAMSUNG OPTO-ELECTRONICS UK, LTD.

Samsung House, 1000 Hillwood Drive, Hillwood Business
Park Chertsey, Surrey KT16 0PS
TEL : +44-1932-45-5308 FAX : +44-1932-45-5325

www.samsungtechwin.com
www.samsungcctv.com

• TIANJIN SAMSUNG OPTO-ELECTRONICS CO., LTD.

7 Pingchang Rd, Nankai Dist. Tianjin 300190, P.R China
TEL : +86-22-2761-4724(33821) FAX : +86-22-2761-6514

P/No. : Z6806-0791-01A
VAN 06. 10



Clear & Crisp



High Resolution Color Camera **SDC-313B** User's Manual


Thank you for purchasing a SAMSUNG CCD CAMERA.
Before attempting to connect or operate this product,
please read these instructions carefully and save this manual for future use.

ENGLISH

Contents



Precautions	8	Camera Operation	20
Component	10	■ Menu	20
Name and Function of Each Parts	11	■ Settings	21
■ FRONT	11	• LENS (selection)	23
■ SIDE	12	• SHUTTER (condition and speed control)	24
■ BOTTOM	13	• WHITE BALANCE control	25
■ BACK	14	• BACKLIGHT (Backlight Compensation)	26
Installation	15	• AGC (Auto Gain Control)	27
■ Lens	15	• SSNR (Samsung Super Noise reduction)	28
■ Connecting to a Monitor	18	• SENS-UP (Low illuminance)	29
■ Connecting to Power	19	• SPECIAL	30
		• EXIT	35
		Troubleshooting	36
		Specification	38

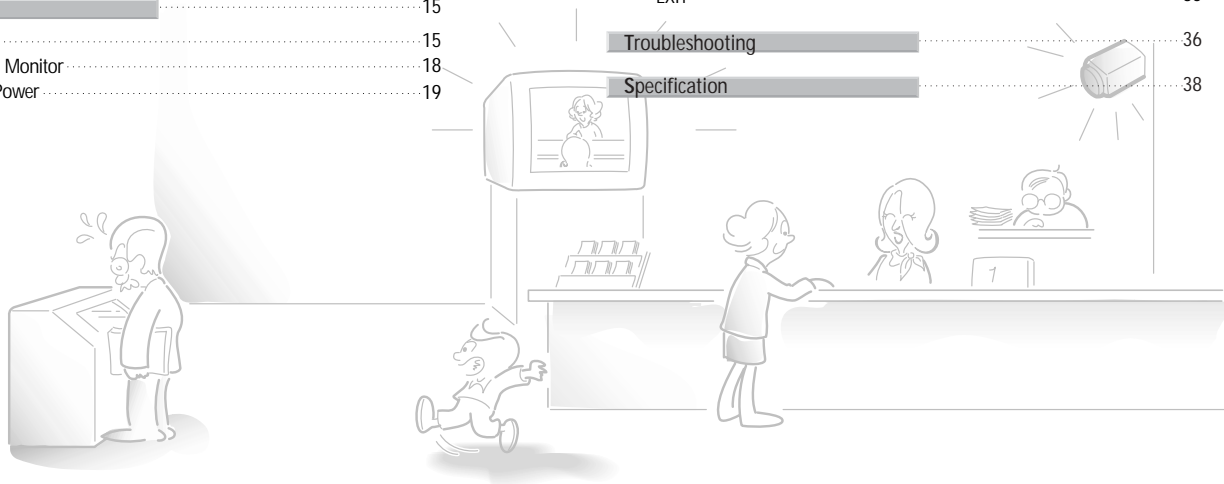

Features

Horizontal Resolution 530 TV Lines

Clear image quality has been achieved by employing a CCD with 410,000 pixels (NTSC), 470,000 pixels (PAL), which provides a horizontal resolution of 530 TV lines.

Electronic IRIS

The electronic IRIS function enables continuous automatic control of the shutter between 1/60(1/50) ~ 1/120,000 seconds.

PRIVACY Function

The PRIVACY function conceals the areas you do not wish to appear on the screen.

VIDEO/DC Drive Lens

The video drive lens and the DC drive lens can be selected by the touch of a switch.

High Sensitivity

The built-in high sensitivity COLOR CCD enables a clear image even in 0.002 Lux(Sens-Up) illumination.

SSNR (Samsung Super Noise Reduction)

By using built-in SSNR function manufactured by SAMSUNG TECHWIN, the amount of low illuminance noise has been significantly reduced, and the signal-to-noise ratio(S/N) as well as horizontal resolution have been improved, resulting in a clear and sharp image display even in the dark.

Controlled by OSD Menu

The camera can be controlled by selecting text displayed on the monitor screen.

Additional Functions

SENS-UP, MOTION DETECTION, MIRROR, SHARPNESS and SYNC(INT/LL) functions are also available.

Warning

The camera needs periodic inspection.

Contact an authorized technician for inspection.

Stop using your camera when you find a malfunction.

If you use your camera around smoke or unusual heat for a long time, a fire may be caused.

Do not install the camera on a surface that can not support it.

Unless the surface is suitable, it could cause falling or other hazards.

Do not handle the camera with wet hands

It could cause an electric shock.

Do not disassemble the camera.

It may result in fire, electric shock or other hazards.

Do not use the camera close to a gas or oil leak.

It may result in fire or other hazards.

Precautions

Do not install under extreme temperature conditions.



Use only under temperature conditions between -10°C and $+50^{\circ}\text{C}$. Provide good ventilation when using in high temperature conditions.

Do not install in high humidity environment.




May lower image quality.

Do not drop the camera or subject it to physical shock.




May cause a product malfunction.

Never keep the camera face to strong light directly.

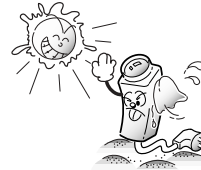

May damage the CCD.

Do not install under unstable lighting conditions.

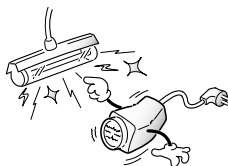

Severe lighting changes or flickering may hinder normal camera operation.

Avoid touching the camera lens.




The lens is the most important component of the camera. Be careful not to smear it with fingerprints.

Do not expose the camera to rain or other types of liquids.



Wipe dry any liquids. Liquids may contain minerals that are corrosive to electronic components.

Do not expose the camera to radioactivity.

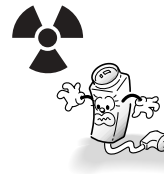

Radioactivity exposure may damage the CCD.




Notes


- Exposure to a spotlight or an object emitting strong light may cause smear or blooming.
- Ensure that the power source complies with normal specifications before supplying it to the camera.

Component

1. HIGH RESOLUTION COLOR CAMERA

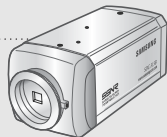

2. Auto iris lens connection plug



3. C-Mount adaptor




4. Instruction manual



Names and Functions of Parts

FRONT

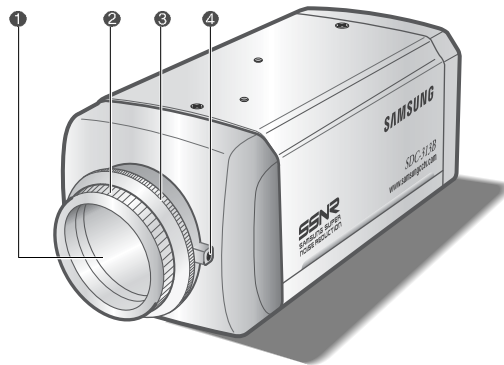

1 CCD protection cap

Please cover the CCD SENSOR when not using it.

2 C-Mount lens adaptor

Please attach the C-Mount lens here.

3 CS-Mount lens adaptor


Please remove the C-MOUNT lens adaptor and then attach it.

4 Back Focus clamp screw

Please loosen the clamp screw with a screwdriver before adjusting the Back Focal length.

Names and Functions of Parts


SIDE

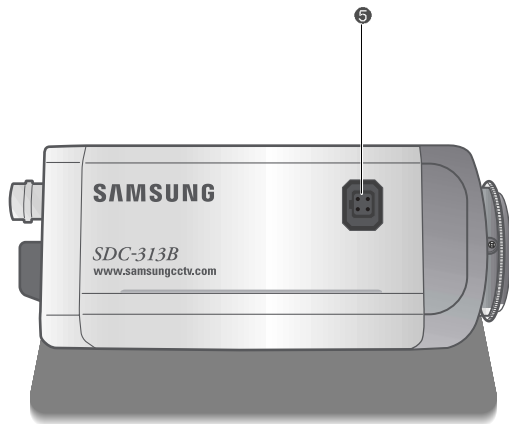

5 Auto iris lens connector


This is the connection terminal for the auto iris lens.

BOTTOM

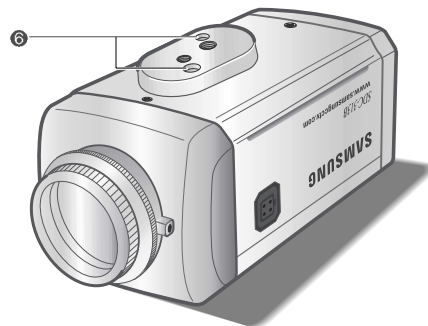


6 Mounting bracket screw hole

Please use the screw hole when fixing the camera onto the mounting bracket. Please use the clamp screw as specified below.

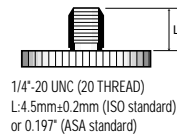


※ The mounting bracket can be separated and attached to the top of the camera. In this instance please do not tighten the screw to a depth of more than 4mm, otherwise serious damage can occur to the inside of the camera.

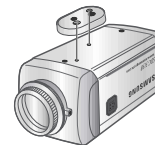

Notes

- This camera package does not include the mounting bracket. Please refer to the user's manual for installation of the mounting bracket.

BACK

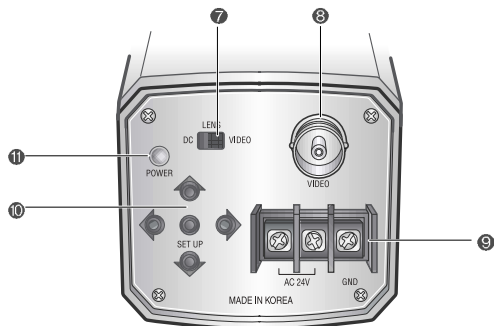

7 Auto iris lens selection switch

Please change the mode to DC or VIDEO depending on the type of auto iris lens being used.

8 Video output terminal

Sends video signal and connects to the video input terminal of the monitor.

9 Power input terminal

Connects to the power appropriate to each model.

10 Setting button

- SETUP button : Used for the menu display. This button can be used to confirm settings after changing the value of the selected function or current conditions.
- UP & DOWN buttons : Used for selecting items by moving the cursor up or down on the menu screen.
- LEFT & RIGHT buttons : Used when changing item values, by moving the cursor to the left or right on the menu screen.

11 Power lamp

Lights up when the correct power is supplied to the camera.

Lens

Lenses are sold separately. Lenses such as an auto iris lens, CS-Mount lens and C-Mount lens can be used.




Notes


- Please keep the lens clean.
- Any foreign objects and fingermarks on the lens can cause inferior image quality in low light level conditions.

When using an auto iris lens

1. Please peel off about 8mm of the outer skin of the auto iris lens cable.

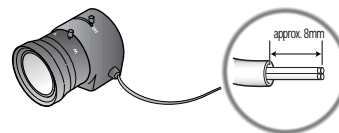



2. Please peel off about 2mm of the outer skin of the insulated conductor inside the lens cable.

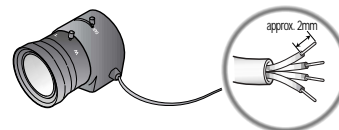

Installation


3. Please remove the cover of the auto iris lens connection plug and solder the lens cable to the connector pin in the plug.

Pin No.	LENS	
	DC	VEDIO
No.1 Pin	Damping-	Red (power)
No.2 Pin	Damping+	NC
No.3 Pin	Drive+	White (video signal)
No.4 Pin	Drive-	Black (GND)

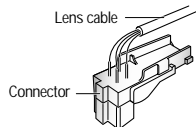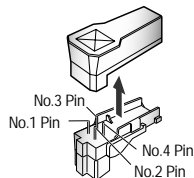

4. Please replace the auto iris lens connection plug cover and take off the CCD protection cap, and then attach the auto iris lens to the camera by screwing it in clockwise.

5. Please insert the connection plug that is connected to the auto iris lens cable into the auto lens connector, which is located on the side of the camera.

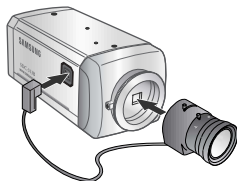


6. Please set the lens selection switch, located on the side of the camera, to DC or VIDEO depending on the type of auto iris lens which is being used.




When using a C-Mount lens

Please take off the CCD protection cap and attach the C-Mount lens to the camera by screwing it in clockwise.

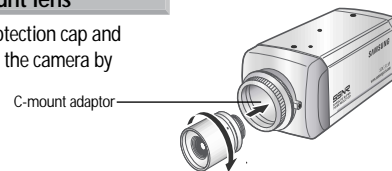


When using a CS-Mount lens

1. Please take off the CCD protection cap and C-mount adaptor.

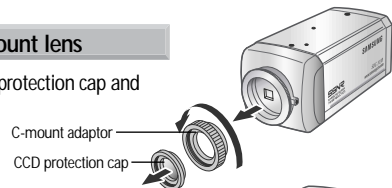


2. Please attach the CS-Mount lens to the camera by screwing it in clockwise.

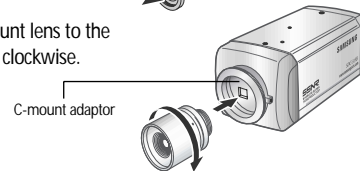

Notes

- Please use the specified lens connection parts as shown in the picture below. The use of the wrong sized parts of the wrong size may cause damage to the inside of the camera or result in poor fitting.
- Use of a lens which is too heavy affects the balance of the camera and may cause a malfunction. Please use a lens that weighs less than 450g.
- Please select Av mode if possible when adjusting the automatic light control (ALC) of an auto lens. Use of PK mode may cause hunting.




C-mount lens : 10 mm or less
CS-mount lens : 5 mm or less


Installation

Connecting to a Monitor

Please connect the video output terminal located on the back of the camera to the monitor.

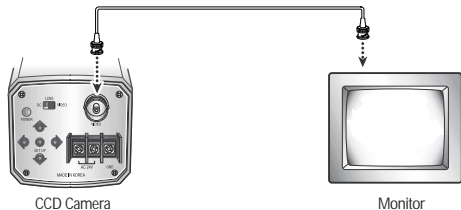

- The connection method varies depending on the type of monitor and accessories. Please refer to the user's manual for each instrument.
- Please turn off the power when connecting.
- Please select Hi-Z on the 75Ω/Hi-Z switch for the intermediate video TV set and select 75Ω for the Intermediate device as shown in the picture below.

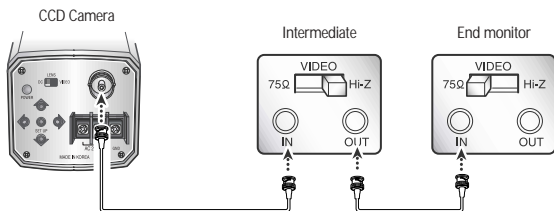


Connecting to Power

Please check the model type and standard power requirement before connecting to power.


AC Power Type (AC 24V, 300mA)

The recommended adaptor specification for SDC-313BNA is AC 24V / 300mA.

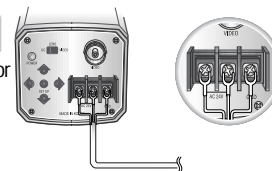

DC Power Type (DC 12V, 500mA)

The recommended adaptor specification for SDC-313BPD is DC 12V / 500mA.

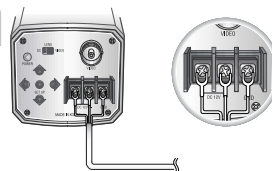

When the resistance value of copper wire is at [20°C(68°F)]

Copper wire size(AWG)	#24(0.22mm ²)	#22(0.33mm ²)	#20(0.52mm ²)	#18(0.83mm ²)
Resistance value(Ω/m)	0.078	0.050	0.030	0.018
Voltage drop(V/m)	0.028	0.018	0.011	0.006

- As shown in the table above, voltage decreases as the wire gets longer. Therefore use of an excessively long adaptor output line for connection to the camera may affect the performance of the camera.

※ Note that adaptor is not supplied with accessory

※ Standard voltage for camera operation : DC 12V ± 10%

※ There may be some deviation in voltage drop depending on the type of wire and the manufacturer.

Camera Operation


Menu

SETUP menu	
LENS (selection)	· MANUAL · DC/VIDEO
SHUTTER (Condition and speed control)	· ESC · MANUAL · FLK
WHITE BALANCE control	· ATW · AWC · MANUAL
BACKLIGHT (Backlight compensation)	· OFF · LOW · MIDDLE · HIGH
AGC (Auto Gain Control)	· OFF · LOW · MIDDLE · HIGH
SSNR (Samsung super noise reduction)	· OFF · LOW · MIDDLE · HIGH
SENS-UP (Low illuminance)	· OFF · AUTO
SPECIAL	· CAMERA ID · SYNC · MOTION DET · PRIVACY · MIRROR · SHARPNESS · RESET · RETURN
EXIT	


Camera Operation

Settings

Settings can be made using the 5 buttons located on the back of the camera.

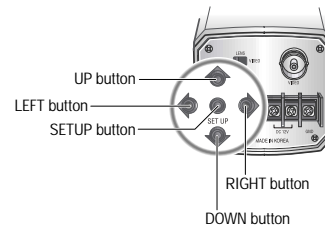


1. Please press the SETUP button
 - Settings can now be made. The SETUP menu is displayed on the monitor.

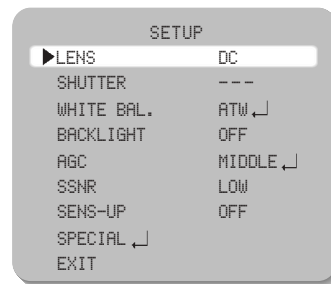

2. Please select any function you wish to activate by using the UP and DOWN buttons.
 - The arrow can be moved up or down by using the UP and DOWN buttons. Please position the arrow to point to the function you wish to operate.

Camera Operation

Select any function you wish to operate by using the UP and DOWN buttons.

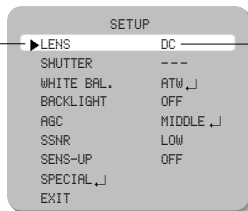

Modes can be changed using the LEFT and RIGHT buttons.

3. Please press the LEFT or RIGHT button if you wish to change mode.
 - When the LEFT or RIGHT button is pressed, available values and modes are displayed in order. Please keep pressing the button until you get to the mode you wish to operate.
4. Please select 'EXIT' and then press the SETUP button to finish the setting.




Notes

- If \downarrow appears at the mode you wish to operate, it means that there is a sub-menu which can be selected by pressing the SETUP button.
- If --- appears at the mode item, it means that there is no mode available to be selected.

LENS (selection)

This function is used to adjust the brightness of the screen.

1. When the SETUP menu is displayed on the screen, please position the arrow to point to 'LENS' by using the UP and DOWN buttons.
2. Please select the type of the lens you wish to use by pressing the LEFT or RIGHT button.

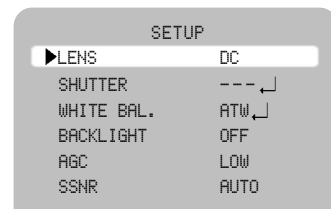

- DC/VIDEO: Auto iris lens selection



Notes

- When using an auto iris lens, the setting of the auto iris lens selection switch, located on the back of the camera, must be on DC or VIDEO depending on the type of the lens which is being used. (Please refer to the picture on page 15)
- The brightness of the screen can be adjusted in DC mode. The brightness can be adjusted within the range of 1-70. The optimum level of brightness for the user can be achieved by adjustment.




- MANUAL: Manual lens selection

3. Please press the SETUP button if you wish to return to the previous menu.

Camera Operation

SHUTTER (condition and speed control)

- When the SETUP menu is on the screen, please position the arrow to point to 'SHUTTER' by using the DOWN button.
- Please select the shutter mode by pressing the LEFT or RIGHT button.
 - FLK**: Please select 'FLK' mode when flickering occurs on the screen, due to an imbalance between illumination and frequency. NTSC Model: 1/100, PAL MODEL: 1/120
 - ESC**: Auto control of the shutter speed can be achieved. When ESC mode is on, the speed is controlled automatically according to the brightness of the screen.
 - MANUAL**: The shutter speed can be controlled manually.

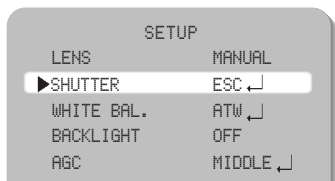

- Please select 'MANUAL' mode if you wish to adjust the shutter manually.
 - You can select speed from '1/60' to '1/120,000'sec (NTSC Models), '1/50' to '1/120,000'sec (PAL Models).
- Please press the SETUP button when all the settings are complete.




Notes

- When selecting DC/VIDEO lens, the shutter speed is fixed at 1/60 (1/50).
- While using the internal synchronous system, if the shutter setting is on 'ESC' and the camera is directly facing a bright fluorescent light, the image on the screen can be adversely affected. Therefore please choose the installation location with care.
- When 'MANUAL' mode is on, the SENS UP function does not operate.

WHITE BALANCE control

The screen color can be adjusted by using the WHITE BALANCE function.

- Please position the arrow to point to 'WHITE BAL.' on the SETUP menu by using the UP and DOWN buttons.
- Please select the mode you wish to operate by pressing the LEFT or RIGHT button.

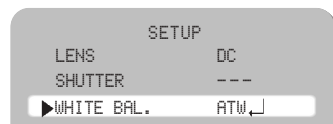

*Please select one of the 3 modes below.

ATW(Auto Tracking White Balance):

- NORMAL**: This mode can be used within the color temperature range 1,800K-8000K. (fluorescent light, outdoor, normal environment)
- SPECIAL**: This mode can be used within the color temperature range 1,800K-10500K (strong sodium vapor lamp or metal lamp)

AWC(Auto White Balance Control): Please press the SETUP button while the camera is directed at a piece of white paper to obtain the optimum state under current illumination. If the environment including the light source is changed, you have to adjust the white balance again.

MANUAL: The manual adjustment mode enables finer adjustment. Please select ATW or AWC first. Please change to manual adjustment mode and press the SETUP button. Please set the appropriate color temperature, and then increase or decrease the red and blue color values while monitoring the color changes on the object.



Notes


- Under the following conditions the WHITE BALANCE function may not operate properly. In such cases, please select the AWC mode.
 - When the object's surroundings have a very high color temperature (Ex. a clear sky and sunset)
 - When the object's surroundings are dark
 - If the camera directly faces a fluorescent light or is installed in a place where there are considerable changes in illumination, the WHITE BALANCE function may become unstable.

Camera Operation

BACKLIGHT (Backlight Compensation)

When there is a strong backlight behind the object, clear images of the background as well as the object can still be obtained by using the BACKLIGHT function.

1. Please position the arrow to point to 'BACKLIGHT' on the SETUP menu by using the UP and DOWN buttons.
2. Please select the mode you wish to operate by pressing the LEFT or RIGHT button.

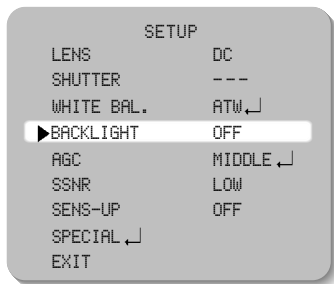

●HIGH/MIDDLE/LOW : You can adjust the sensitivity of Backlight Compensation.

●OFF: BACKLIGHT function does not operate.




BACKLIGHT ON



BACKLIGHT OFF

AGC (Auto Gain Control)

1. Please position the arrow to point to 'AGC' on the SETUP menu by using the UP and DOWN buttons.
2. Please select the mode you wish to operate by pressing the LEFT or RIGHT button. As the level of gain increases, the screen gets brighter and the level of noise also increases.
 - HIGH: The gain increases or decreases within the range of 6dB ~ 26dB.
 - MIDDLE: The gain increases or decreases within the range of 6dB ~ 22dB.
 - LOW: The gain increases or decreases within the range of 6dB ~ 10dB.
 - OFF: The gain is fixed at 6dB.

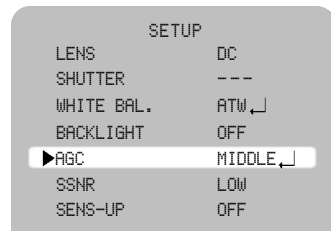

3. Please press the SETUP button. The BRIGHTNESS can be adjusted within the range of 1~70.




4. Please press the SETUP button when all the settings are complete.

Camera Operation

SSNR (Samsung Super Noise reduction)

The background noise in the low light level decreases automatically as the level of gain changes.

1. Please position the arrow to point to 'SSNR' on the SETUP menu by using the UP and DOWN buttons.
2. Please select the mode you wish to operate by pressing the LEFT or RIGHT button.

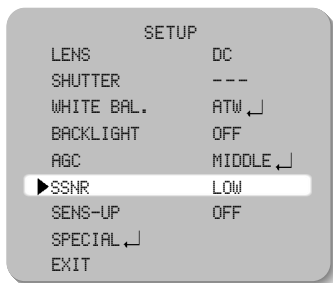

- **OFF:** There is no reduction in noise level.
- **LOW:** There is a small reduction in noise level with almost no ghost image.
- **MIDDLE:** The most effective mode. There is a sufficient reduction in noise levels without causing much ghost imaging.
- **HIGH:** The level of noise is reduced greatly, however there is an increase in ghost imaging.

Notes

- When AGC is turned off, SSNR does not operate.


SENS-UP (Low illuminance)

SENS-UP helps maintain a bright, clear screen image by automatically detecting changes in the level of light in low light level conditions.

1. Please position the arrow to point to 'SENS-UP' on the SETUP menu by using the UP and DOWN buttons.
2. Please select the mode you wish to operate by pressing the LEFT or RIGHT button.
 - **AUTO:** Low light level auto mode
 - **OFF:** The function does not operate.

Notes

- When SHUTTER is in the manual mode, SENS-UP does not operate.

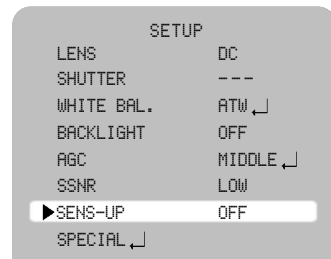

3. Please press the SETUP button when all the settings are complete.


Notes

- The maximum storage magnification in low light level can be adjusted by pressing the SETUP button in 'AUTO' mode.(X2-X128)
- As the magnification increases, the screen gets brighter; moving object gets more afterimage.
- If storage magnification is increased while SENS UP is operating, it may cause noise, and spots may appear; however this is normal.

Camera Operation

SPECIAL

1. Please position the arrow to point to 'SPECIAL' on the SETUP menu by using the UP and DOWN buttons.
2. Please select the mode you wish to operate by pressing the UP or DOWN button.

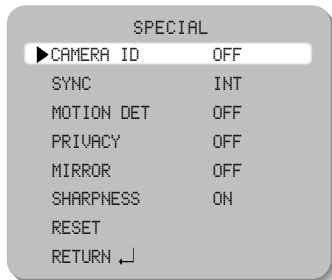


● **CAMERA ID:** If the ID is input, the camera ID appears on the monitor.


- 1) Please position the arrow to point to 'CAMERA ID' by using the UP or DOWN button.
- 2) Please select 'ON' by pressing the LEFT or RIGHT button.

Notes

- If 'OFF' is selected, the ID does not appear on the monitor even if it has been input.

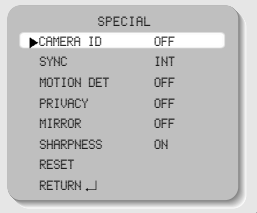


- 3) Please press the SETUP button.

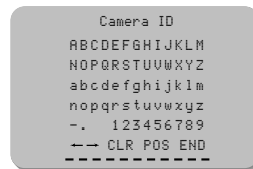

- 4) Up to 15 letters can be used for the ID.

- ① Please move the cursor to the letter you wish to choose by using the UP and DOWN button.

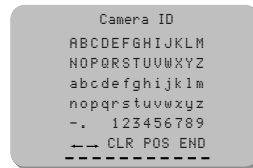

- ② Select an ID from A, B-Y, Z, a, b-y, z, 0-1~8, 9 by using the UP, DOWN, LEFT and RIGHT buttons.
- ③ Please lock in the letters by using the SETUP button.
 - When the letter is locked in, the cursor moves to the next space.
- ④ Please repeat the above to input the ID.

Notes


- If the wrong name has been input.....

If you press the SETUP button after moving the cursor to CLR, all the letters will be erased. If you want to correct a letter, please move the cursor to the arrow at the bottom left of the screen and press 'SET'. Please position the cursor above the letter you wish to correct, and then move the cursor onto the letter you wish to choose and press the SETUP button.

Camera Operation

5) When a name has been chosen, please select a position for the name display.

- Please move the cursor onto 'POS' and then press the SETUP button.

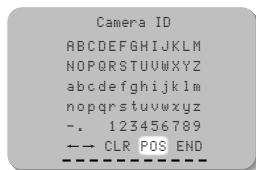

- The name will appear at the top left hand corner.



- Please find the position you wish to display the name by using the 4 directional buttons, and then press the SETUP button.




6) Please select 'END' and then press the SETUP button to complete ID input.

● **SYNC** : Two SYNCHRONIZATION modes are available INTERNAL and EXTERNAL LINE-LOCK. In LINE-LOCK mode, it synchronizes the video signal between cameras without a synchronous generator. The line-lock synchronization is only used in the areas of 60Hz(NTSC Model) / 50Hz(PAL Model)

- INT : Internal synchronization - LL : External line-lock synchronization

- If you choose 'LL', you can adjust the desired phase. Press the SET button.
- You can adjust the desired phase from 0 to 359.

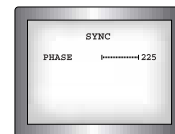

Notes

- When the power frequency is 50Hz, you can not use line-lock mode (NTSC MODEL).
- When the power frequency is 60Hz, you can not use the line-lock mode(PAL MODEL).
- 'Sync' mode is fixed to 'INT' in DC12V input power.

● MOTION DETECTION:

This product has a feature that allows you to observe movements of objects in 4 different areas on the screen, and the words 'MOTION DETECTED' appear on the screen when movement is detected; hence a single individual can conduct supervision efficiently. The camera detects an object's movement by sensing disparity of outline, and level of brightness and color.

- Please press the SETUP button.
 - OFF : MOTION DETECTION mode is cancelled.
 - ON : Any motion in the selected areas is observed.
- Please select the area you wish to observe from the 4 areas in AREA SEL mode.
- Please select ON mode for the chosen area.
- Please adjust the size of the area to be observed by using the UP, DOWN, LEFT or RIGHT button.
- Please press the SETUP button to save the changes and complete the setting.



Notes

- There is no 'MD' output signal. 'MD' is on screen display only words.

Camera Operation

☉ **PRIVACY:** This mode conceals the areas you do not wish to appear on the screen.

- OFF : Cancels the PRIVACY mode.
- ON : Operates the PRIVACY mode.
- Please press the SETUP button.



- Please select the area you do not wish to appear from the 4 areas in AREA SEL mode.
- Please select ON mode for the chosen area.
- Please adjust the size of the area to be concealed by using the UP, DOWN, LEFT or RIGHT button.

☉ **MIRROR**

- ON : Sets a horizontal image inversion.
- OFF : Cancels the inversion.



☉ **SHARPNESS:** The outline of the video image becomes cleaner and more distinctive as the level of SHARPNESS increases. If the level goes up excessively, however, it may affect the video image and generate noise.

- Please press the SETUP button.



- The available range of level is 0 ~ 31.

☉ **RESET:** Returns to the level which was set by the manufacturer for shipment.

☉ **RETURN:** Returns to the SETUP menu.

EXIT

Saves all the setting menus and then exits.

Troubleshooting



If you have trouble operating your camera, refer to the following table. If the guidelines do not enable you to solve the problem, contact an authorized technician.

Problem	Solution
Nothing appears on the screen.	<ul style="list-style-type: none"> • Please check the power connection. • Please check the video signal line connection. • Please check and make sure that the auto lens switch is set to DC (VIDEO) when using a DC (VIDEO) lens. • Please check the Brightness of Auto Iris lens.
The video image is not clear.	<ul style="list-style-type: none"> • Please check if the lens is clean. Please clean the lens with a clean cloth or brush. • Please adjust the contrast feature of the monitor. • Please make sure that the screen is not exposed directly to a bright light. Please move the camera if necessary. • Please readjust the back focus of the camera.
The screen is dark.	<ul style="list-style-type: none"> • Please adjust the contrast feature of the monitor. • If you have an intermediate device, set the 75Ω/Hi-z properly, and check the terminals. (refer to page 18) • Please check if an auto iris lens is being used and adjust the brightness level.
There is a problem with the camera operation. The camera surface is too hot and black stripes appear on the screen.	<ul style="list-style-type: none"> • Please check if an appropriate power source to the camera complies with the manufacturer's standard requirement, or if the voltage keeps changing.

Problem	Solution
The MOTION DETECTION function is not working.	<ul style="list-style-type: none"> • Please check if 'MOTION DETECTION' mode is turned on. • Please check if the MD LEVEL is too low. • Please check the setting of the MD AREA.
Colors are not quite right.	<ul style="list-style-type: none"> • Please check the 'WHITE BAL' setting. (Please refer to page 25)
The screen is flickering.	<ul style="list-style-type: none"> • Please check if the camera is facing directly into sunlight or fluorescent light. • Please check if an auto iris lens is being used. • Please check the connection of the lens connector cable.
L/L mode isn't able to be selected.	<ul style="list-style-type: none"> • Have you connected your camera to DC power source? Connect it to AC power source.
SENS-UP function is not working.	<ul style="list-style-type: none"> • Please check if the AGC menu is set to the OFF position. • Please check if the SHUTTER menu is set to MANUAL mode. • Please check the limit of SENS-UP AUTO mode.

Specifications



Item	SDC-313BNA	SDC-313BPD	
POWER	AC 24V / 3.5W	DC12V/2.5W	
C C D	Total Pixels	811(H) x 508(V)	795(H) x 596(V)
	Effective Pixels	768(H) x 494(V)	792(H) x 582(V)
	Sensor	1/3 inch IT CCD	
S Y n c	Scanning System	2:1 Interlace	
	Synchronization	Internal / Line Lock 0-359° (Adjustable)	Internal fixed
	Frequency	Horizontal: 15.734 KHz / Vertical: 59.94Hz	Horizontal: 15.625 KHz/Vertical : 50.00 Hz
E L E C T R I C A L	Resolution	More than 530 TV Lines	
	Video Output	1.0Vp-p/75Ω (Video 0.714Vp-p Sync 0.286Vp-p)	1.0Vp-p/75Ω (Video 0.7 Vp-p Sync 0.3 Vp-p)
	SN (Y signal)	50 dB (AGC Off / Weight ON)	
	Min. Illumination	0.3Lux / F1.2, 0.002Lux / F1.2(Sens-upX128)	
	Backlight Compensation	LOW / MIDDLE / HIGH / OFF Selectable	
	Gain Control	LOW / MIDDLE / HIGH / OFF Selectable	
	White Balance	ATW(NORMAL MODE:1800°K-8000°K SPECIAL MODE:1800°K-10,500°K) /AWC/MANUAL	
	Electronic shutter speed	AUTO : (1/60 - 1/120,000sec) / MANUAL : (X128 - X2,150 - 1/120K) / Flickerless	AUTO : (1/50 - 1/120,000sec) / MANUAL : (X128 - X2,150 - 1/120K) / Flickerless
	Sens-up	AUTO/OFF (selectable limit X2 -X128)	
	O.S.D	Built-in	
	Motion Detection	ON/OFF(4 Programmable Zone)	
	SSNR	LOW/MIDDLE/HIGH/OFF Selectable (Noise Reduction)	
	MIRROR	ON / OFF	
	Privacy Function	ON/OFF(4 Programmable Zone)	
	Sharpness	ON/OFF(Level Adjustable)	
	IRIS Control	DC / Video	
Dimension	58(W) X 52(H) X 121(D)mm		
Operating temperature	-10°C ~ +50°C		
Operating Humidity	30% ~ 80% RH		
Weight	340g	310g	

DECLARATION OF CONFORMITY

Application of Council Directive(s)	89 / 336 / EEC
Manufacturer's Name	SAMSUNG TECHWIN CO., LTD
Manufacturer's Address	SAMSUNG TECHWIN CO., LTD 42, SUNGJU-DONG CHANGWON-CITY, KYUNGNAM, KOREA, 641-120
European Representative Name	
European Representative Address	
Equipment Type/Environment	CCTV Camera
Model Name	SDC-313BPD
Beginning Serial NO.	S6100001
Year of Manufacture	2006. 10. 01
Conformance to	EN 50081-1 : 1992 EMC-Directive 89/336 EEC and 92/31/EEC EN 50130-4 : 1996

We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

Manufacturer	SAMSUNG TECHWIN CO., LTD	Legal Representative in Europe
Signature	<i>Young Taek, SON</i>	Signature
Full Name	YOUNG TAEK SON	Full Name
Position	QUALITY CONTROL MANAGER	Position
Place	CHANGWON, KOREA	Place
Date	2006.10. 01	Date